



## Multilevel Precedence and Preemption

---

The Multilevel Precedence and Preemption (MLPP) service allows properly validated users to place priority calls. If necessary, users can preempt lower priority phone calls.

Precedence designates the priority level that is associated with a call. Preemption designates the process of terminating lower precedence calls that are currently using the target device, so a call of higher precedence can be extended to or through the device.

An authenticated user can preempt calls either to targeted stations or through fully subscribed time-division-multiplexing (TDM) trunks. This capability assures high-ranking personnel of communication to critical organizations and personnel during network stress situations, such as a national emergency or degraded network situations.

This chapter covers the following topics:

- [Introducing MLPP, page 13-1](#)
- [Interactions and Restrictions, page 13-26](#)
- [Installing and Activating MLPP, page 13-28](#)
- [MLPP Configuration Checklist, page 13-28](#)
- [Setting the Enterprise Parameters for MLPP, page 13-29](#)
- [Related Topics, page 13-30](#)

### Introducing MLPP

The Multilevel Precedence and Preemption (MLPP) service allows placement of priority calls. Properly validated users can preempt lower priority phone calls with higher priority calls. An authenticated user can preempt calls either to targeted stations or through fully subscribed TDM trunks. This capability assures high-ranking personnel of communication to critical organizations and personnel during network stress situations, such as a national emergency or degraded network situations.

The following topics describe the MLPP service:

- [MLPP Terminology, page 13-2](#)
- [Precedence, page 13-3](#)
- [Executive Override Precedence Level, page 13-3](#)
- [Preemption, page 13-6](#)
- [Domain, page 13-6](#)
- [Location-Based MLPP, page 13-6](#)

- [MLPP Over Intercluster Trunks, page 13-7](#)
- [MLPP Precedence Patterns, page 13-7](#)
- [MLPP Indication Enabled, page 13-7](#)
- [Precedence Call Setup, page 13-8](#)
- [Alternate Party Diversion, page 13-9](#)
- [MLPP Preemption Enabled, page 13-10](#)
- [Preemption Details, page 13-11](#)
- [MLPP Announcements, page 13-16](#)
- [MLPP Numbering Plan Access Control for Precedence Patterns, page 13-19](#)
- [MLPP Trunk Selection, page 13-21](#)
- [MLPP Hierarchical Configuration, page 13-23](#)
- [Service Parameter Special Trace Configuration, page 13-23](#)
- [CDR Recording for Precedence Calls, page 13-24](#)
- [Line Feature Interaction, page 13-24](#)
- [Call Preservation, page 13-26](#)
- [Automated Alternate Routing, page 13-26](#)
- [MGCP and PRI Protocol, page 13-26](#)
- [Secure Endpoints and Secure Communications, page 13-26](#)

## MLPP Terminology

The following terms apply to the MLPP service:

- **Call**—A voice, video, or data connection between two or more users or network entities that is achieved by dialing digits or otherwise routing to a destination according to a predefined dialing plan.
- **Precedence**—Priority level that is associated with a call.
- **Preemption**—Process that terminates existing calls of lower precedence and extends a call of higher precedence to or through that target device.
- **Precedence call**—A call with precedence level that is higher than the lowest level of precedence.
- **MLPP call**—A call that has a precedence level established and is either being set up (that is, before alerting) or is set up.
- **Active call**—A call that has the connection established and the calling and called parties are active on the call.
- **MLPP domain ID**—Specifies the collection of devices and resources that are associated with an MLPP subscriber. When an MLPP subscriber that belongs to a particular domain places a precedence call to another MLPP subscriber that belongs to the same domain, MLPP service can preempt the existing call that the called MLPP subscriber is on for a higher precedence call. MLPP service availability does not go across different domains.
- **MLPP Indication Enabled device**—In Cisco CallManager, a device for which the device and Cisco CallManager support precedence and preemption signaling procedures in the device control protocol and that is configured as such in the Cisco CallManager system.

- **MLPP Preemption Enabled device**—In Cisco CallManager, a device for which the device and Cisco CallManager support preemption signaling procedures in the device control protocol and that is configured as such in the Cisco CallManager system. Cisco CallManager can initiate preemption on this interface.

## Precedence

Precedence indicates the priority level that is associated with a call. Precedence assignment represents an ad hoc action in that the user may choose to apply or not to apply a precedence level to a call attempt. MLPP precedence does not relate to call admission control or enhanced emergency services (E911). Dedicated dial patterns in Cisco CallManager administration allow users to initiate an MLPP request. Configuration of the calling search space(s) (CSS) that is associated with the calling party (device, line, and so forth) controls a calling party's ability to dial a precedence pattern to attempt to originate a precedence call.

The Defense Switched Network (DSN) and the Defense Red Switched Network (DRSN) designate the target system for initial MLPP deployment. You generally can apply mechanisms for assigning precedence levels to calls, however, in Cisco CallManager Administration to any dial plan by defining precedence dial patterns and calling search spaces that allow or restrict access to these patterns. In the DSN, a dial plan gets defined such that a precedence call is requested by using the string prefix NP, where P specifies the requested precedence level and N specifies the preconfigured MLPP access digit. Precedence priorities are as follows.

- Executive Override
- Flash Override
- Flash
- Immediate
- Priority
- Routine

Without specific invocation of precedence, the system processes a call by using normal call processing and call forwarding.

When a user profile is assigned to a phone, either as a default assignment or through extension mobility, the phone inherits the configuration of the assigned user, including any CSS that is associated with the user. The phone CSS can, however, override the user profile. Cisco CallManager assigns the precedence level that is associated with the dialed pattern to the call when a pattern match occurs. The system sets the call request as a precedence call with the assigned precedence level.

When a precedence call is offered to a destination, Cisco CallManager provides precedence indications to the source and destination of a precedence call, respectively, if either is MLPP Indication Enabled. For the source, this indication comprises a precedence ringback tone and display of the precedence level/domain of the call, if the device supports display. For the destination, the indication comprises a precedence ringer and display of the precedence level/domain of the call, if the device supports display.


## Executive Override Precedence Level

The highest precedence level specifies the Executive Override precedence level. When the Executive Override precedence level preempts a lower precedence call, the Executive Override call can change its precedence level to Flash Override (next highest level), so a subsequent Executive Override call can preempt the first precedence call.

Preempting an Executive Override precedence call requires that the Executive Override Call Preemptable service parameter be set to True. If the service parameter is set to False, an Executive Override precedence call keeps its precedence level and cannot be preempted.

Figure 13-1 shows an example of two Executive Override precedence calls, one that can be preempted, and one that cannot be preempted.

**Figure 13-1 Executive Override Precedence Calls Example**

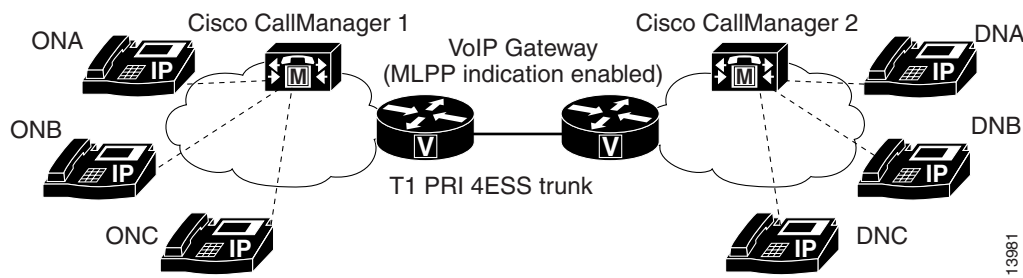

In the example, in Cisco CallManager cluster 1, the Executive Override Call Preemptable service parameter specifies False, whereas in Cisco CallManager cluster 2, the Executive Override Call Preemptable service parameter specifies True.


In the example, ONA makes an Executive Override precedence call to DNA from cluster 1 to cluster 2 through the T1 PRI 4ESS trunk. DNA answers, and the call connects.

In cluster 1, if ONB tries to call ONA by placing an Executive Override precedence call, ONB receives a Blocked Precedence Announcement (BPA) because Executive Override calls cannot be preempted in cluster 1. If ONB calls DNA by placing an Executive Override precedence call, the call between ONA and DNA gets preempted because Executive Override calls can be preempted in cluster 2. Likewise, if DNB calls DNA by placing an Executive Override precedence call, the subsequent Executive Override precedence call preempts the call between ONA and DNA.

## Executive Override Precedence Call Setup

Figure 13-2 shows an example of the events that take place when an Executive Override precedence call gets placed.

**Figure 13-2 Executive Override Precedence Call Setup**

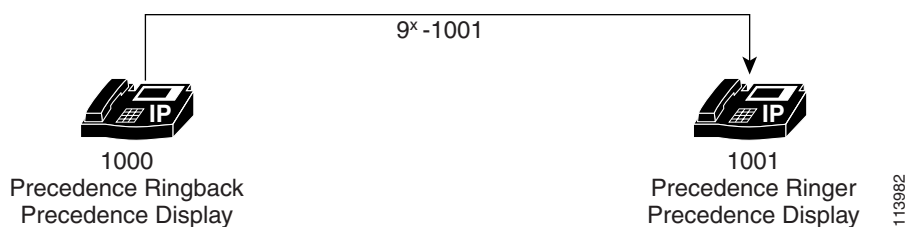

In the example, phone 1000 goes offhook and dials 9\*1001. (Route pattern 9\*XXXX setting specifies Executive Override.)

For the source, if this precedence call succeeds, Cisco CallManager signals Cisco IP Phone to play a ringback tone to the user. If Cisco IP Phone 1000 is MLPP Indication Enabled, precedence ringback tone plays. Otherwise, normal ringback tone plays.

If the precedence call cannot connect, a Blocked Precedence Announcement (BPA) plays if Cisco IP Phone 1000 is MLPP Indication Enabled. Otherwise, a normal reorder tone plays.


For the destination, if the Executive Override precedence call gets offered to Cisco IP Phone 1001 successfully, Cisco CallManager signals the destination to generate an audible ringer at the device. If Cisco IP Phone 1001 is MLPP Indication Enabled, a precedence ring plays. Otherwise, a normal ring plays.

Also, Cisco IP Phone 1001 displays precedence information (such as the Flash Override precedence call icon) if phone 1001 is MLPP Indication Enabled. Otherwise, no precedence information displays.

## Executive Override Precedence Calls Across the PRI 4ESS Interface

Figure 13-3 shows an example of an Executive Override precedence call across the PRI 4ESS interface.

**Figure 13-3** Executive Override Precedence Call Across the PRI 4ESS Interface

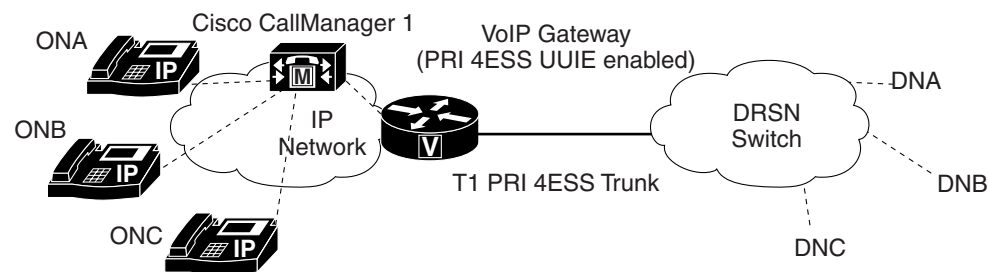

DRSN =Defense Red Switch Network

113983

Cisco CallManager processes Executive Override precedence calls across the PRI 4ESS interface using the same method that it uses to process other precedence calls, except that the precedence level passes through PRI 4ESS UUIE.

The precedence information through UUIE gets passed only when UUIE Status on the service parameter window is True and Passing Precedence Through UUIE gets selected on the Gateway Configuration window.

## PRI 4ES UUIE-Based MLPP Interface to DRSN

A previous release of Cisco CallManager offered MLPP for PRI interface that was developed according to the ANSI.619a specification to connect with Defense Switched Network (DSN) switches. Defense Red Switch Network (DRSN) switches do not support ANSI T1.619a-based MLPP but do support MLPP over the PRI 4ESS interface by using the UUIE. Cisco CallManager now supports passing the MLPP information through the PRI 4ESS UUIE field.

## Preemption

The preemption process terminates lower precedence calls that are currently using the target device, so a call of higher precedence can be extended to or through the device. Preemption includes the notification and acknowledgement of preempted users and the reservation of shared resources immediately after preemption and prior to call termination. Preemption can take one of the following forms, depending on which method is invoked:

- **User Access Channel Preemption**—This type of preemption applies to phones and other end-user devices. In this type of preemption, if a called user access channel needs to be preempted, both the called party and the parties to which it is connected receive preemption notification, and the existing MLPP call gets cleared immediately. The called party must acknowledge the preemption before the higher precedence call completes. The called party then gets offered the new MLPP call. If the called party does not acknowledge the preemption, the higher precedence call does proceed after 30 seconds.
- **Common Network Facility Preemption**—This type of preemption applies to trunks. This type of preemption means that the network resource is busy with calls, some of which are of lower precedence than the call that the calling party requests. One or more of these lower precedence calls gets preempted to complete the higher precedence call.

**Note**

Ensure that all devices that a call uses to preempt an existing call are preemption enabled. Because it is not sufficient for the calling and called devices (phone) to be preemption enable, ensure that the gateways that are used for the call also are preemption enabled.

## Domain

The MLPP domain subscription of the originating user determines the domain of the call and its connections. Only higher precedence calls in one domain can preempt connections that calls in the same domain are using.

Administrators enter domains in Cisco CallManager Administration as hexadecimal values of zero or greater.

**Additional Information**

See the [“Related Topics”](#) section on page 13-30.

## Location-Based MLPP

Cisco CallManager supports MLPP on Skinny Client Control Protocol phones and TDM (PRI/CAS) trunks. Cisco CallManager also supports MLPP on wide-area network (WAN) links. Location-based call admission control (CAC) manages WAN link bandwidth in Cisco CallManager. Enhanced locations take into account the precedence level of calls and preempt calls of lower precedence when necessary to accommodate higher precedence calls.

Enhancing locations mean that, when a precedence call arrives and not enough bandwidth can be found to connect the call to the destination location, Cisco CallManager finds the call or calls with the lowest precedence level and preempts the call(s) to make sufficient bandwidth available for a higher precedence call. If the bandwidth requirement still cannot be satisfied after going through the preemption procedure, the newly placed call fails.

**Additional Information**

See the [“Related Topics”](#) section on page 13-30.

## MLPP Over Intercluster Trunks

Cisco CallManager supports MLPP precedence and preemption over intercluster trunks. Dialed digits communicate the precedence level. The location call admission control mechanism controls preemption. Announcements and MLPP cause codes also become available across intercluster trunks.

## MLPP Precedence Patterns

To set up MLPP precedence patterns, access the Translation Pattern Configuration window in Cisco CallManager Administration where the following MLPP precedence patterns are available:

- Executive override (highest)
- Flash override
- Flash
- Immediate
- Priority
- Routine (lowest)
- Default (means precedence level does not get changed)

Refer to the [Translation Pattern Configuration](#) section in the *Cisco CallManager Administration Guide* for details.

## MLPP Indication Enabled

MLPP indication-enabled devices include the following characteristics:

- MLPP indication-enabled devices can play preemption tones.
- MLPP indication-enabled devices can receive MLPP preemption announcements that the announcement server generates.
- MLPP indication-enabled devices can receive preemption.

To set up devices to enable MLPP indication, use the configuration window for each respective device. In the MLPP Indication field of each device, set the value to *On*.

Refer to the following topics for details of setting MLPP indication for devices:

- [Device Pool Configuration](#), *Cisco CallManager Administration Guide*
- [Gateway Configuration](#), *Cisco CallManager Administration Guide*
- [Cisco IP Phone Configuration](#), *Cisco CallManager Administration Guide*
- [Device Profile Configuration](#), *Cisco CallManager Administration Guide*
- [Default Device Profile Configuration](#), *Cisco CallManager Administration Guide*

## Precedence Call Setup

The following sequence of events takes place during setup of a precedence call:

1. User goes off hook and dials a precedence call. The call pattern specifies NP-XXX, where N specifies the precedence access digit and P specifies the precedence level for the call.
2. The calling party receives the special precedence ringback and a precedence display while the call is processing.
3. The called party receives the special precedence ringer and a precedence display that indicates the precedence call.

### Example


Party 1000 makes a precedence call to party 1001. To do so, party 1000 dials the precedence call pattern, such as 90-1001.

While the call processes, the calling party receives precedence ringback and precedence display on the calling Cisco IP Phone. After acknowledging the precedence call, the called party receives a precedence ringer (receives a special ring) and a precedence display on the called Cisco IP Phone.

### Precedence Call Setup Across Intercluster Trunks

Figure 13-4 shows an example of a configuration that can be used to set up precedence calls over intercluster trunks. Because no precedence information element support exists over intercluster trunks, transmission of extra digits carries the precedence information. The dial plan must be set up appropriately on both clusters to accomplish transmission of the precedence information.

**Figure 13-4 Precedence Call Setup Across Intercluster Trunks Example**

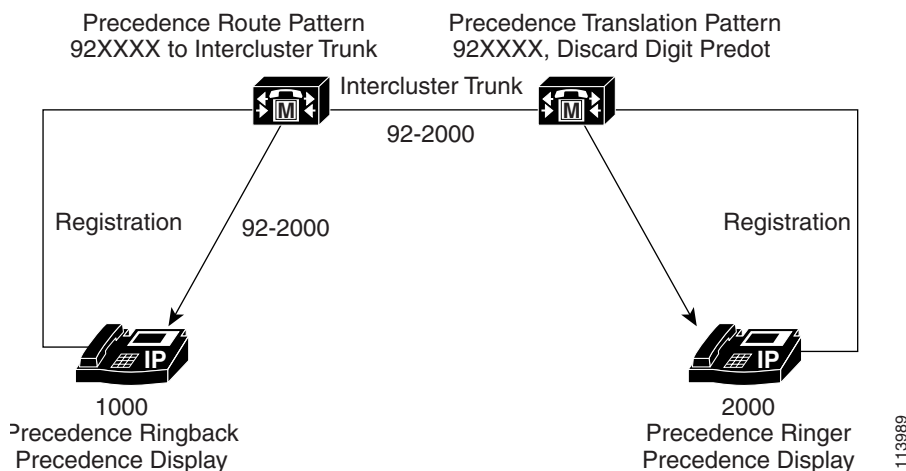

In this example, 1000 dials 92-2000, which matches the appropriate precedence patterns on both clusters and sets up the precedence call.

## Alternate Party Diversion

Alternate Party Diversion (APD) comprises a special type of call forwarding. If users are configured for APD, APD takes place when a precedence call is directed to a directory number (DN) that is busy or does not answer.

MLPP APD applies only to precedence calls. An MLPP APD call disables the DN Call Forward No Answer setting for precedence calls.


Precedence calls do not normally forward to voice-messaging system, as controlled by the value of the Use Standard VM Handling For Precedence Calls enterprise parameter. Refer to the [“Setting the Enterprise Parameters for MLPP”](#) section on page 13-29 for details.

To set up APD, the administrator configures the Multilevel Precedence and Preemption Alternate Party Settings on the Directory Number Configuration window of the DN that is the target of an MLPP precedence call. Refer to the [Cisco IP Phone Configuration](#) section of the *Cisco CallManager Administration Guide* for details.

### Example

Figure 13-5 illustrates the Alternate Party Diversion that takes place when a called party receives a precedence call and the party is configured for Alternate Party Diversion.

**Figure 13-5** Alternate Party Diversion Example

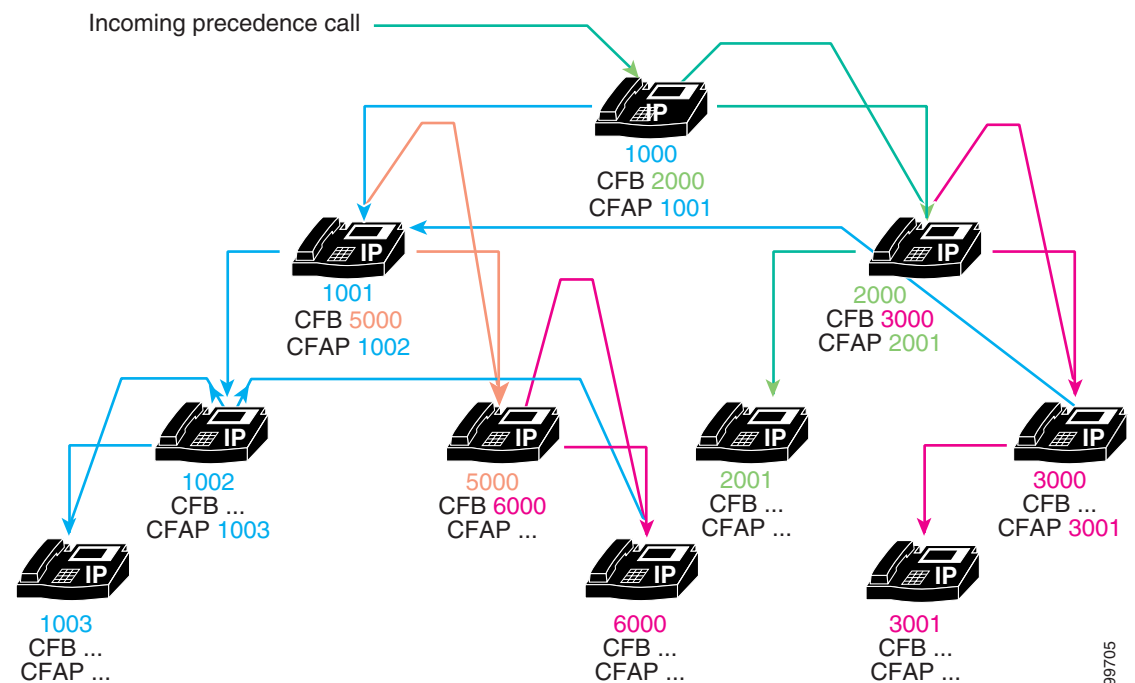

In the example, a calling party placed a precedence call to party 1000. Called party 1000 has a Call Forward Busy (CFB) setting of 2000 and a Call Forward Alternate Party (CFAP) setting of 1001. The figure shows the CFB and CFAP settings for all other parties in this example.

When 1000 receives a precedence call but is busy, the call routes to party 2000. If party 2000 is also busy, the call routes to party 3000. If neither party 2000 nor party 3000 answers the call, however, the call routes to party 1001. That is, the call routes to the alternate party that is designated for the originally called party, *not* to the alternate parties that are designated for the Call Forward Busy parties that are associated with the originally called party.

Likewise, if party 1001 is busy and does not answer the call, the call forwards to party 5000. If party 5000 is busy, the call forwards to party 6000. If neither party 5000 nor party 6000 answers the call, however, the call forwards to party 1001's alternate party destination, which is party 1002. If party 1002 is busy or does not answer, the call forwards to party 1003, which is party 1002's alternate party designation.

## MLPP Preemption Enabled

Enable MLPP preemption by explicitly configuring preemption-capable devices for preemption.

### Receiving Preemption

A device that is preemption disabled (by setting the MLPP Preemption value to *Disabled*) can still receive precedence calls in an MLPP network, but the device itself does not get preempted. The preemption-disabled device can be connected to a call that gets preempted (at another device), in which case, the device receives preemption.

### Preemption Enabled

Enable devices for preemption by setting the device MLPP Preemption value to either *Forceful* or *Default*. If the device MLPP Preemption value is set to *Forceful*, the system can preempt the device at its own interface. That is, the device can get preempted when a precedence call contends for the device resources.

If the device MLPP Preemption setting is *Default*, the device inherits its MLPP Preemption setting from its device pool. If the device's device pool MLPP Preemption setting is *Forceful*, or if the device pool MLPP Preemption setting is also *Default* but the MLPP Preemption Setting enterprise parameter value is *Forceful Preemption*, the device inherits preemption enabling.

To set up devices to enable MLPP preemption, use the configuration window for each respective device. In the MLPP Preemption field of each device, set the value to *Forceful* or *Default*.

Refer to the following topics for details of setting MLPP preemption for devices:

- [Device Pool Configuration](#), *Cisco CallManager Administration Guide*
- [Gateway Configuration](#), *Cisco CallManager Administration Guide*
- [Cisco IP Phone Configuration](#), *Cisco CallManager Administration Guide*
- [Device Profile Configuration](#), *Cisco CallManager Administration Guide*
- [Default Device Profile Configuration](#), *Cisco CallManager Administration Guide*

## Preemption Details

The following types of preemption exist:

- User Access Preemption
- Common Network Facility Preemption.
- Location-based Preemption

### User Access Preemption


User access preemption takes place when a user places a precedence call to a user that is already active on a lower level precedence call. Both calls are in the same MLPP domain. You can use this type of preemption for MLPP Indication Enabled phones that the Cisco Skinny Client Control Protocol controls in the Cisco CallManager MLPP system. Preemption occurs if a precedence call request is validated and if the requested precedence of the call is greater than the precedence of an existing call that is connected at the destination MLPP Preemption Enabled phone. Call processing uses a preemption tone to notify the connected parties of the preemption and releases the active call. When the called party acknowledges the preemption by hanging up, the called party gets offered the new MLPP call.

To understand the sequence of steps that takes place during user access preemption, see the following example.

#### Example

Figure 13-6 illustrates an example of user access preemption.

**Figure 13-6 User Access Preemption Example**

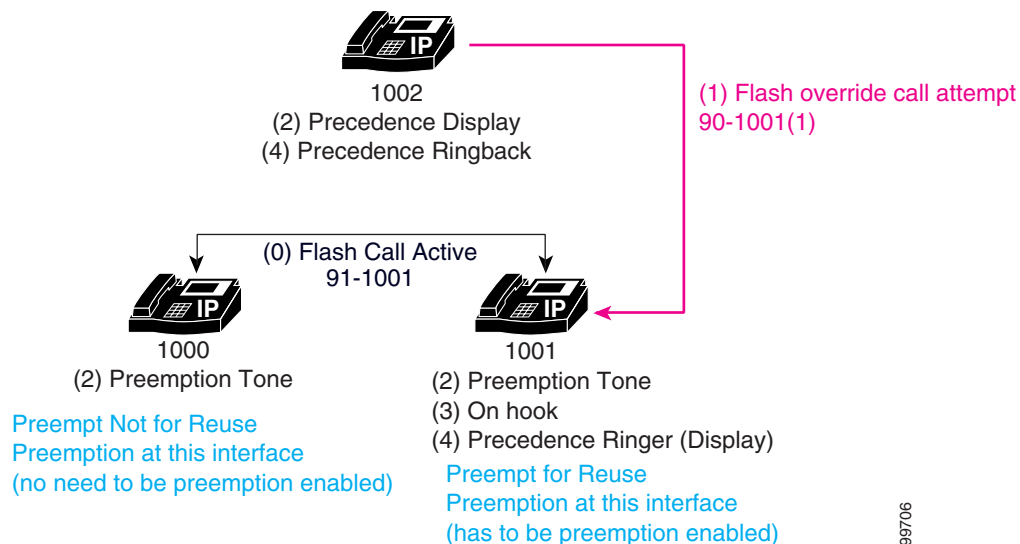

In the example of user access preemption, the following sequence of events takes place:

1. User 1000 places a precedence call of precedence level flash override to user 1001, who answers the call. In this example, user 1000 dials 90-1001 to place the precedence call.
2. User 1002 places a precedence call to user 1001 by dialing 9\*-1001. This call is of precedence level Executive Override which represents a higher precedence call than the active precedence call.

3. While the call is directed to user 1001, the calling party receives precedence display (that is, flash override display, not executive override display), and the parties involved in the existing lower precedence call both receive preemption tones.
4. To complete preemption, the parties involved in the lower precedence call (users 1000 and 1001) hang up.
5. The higher level precedence call gets offered to user 1001, who receives a precedence ringer. The calling party, user 1002, receives precedence ringback.

Distinct preemption types take place in this instance. For the party that is not the destination of the higher precedence call, Preemption Not for Reuse takes place. Because preemption is not taking place at this interface, this device does not need to be preemption enabled. For the party that is the destination of the higher precedence call, Preemption for Reuse takes place. Because preemption does take place at this interface, ensure that this device is preemption enabled.

## User Access Channel Nonpreemptable

You can configure an end-user device as MLPP Indication Enabled but not MLPP Preemption Enabled. In this case, a phone that can generate MLPP indications (using special preemption tones and ringers) does not have preemption procedures supported in its device control protocol in Cisco CallManager. The administrator can also disable preemption procedures for a phone even though Cisco CallManager Administration supports the procedures.

Historically, user access devices (phones) have limited or no mechanisms for handling multiple, simultaneous calls. Even with the Call Waiting feature, many phones and associated switches do not have a mechanism to allow the user to manage multiple calls simultaneously on the same line.

Cisco CallManager Administration effectively enhances the Call Waiting feature to provide this capability for users of Cisco IP Phones (model 794X and 796X series). These Cisco IP Phones include a user interface that gives the user adequate control of multiple, simultaneous calls when interfacing with the Cisco CallManager system. This enhanced functionality allows the Call Waiting feature to be applied to all precedence calls that are directed to these types of phones, even though the user may already be managing other calls. When the user receives a precedence call, the user at a destination phone can decide what to do with any existing calls instead of merely releasing the lower precedence call. For users of these devices, the Cisco CallManager administrator can configure devices as not MLPP Preemption Enabled to take advantage of this function in Cisco CallManager.

## Common Network Facility Preemption

Common network facility preemption applies to network resources, such as trunks, in the MLPP system. When a common network facility gets preempted, all existing parties receive notification of the preemption, and the existing connection immediately gets disconnected. The new call gets set up by using the preempted facility in the normal manner without any special notification to the new called party. PRI and T1-CAS trunks on targeted MGCP gateway platforms support this type of preemption in Cisco CallManager.


Preemption occurs if a precedence call request is validated and if the requested precedence of the call is greater than the precedence of an existing call through the destination MLPP Preemption Enabled trunk and the trunk is completely busy (that is, cannot handle any more calls). Call processing identifies a call with lower precedence, notifies the connected parties of the preemption for the PRI trunk interface, reserves the channel for subsequent use, and drops the selected lower precedence call. The system uses the reserved channel to establish the connection through the gateway for the precedence call that caused preemption.

For the sequence of steps that takes place during common network facility preemption, see the following examples.

### Example 1

Figure 13-7 illustrates an example of common network facility preemption.

**Figure 13-7 Common Network Facility Preemption Example**

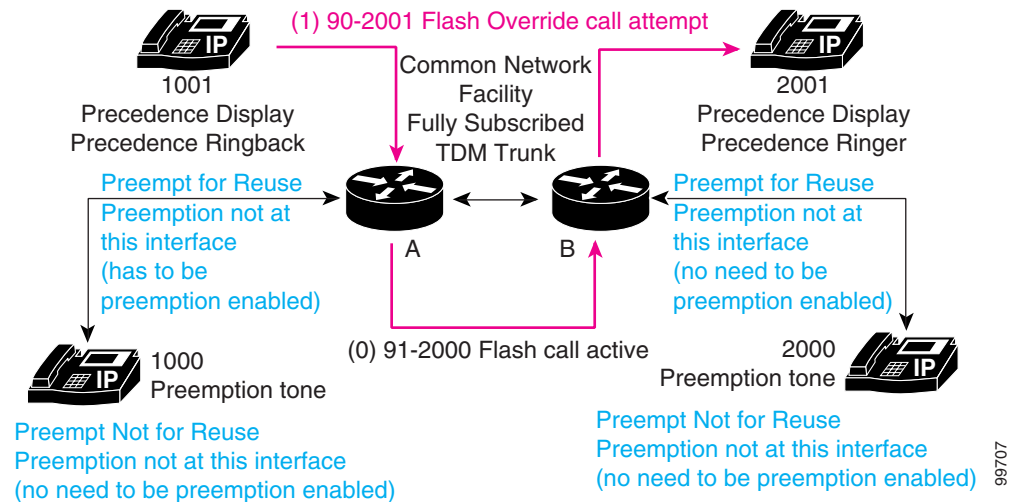

In the example of common network facility preemption, the following sequence of events takes place:

1. User 1000 places a precedence call of precedence level Flash Override to user 2000, who answers the call. In this example, user 1000 dials 90-2000 to place the precedence call. The flash call of precedence level Flash Override specifies active.

The call uses a common network facility where the two gateways define a fully subscribed TDM trunk.

2. User 1001 next places a higher precedence (executive override) call to user 2001 by dialing 9\*-2001. (Assume that the flash call represents the lowest precedence call over gateway A, and users 1000 and 1001 reside in the same MLPP domain.)

Preemption occurs at gateway A, which is preempted for reuse. Because preemption occurs at this interface, you must ensure that this device is preemption enabled. Gateway B also gets preempted for reuse, but the preemption does not occur at this interface, so this device does not need to be preemption enabled.


Users 1000 and 2000 both receive preemption tones. Because both devices are not preempted for reuse and preemption does not occur at these interfaces, you do not need to ensure that these devices are preemption enabled for the preemption to occur.

In this example, almost all events occur instantly. Parties do not need to hang up for common network facility preemption to occur.

### Example 2

Figure 13-8 illustrates an example of common network facility preemption with the retry timer  $T_{rr}$ . The retry timer  $T_{rr}$  provides a mechanism, so if preemption is not successful on one channel, preemption gets retried on another channel. This timer applies only to TDM trunks.

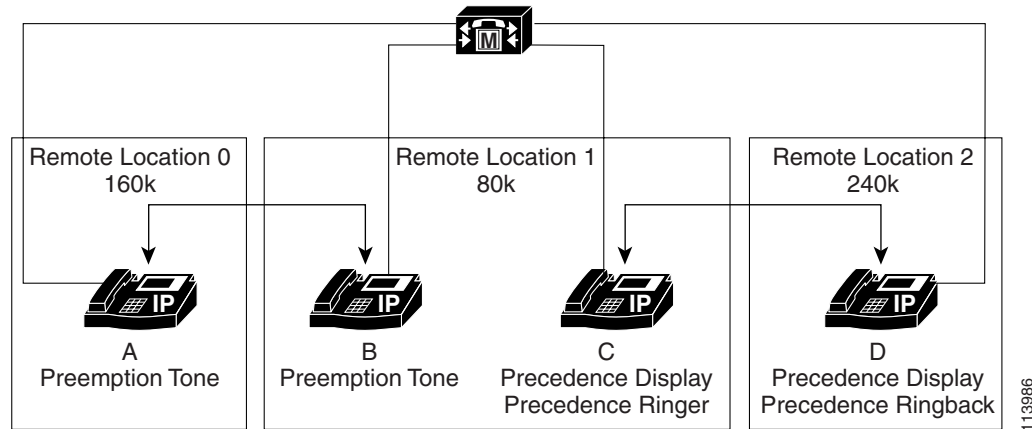

**Figure 13-9** Location-Based Preemption in Different Devices

This example illustrates the location-based preemption scenario. In the example, three locations exist:


- Remote location 0 (RL0) with phone A and 160K of available bandwidth
- Remote location 1 (RL1) with phones B and C and 80K of available bandwidth
- Remote location 2 (RL2) with phone D and 240K of available bandwidth

The following sequence of events takes place:

1. A places a call to B with Priority precedence level, and the call becomes active. The available bandwidth specifies 80K in RL0, 0K in RL1, and 240K in RL2.
2. D calls C with Immediate precedence level. D's call preempts the call between A and B because RL1 is out of bandwidth and D's call has higher precedence.
3. The call between D and C completes. The available bandwidth specifies 160K in RL0, 0K in RL1, and 160K in RL2.

### Example 2

In the example that follows, the new call and the location preempted call take place in the same device. See [Figure 13-10](#) for an example of this type of location-based preemption.

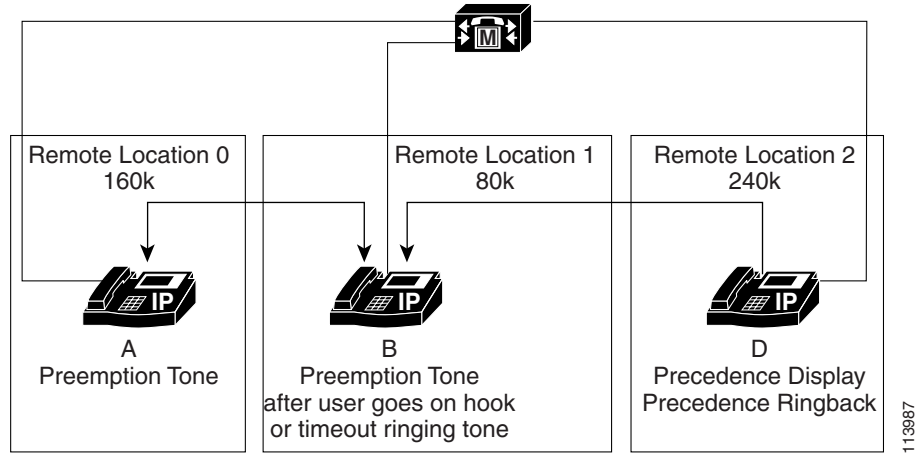**Figure 13-10** Location-Based Preemption in the Same Device

This example illustrates the location-based preemption scenario. In the example, three locations exist:

- Remote location 0 (RL0) with phone A and 160K of available bandwidth
- Remote location 1 (RL1) with phone B and 80K of available bandwidth
- Remote location 2 (RL2) with phone D and 240K of available bandwidth

The following sequence of events takes place:

1. A places a call to B with Priority precedence level, and the call becomes active. The available bandwidth specifies 80K in RL0, 0K in RL1, and 240K in RL2.
2. D calls B with Immediate precedence level. D's call preempts the call between A and B because RL1 is out of bandwidth and D's call has higher precedence.
3. B receives the preemption tone first, and the End call softkey displays.
4. B presses the End softkey, hangs up, or waits for timeout. The call from D to B gets offered to B. When the call from D to B completes, the available bandwidth specifies 160K in RL0, 0K in RL1, and 160K in RL2.

## MLPP Announcements

Users who unsuccessfully attempt to place MLPP precedence calls receive various announcements that detail the reasons why a precedence call was blocked.

The following sections discuss specific MLPP announcements:

- [Unauthorized Precedence Announcement, page 13-17](#)
- [Blocked Precedence Announcement, page 13-18](#)
- [Busy Station Not Equipped for Preemption, page 13-18](#)
- [Announcements Over Intercluster Trunks, page 13-18](#)

The [Supported Tones and Announcements](#) topic in the [Annunciator](#) section of the *Cisco CallManager System Guide* discusses MLPP announcements. Refer to the [Route Pattern Configuration](#) and [Translation Pattern Configuration](#) sections in the *Cisco CallManager Administration Guide* for details of configuring the Precedence Level Exceeded condition that generates the Unauthorized Precedence Announcement.

#### Additional Information

See the [“Related Topics”](#) section on page 13-30.

## Unauthorized Precedence Announcement

Users receive an unauthorized precedence announcement when they attempt to make a call with a higher level of precedence than the highest precedence level that is authorized for their line. A user receives an unauthorized precedence announcement when the user dials a precedence call by using a calling pattern for which the user does not have authorization.


Cisco CallManager recognizes the Precedence Level Exceeded condition only if specific patterns or partitions are configured to block a call attempt that matches the pattern and that indicates the reason that the call is blocked.

To assign authorized calling patterns, access the Route Pattern/Hunt Pilot Configuration and the Translation Pattern Configuration windows in Cisco CallManager Administration. To configure the MLPP Precedence Level Exceeded condition, use the Route Option field of the Route Pattern/Hunt Pilot Configuration and Translation Pattern Configuration windows and choose the Block this pattern option in Cisco CallManager Administration. In the drop-down list box, choose *Precedence Level Exceeded*. Refer to the [Route Pattern Configuration](#) and [Translation Pattern Configuration](#) sections of the *Cisco CallManager Administration Guide* for details.

#### Example

[Figure 13-11](#) illustrates an example of a user that receives an unauthorized precedence announcement.

**Figure 13-11** *Unauthorized Precedence Announcement Example*

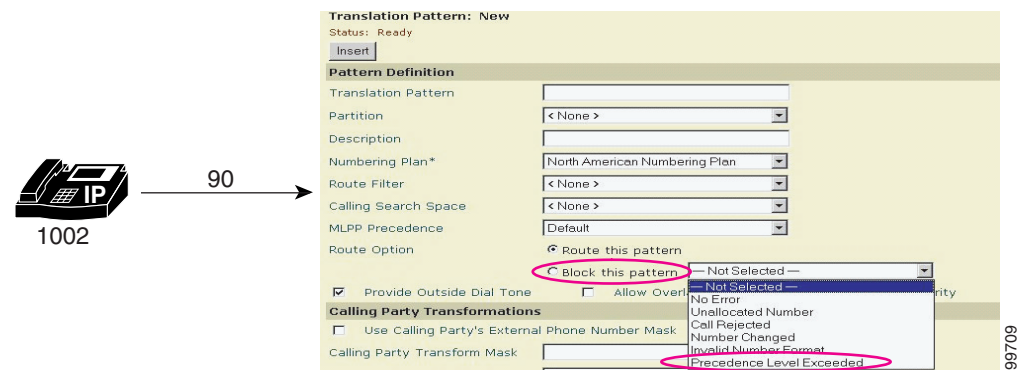

In the example, user 1002 dials 90 to start a precedence call. Nine (9) represents the precedence access digit, and zero (0) specifies the precedence level that the user attempts to use. Because this user is not authorized to make flash override precedence calls (calls of precedence level 0), the user receives an unauthorized precedence announcement.


## Blocked Precedence Announcement

Users receive a blocked precedence announcement if the destination party for the precedence call is off hook, or if the destination party is busy with a precedence call of an equal or higher precedence and the destination party does not have the Call Waiting nor Call Forward features nor a designated party for alternate party diversion (APD), or due to a lack of a common network resource.

### Example

Figure 13-12 provides an example of a blocked precedence announcement.

**Figure 13-12** *Blocked Precedence Announcement Example*

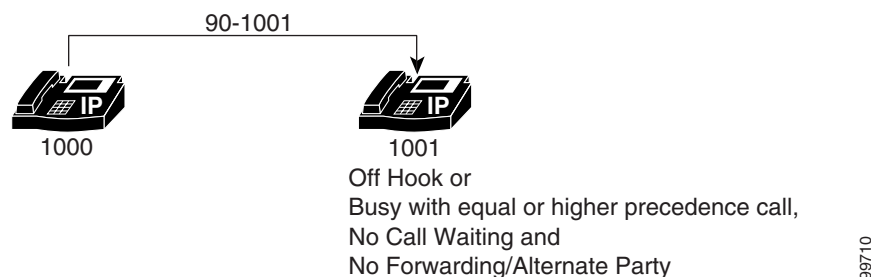


In this example, user 1000 makes a precedence call to user 1001 by dialing 90-1001. Because user 1001 is either off hook or busy with a precedence call of - equal or higher precedence level and user 1001 does not have Call Waiting nor Call Forward nor an alternate party that is designed for alternate party diversion, user 1000 receives a blocked precedence announcement.

## Busy Station Not Equipped for Preemption

Users receive this announcement if the dialed number is nonpreemptable. That is, the dialed number registers as busy and has no call waiting, no call forwarding, and no alternate party designations.

## Announcements Over Intercluster Trunks

Figure 13-13 illustrates an instance of an MLPP announcement that is streamed over an intercluster trunk.

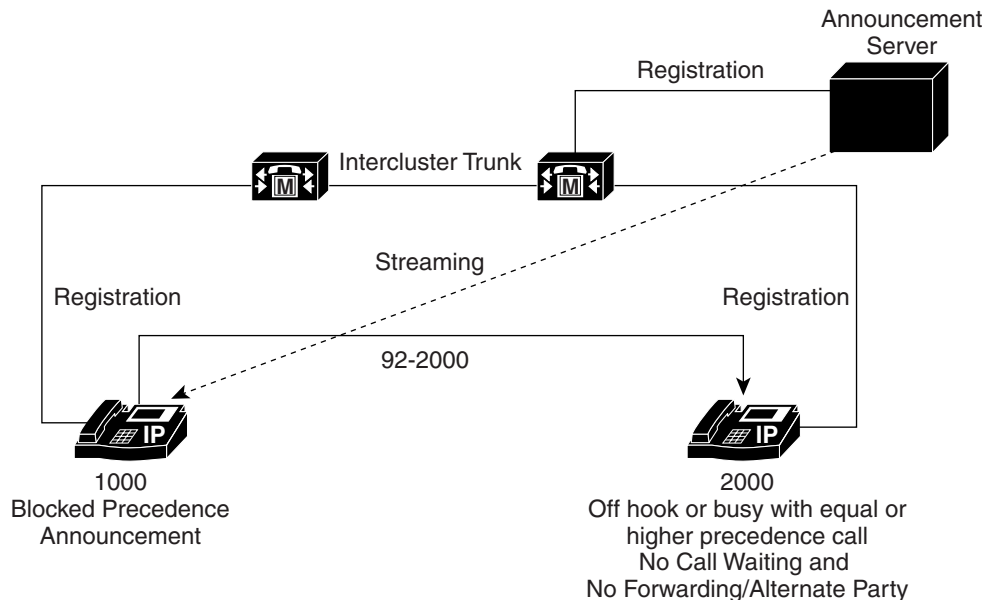**Figure 13-13 MLPP Announcement Over an Intercluster Trunk Example**

In the example, phones 1000 and 2000 reside on two clusters that an intercluster trunk connects. User 2000 does not have features such as calling waiting and call forwarding configured.

The following sequence of events takes place:

1. User 2000 goes off hook and starts to dial. (Status for User 2000 specifies originating busy and not preemptable.)
2. User 1000 then dials a precedence call over the intercluster trunk to user 2000. Because user 2000 is busy and is not preemptable, the call gets rejected.
3. Because user 1000 originated a precedence call, the call receives precedence treatment, and the announcement server on the remote cluster streams the appropriate Blocked Precedence Announcement (BPA) to 1000 with the switch name and the location of the cluster.

## MLPP Numbering Plan Access Control for Precedence Patterns

MLPP uses the calling search spaces and partitions that are defined for users to authenticate and validate MLPP calls and provide access control for precedence patterns.

The maximum precedence of a user gets set at user configuration time. All MLPP-capable station devices get configured as either MLPP-enabled or MLPP-disabled. A device to which a user profile is applied inherits the precedence level of that user with respect to precedence calls that are initiated from that device. A device that has a default user assigned inherits a Routine precedence level for the default user.


Configuration of the calling search space(s) (CSS) that is associated with the calling party controls a user's ability to dial a precedence pattern (that is, to initiate a precedence call). Cisco CallManager does not provide for explicit configuration of an explicit maximum allowed precedence value.

The following example illustrates the differences in access to precedence calls for two users who try to place a priority-level precedence call to a third user.

**Example**

Figure 13-14 provides an example of MLPP numbering plan access control for precedence patterns.

**Figure 13-14 MLPP Numbering Plan Access Control for Precedence Patterns Example**

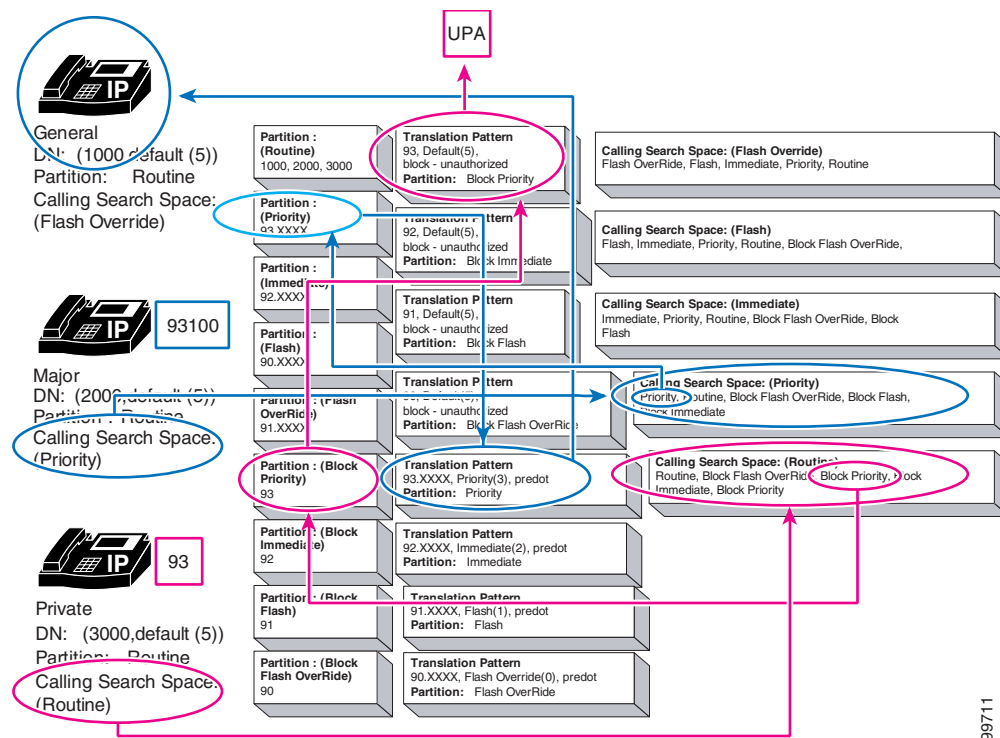

The table defines three users in this illustration:

| User    | Directory Number (DN) | Partition | Calling Search Space (CSS) |
|---------|-----------------------|-----------|----------------------------|
| General | 1000                  | Routine   | Flash Override             |
| Major   | 2000                  | Routine   | Priority                   |
| Private | 3000                  | Routine   | Routine                    |

The example shows the use of partitions and calling search spaces to limit access to precedence calls.

If private 3000 tries to place a precedence call by dialing the precedence pattern 93, the following events take place:

- Call processing searches for private 3000's calling search space, which is the Routine CSS.
- Within private 3000's Routine CSS, call processing finds the Block Priority partition.
- In the Block Priority partition, call processing finds the pattern 93 and goes to translation pattern 93.
- Translation pattern 93 determines that priority calls are blocked for this user (DN), and call processing issues an unauthorized precedence announcement (UPA).

If major 2000 places a precedence call by dialing the digits 931000, the following events take place:

- Call processing searches for major 2000's calling search space, which is the Priority CSS.
- Within major 2000's Priority CSS, call processing finds the Priority partition.

- In the Priority partition, call processing finds the pattern 93.XXXX and goes to translation pattern 93.XXXX.
- Translation pattern 93.XXXX determines that priority calls are authorized for this user (DN). Call processing therefore completes the Priority-level precedence call to user 1000, the general.

## MLPP Trunk Selection

MLPP trunk selection entails hunting for available trunks by using route lists and route groups. In Cisco CallManager Administration, you can configure a route list and associated route group(s) to route calls to several gateways via a single dial pattern to find an available channel. Although a route list has many trunk resources to which the route list can route calls, the individual resources may spread across many gateways.

When no available trunk resource is identified in a collection of gateways (that is, a route list and route group configuration), Cisco CallManager attempts to initiate preemption of a lower level precedence shared resource in the collection. Two methods exist for subsequently searching for a preemptable channel within a route list and route group configuration.

### Method 1

Configure a route list and a separate route group for each available route (trunk interface). Designate one route group as the Direct route group and designate the other route groups as Alternate route groups. Add the Direct Route trunk interface (gateway) as the only member of the Direct route group. Add the Alternate Route gateways to the individual Alternate route groups. Associate the route groups with the route list, configuring the Direct route group as the first route group in the route list, and choose the Top Down distribution algorithm for each route group association.

Using this configuration, the Direct gateway in the Direct route group gets searched for an idle channel first. If no idle channel is found in the Direct gateway, the system initiates preemptive trunk selection for this Direct gateway as follows:

- Call processing chooses the Direct route and offers the call to this gateway device to determine whether the gateway device can initiate preemption.
- If the Direct gateway device rejects the precedence call request (that is, the gateway device cannot initiate preemption), choose the next route group in the route list as the current route. Continue this sequence until an idle channel is found on the current gateway, or until the current gateway device has initiated preemption, or until all gateway devices in the route list and route group collection are searched.

### Method 2

Configure a route list and a single route group. Add trunk interfaces (gateways) to the route group and position the Direct Route gateway as the first gateway in the route group. Associate the route group with the route list and choose the Top Down distribution algorithm. With this configuration, the system searches all gateways in the route group for an idle channel first. If no idle channel is found in any gateway in the route group, preemptive trunk selection begins with the first gateway in the route group (that is, the Direct Route gateway) as follows:

- Call processing chooses a current route from the collection on the basis of the distribution algorithm and offers the call to this gateway device to determine whether the gateway device can initiate preemption.


- If the current gateway device rejects the precedence call request (that is, the gateway device cannot initiate preemption), call processing chooses the next gateway in the collection as the current route and continues this sequence until a gateway device initiates preemption or until all gateway devices in the route list and route group collection have been searched.

### Example

The following example illustrates two methods for finding an available trunk device when an incoming flash-level precedence call seeks an available trunk device.

Figure 13-15 provides an example of MLPP trunk selection using route lists and route groups to hunt for an available trunk device.

**Figure 13-15 MLPP Trunk Selection (Hunting) Example**

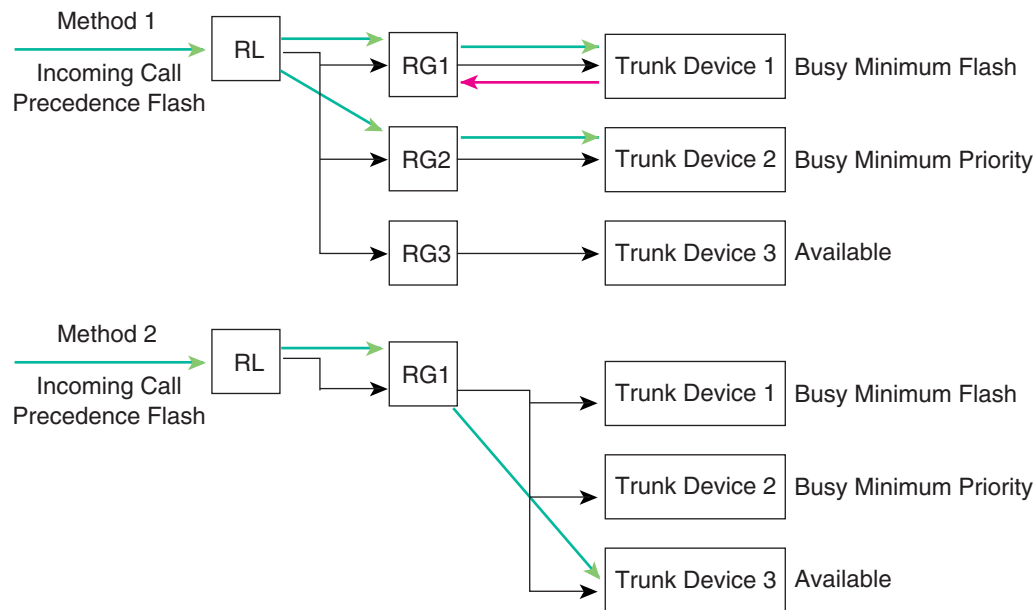

If Trunk Device 3 is also busy in Method 2 configuration, same call flow as Method 1 occurs.

99712

In method 1, the following sequence of events takes place:

1. An incoming flash-level precedence call reaches route list RL and first goes to route group RG1, which directs the call to Trunk Device1, which is busy.  
For Trunk Device1, calls must be of a higher precedence than flash to preempt calls that are using this device.
2. The call therefore seeks the next route group in route list RL, which is route group RG2. Route group RG2 contains Trunk Device2, which is also busy, but precedence calls of a precedence level higher than Priority can preempt Trunk Device2.

Because this call is a higher precedence call, the call preempts the existing call on Trunk Device2.

In method 2, the following sequence of events takes place:

1. An incoming flash-level precedence call reaches route list RL, which contains only one route group, RG1.

2. Route group RG1 contains three trunk devices.

Of the three trunk devices in RG1, Trunk Device1 and Trunk Device2 register as busy, so the system offers the call to Trunk Device3, which is available.

## MLPP Hierarchical Configuration

MLPP settings for devices follow this hierarchy:

- If a device MLPP Indication is set to *Off*, the device cannot send indication of MLPP calls. If the device MLPP Preemption is set to *Disabled*, the device cannot preempt calls. These settings override the device's device pool settings.
- If a device MLPP Indication is set to *On*, the device can send indication of MLPP calls. If the device's MLPP Preemption is set to *Forceful*, the device can preempt calls. These settings override the device's device pool settings.
- If a device's MLPP Indication is set to *Default*, the device inherits its ability to send indication of MLPP calls from the device's device pool. If the device MLPP Preemption is set to *Default*, the device inherits its ability to preempt calls from the device's device pool.

MLPP settings for device pools follow this hierarchy:

- If a device pool MLPP Indication is set to *Off*, devices in the device pool cannot send indication of MLPP calls. If the device pool MLPP Preemption is set to *Disabled*, devices in the device pool cannot preempt calls. These settings override the MLPP enterprise parameter settings.
- If a device pool MLPP Indication is set to *On*, devices in the device pool can send indication of MLPP calls. If the device pool MLPP Preemption is set to *Forceful*, devices in the device pool can preempt calls. These settings override the MLPP enterprise parameter settings.
- If a device pool MLPP Indication is set to *Default*, the device inherits its ability to send indication of MLPP calls from the MLPP Indication Status enterprise parameter. If the device pool MLPP Preemption is set to *Default*, the device pool inherits its ability to preempt calls from the MLPP Preemption Setting enterprise parameter.

The MLPP Indication Status enterprise parameter defines the indication status of device pools and devices in the enterprise, but nondefault settings for device pools and individual devices can override its value. The default value for this enterprise parameter specifies *MLPP Indication turned off*.

The MLPP Preemption Setting enterprise parameter defines the preemption ability for device pools and devices in the enterprise, but nondefault settings for device pools and individual devices can override its value. The default value for this enterprise parameter specifies *No preemption allowed*.

The MLPP Domain Identifier enterprise parameter specifies the MLPP domain. The MLPP service applies only to a domain; that is, only to the subscribers and the network and access resources that belong to a particular domain. Connections and resources that belong to a call from an MLPP subscriber get marked with a precedence level and an MLPP domain identifier. Only calls of higher precedence from MLPP users in the same domain can preempt lower precedence calls in the same domain.

## Service Parameter Special Trace Configuration

MLPP issues a service parameter for tracing.

Refer to the *Cisco CallManager Serviceability System Guide* and the *Cisco CallManager Serviceability Administration Guide* for details.

## CDR Recording for Precedence Calls

MLPP precedence calls generate call detail records (CDRs). The CDR identifies the precedence level of the precedence call.

The same precedence levels of the call legs generally apply. With transfer or conference calls, the precedence levels can differ; therefore, Cisco CallManager CDRs identify the precedence level of each leg of the call.

Cisco CallManager CDRs document the preemption value for preempted call terminations.

Refer to the *Cisco CallManager Serviceability System Guide* and the *Cisco CallManager Serviceability Administration Guide* for details.

## Line Feature Interaction

MLPP interacts with line features as described in the following sections:

- [Call Forward, page 13-24](#)
- [Call Transfer, page 13-25](#)
- [Shared Lines, page 13-25](#)
- [Call Waiting, page 13-25](#)

### Call Forward

MLPP interacts with the call forward features as described in the following list:

- Call Forward Busy
  - You optionally can configure a preconfigured Precedence Alternate Party target for any MLPP-enabled station.
  - Cisco CallManager applies the Call Forward Busy feature to forward a precedence call in the usual manner prior to applying any Precedence Alternate Party Diversion procedures to the call.
  - If the incoming precedence call is of equal or lower precedence than the existing call, call processing invokes normal call-forwarding behavior.
  - If the destination station for a precedence call is nonpreemptable (that is, not MLPP-configured), call processing invokes call-forwarding behavior.
  - The system preserves precedence of calls across multiple forwarded calls.
  - If the incoming precedence call is of higher precedence than the existing call, preemption occurs. Both the preempted parties in the active call receive a continuous preemption tone until the station to which the precedence call is directed hangs up. After hanging up, the station to which the precedence call is directed receives precedence ringing. The destination station connects to the preempting call when the station goes off hook.
- Call Forward No Answer
  - For calls of Priority precedence level and above, call processing preserves the precedence level of calls during the forwarding process and may preempt the forwarded-to user.
  - If an Alternate Party is configured for the destination of a precedence call, call processing diverts the precedence call to the Alternate Party after the Precedence Call Alternate Party timeout expires.

If no Alternate Party setting is configured for the destination of a precedence call, call processing diverts the precedence call to the Call Forward No Answer setting.

- Normally, precedence calls route to users and not to the voice-messaging system. The administrator sets the Use Standard VM Handling For Precedence Calls enterprise parameter to avoid routing precedence calls to voice-messaging systems. Refer to the [“Setting the Enterprise Parameters for MLPP”](#) section on page 13-29 for details.

## Call Transfer

MLPP interacts with the call-transfer feature. For blind transfers and consult transfers, each connection of the transferred call, including the consult call, maintains the precedence that the connection was assigned when the call was established.

## Shared Lines

MLPP interacts with shared lines. A shared-line appearance with a call on hold may be preempted to establish a higher precedence call to another terminal with the same directory number (DN). In this case, the original held call does not disconnect, and the precedence call connects. After the precedence call ends, the user may retrieve the original held call.

## Call Waiting

MLPP interacts with the call-waiting feature as described in the following list:

- When conflicts arise between call-waiting status and MLPP precedence calls due to the lack of network resources, the call gets preempted.
- When a precedence call is offered to a destination station that is configured with call waiting, the following behaviors take place:
  - If the requested precedence is higher than the existing call precedence, the existing call gets preempted. If the destination user is nonpreemptable, call processing invokes normal call-waiting behavior and alerting. If the precedence call is of Priority precedence level or higher, the destination user receives precedence call-waiting tones and cadences.
  - If the requested precedence level is the same as the existing call precedence, call processing invokes normal call-waiting behavior. If the precedence call is of Routine precedence, call processing alerts the destination with standard call-waiting tones. If the precedence call is of Priority or higher precedence, call processing alerts the destination with precedence call-waiting tones.
  - If the requested precedence level is lower than the existing call precedence, call processing invokes normal call-waiting behavior. If the precedence call is of Routine precedence, call processing alerts the destination with standard call-waiting tones. If the precedence call is of Priority or higher precedence, call processing alerts the destination with precedence call-waiting tones.
  - When a device has more than one appearance, the destination user may place a lower precedence call on hold to acknowledge receipt of a higher precedence call. After the higher precedence call ends, the destination user may resume the held, lower precedence call.

## Call Preservation

Any MGCP trunk call or connection that is preserved according to the Cisco CallManager Call Preservation feature preserves its precedence level and MLPP domain after invoking the Call Preservation feature. After the device registers with Cisco CallManager, the system only preserves the preserved calls at the device layer in the Cisco CallManager system. As a result, the preserved calls gets treated as two disjointed half calls. If preemption does occur on these devices, only one leg can follow preemption protocol to the other leg. The system detects call termination only through closure of the RTP port.

## Automated Alternate Routing

The Automated Alternate Routing (AAR) for Insufficient Bandwidth feature, an extension of AAR, provides a mechanism to automatically fall back to reroute a call through the Public Switched Telephone Network (PSTN) or other network by using an alternate number when the Cisco CallManager blocks the call due to insufficient location bandwidth. With this feature, the caller does not need to hang up and redial the called party.

If a precedence call attempt meets a condition that invokes the AAR service, the precedence call gets rerouted through the PSTN or other network as specified by the AAR configuration. Cisco CallManager handles the precedence nature of the call in the same manner as if the call originally had been routed through the PSTN or other network, based on the MLPP Indication Enabled and MLPP Preemption Enabled nature of the network interface through which the call is routed.

For details of configuring Automated Alternate Routing, refer to the [Automated Alternate Routing Group Configuration](#) section of the *Cisco CallManager Administration Guide*.

## MGCP and PRI Protocol

MLPP supports Common Network Facility Preemption only for T1-CAS and T1-PRI (North American) interfaces on targeted Voice over IP gateways that Cisco CallManager controls by using MGCP protocol and that have been configured as MLPP Preemption Enabled.

## Secure Endpoints and Secure Communications

The traditional Department of Defense (DOD) TDM network uses legacy analog secure telephone units (STUs) and BRI secure telephone equipment (STEs) as secure endpoints, which are critical for secure communication. The newly developed IP STE also requires support to reduce the need for legacy equipment. Cisco CallManager supports the Skinny Client Control Protocol for these devices. Modem relay provides secure communication and uses the V.150 protocol.

## Interactions and Restrictions

The following sections describe the interactions and restrictions for MLPP.

- [Interactions, page 13-27](#)
- [Restrictions, page 13-27](#)

## Interactions

MLPP interacts with the following Cisco CallManager features as follows:

- **Extension Mobility**—The MLPP service domain remains associated with a user device profile when a user logs in to a device by using extension mobility. The MLPP Indication and Preemption settings also propagate with extension mobility. If either the device or the device profile do not support MLPP, these settings do not propagate.
- **Immediate Divert**—Immediate Divert diverts calls to voice-messaging mail boxes regardless of the type of call (for example, a precedence call). When Alternate Party Diversion (call precedence) is activated, Call Forward No Answer (CFNA) also gets deactivated.
- **IP Manager Assistant (IPMA)**—MLPP interacts with IPMA as follows:
  - When IPMA handles an MLPP precedence call, IPMA preserves call precedence.
  - IPMA filters MLPP precedence calls in the same manner as it filters all other calls. The precedence of a call does not affect whether the call is filtered.
  - Because IPMA does not register the precedence of a call, it does not provide any additional indication of the precedence of a call on the assistant console.
- **Resource Reservation Protocol (RSVP)**—RSVP supports MLPP inherently. The “[RSVP-Based MLPP](#)” section in the [Resource Reservation Protocol](#) chapter of the *Cisco CallManager System Guide* explains how MLPP functions when RSVP is activated.

## Restrictions

The following restrictions apply to MLPP:

- Common Network Facility Preemption support exists only for T1-CAS and T1-PRI (North American) interfaces on targeted Voice over IP gateways that Cisco CallManager controls by using MGCP protocol and that have been configured as MLPP Preemption Enabled.
- User Access Channel support exists only for the following Cisco IP Phone models, which must be configured as MLPP Preemption Enabled:
  - Cisco 796X series IP Phone
  - Cisco 794X series IP Phone
- IOS gateways support SCCP interface to CCM. Hence, they support BRI and analog phones which appear on Cisco Call Manager as supported phone models.
- Only MLPP Indication Enabled devices generate MLPP-related notifications, such as tones and ringers. If a precedence call terminates at a device that is not MLPP Indication Enabled, no precedence ringer gets applied. If a precedence call originates from a device that is not MLPP Indication Enabled, no precedence ringback tone gets applied. If a device that is not MLPP Indication Enabled is involved in a call that is preempted (that is, the other side of the call initiated preemption), no preemption tone gets applied to the device.
- For phones, devices that are MLPP indication disabled (that is, MLPP Indication is set to *Off*) cannot be preempted.  
For trunks, MLPP indication and preemption function independently.
- Cisco CallManager does not support the Look Ahead for Busy (LFB) option.
- Intercluster trunk MLPP carries precedence information through dialed digits. Domain information does not get preserved and must be configured per trunk for incoming calls.

- 729 Annex A is supported.
- Various location bandwidth preemption limitations exist.
- For the DRSN, CDRs represent precedence levels with values 0, 1, 2, 3, and 4 where 0 specifies Executive Override and 4 specifies Routine, as used in DSN. CDRs thus do not use the DRSN format.
- Location preemption does not apply to video calls. In Cisco CallManager, audio bandwidth and video bandwidth get tracked separately. Video calls do not get preempted.
- MLPP-enabled devices are not supported in line groups. As such, Cisco recommends the following guidelines:
  - MLPP-enabled devices should not be configured in a line group. Route groups, however, are supported. Both trunk selection and hunting methods are supported.
  - If an MLPP-enabled device is configured in a line group or route group, in the event of preemption, if the route list does not lock onto the device, the preempted call maybe rerouted to other devices in the route/hunt list and preemption indication maybe returned only after no devices are able to receive the call.
  - Route lists can be configured to support either of two algorithms of trunk selection and hunting for precedence calls. In method 1, perform a preemptive search directly. In method 2, first perform a friendly search. If this search is not successful, perform a preemptive search. Method 2 requires two iterations through devices in a route list.

If route lists are configured for method 2, in certain scenarios involving line groups, route lists may seem to iterate through the devices twice for precedence calls.
- Turning on MLPP Indication (at the enterprise parameter, device pool, or device level) disables normal Ring Setting behavior for the lines on a device, unless MLPP Indication is turned off (overridden) for the device.

Refer to the [“MLPP Configuration Checklist” section on page 13-28](#) for configuration details.

## Installing and Activating MLPP

MLPP, a system feature, comes standard with Cisco CallManager software and does not require special installation.

## MLPP Configuration Checklist

[Table 13-1](#) provides a checklist to configure MLPP.

**Table 13-1**      **MLPP Configuration Checklist**

| Configuration Steps |  | Related procedures and topics  |
|---------------------|--|--|
| <b>Step 1</b>       | Configure a device pool for which associated devices can make MLPP calls.  | <a href="#">Device Pool Configuration</a> ,<br><i>Cisco CallManager Administration Guide</i>   |
| <b>Step 2</b>       | Set enterprise parameters to enable MLPP indication and preemption. If individual devices and devices in device pools have MLPP settings of <i>Default</i> , the MLPP-related enterprise parameters apply to these devices and device pools. | <a href="#">Setting the Enterprise Parameters for MLPP</a> ,<br>page 13-29<br><a href="#">Enterprise Parameters Configuration</a> ,<br><i>Cisco CallManager Administration Guide</i> |

Table 13-1 MLPP Configuration Checklist (continued)

| Configuration Steps |  | Related procedures and topics   |
|---------------------|--|---|
| <b>Step 3</b>       | Configure partitions and Calling Search Spaces (CSS) that allow users (calling parties and their associated devices) to place precedence calls that use MLPP.  | <a href="#">Partition Configuration</a> , <i>Cisco CallManager Administration Guide</i><br><a href="#">Calling Search Space Configuration</a> , <i>Cisco CallManager Administration Guide</i> |
| <b>Step 4</b>       | Configure route patterns/hunt pilots that specify MLPP precedence level and route options for MLPP calls.  | <a href="#">Route Pattern Configuration</a> , <i>Cisco CallManager Administration Guide</i>   |
| <b>Step 5</b>       | Configure translation patterns that specify MLPP precedence level and route options for MLPP calls.  | <a href="#">Translation Pattern Configuration</a> , <i>Cisco CallManager Administration Guide</i>   |
| <b>Step 6</b>       | Configure gateways that specify an MLPP domain for MLPP calls. The following gateway types apply: <ul style="list-style-type: none"> <li>• Cisco Catalyst 6000 24 port FXS Gateway</li> <li>• Cisco Catalyst 6000 E1 VoIP Gateway</li> <li>• Cisco Catalyst 6000 T1 VoIP Gateway</li> <li>• Cisco DE-30+ Gateway</li> <li>• Cisco DT-24+ Gateway</li> <li>• H.323 Gateway</li> </ul> <b>Note</b> Some gateway types allow configuration of MLPP Indication and MLPP Preemption settings. | <a href="#">Gateway Configuration</a> , <i>Cisco CallManager Administration Guide</i>   |
| <b>Step 7</b>       | Configure Cisco IP Phones that specify an MLPP domain for MLPP calls. <b>Note</b> Some phone types allow configuration of MLPP Indication and MLPP Preemption settings.  | <a href="#">Cisco IP Phone Configuration</a> , <i>Cisco CallManager Administration Guide</i>  |
| <b>Step 8</b>       | Configure the directory number that will place an MLPP call.   | <a href="#">Cisco IP Phone Configuration</a> , <i>Cisco CallManager Administration Guide</i>  |
| <b>Step 9</b>       | Configure the User Device Profile of the user that will make an MLPP call.   | <a href="#">Device Profile Configuration</a> , <i>Cisco CallManager Administration Guide</i>  |
| <b>Step 10</b>      | Configure the Device Profile Default for devices that will make MLPP calls.  | <a href="#">Default Device Profile Configuration</a> , <i>Cisco CallManager Administration Guide</i>  |
| <b>Step 11</b>      | Notify users that the MLPP service is available.   | Refer to the phone documentation for instructions on how users access MLPP features on their Cisco IP Phone.  |

## Setting the Enterprise Parameters for MLPP

Cisco CallManager provides the following enterprise parameters that apply to MLPP. Set the MLPP-related enterprise parameters as indicated to allow MLPP service.

- **MLPP Domain Identifier**—Default specifies zero (0). Set this parameter to define a domain. Because MLPP service applies to a domain, Cisco CallManager only marks connections and resources that belong to calls from MLPP users in a given domain with a precedence level. Cisco CallManager can preempt only lower precedence calls from MLPP users in the same domain.



**Note** You must reset all devices for a change to this parameter to take effect.

- **MLPP Indication Status**—Default specifies *MLPP Indication turned off*. This parameter specifies whether devices use MLPP tones and special displays to indicate MLPP precedence calls. To enable MLPP indication across the enterprise, set this parameter to *MLPP Indication turned on*.



**Note** You must reset all devices for a change to this parameter to take effect.

- **MLPP Preemption Setting**—Default specifies *No preemption allowed*. This parameter determines whether devices should apply preemption and preemption signaling (such as preemption tones) to accommodate higher precedence calls. To enable MLPP preemption across the enterprise, set this parameter to *Forceful Preemption*.



**Note** You must reset all devices for a change to this parameter to take effect.

- **Precedence Alternate Party Timeout**—Default specifies 30 seconds. In a precedence call, if the called party subscribes to alternate party diversion, this timer indicates the seconds after which Cisco CallManager will divert the call to the alternate party if the called party does not acknowledge preemption or does not answer a precedence call.
- **Use Standard VM Handling For Precedence Calls**—Default specifies *False*. This parameter determines whether a precedence call will forward to the voice-messaging system. If the parameter is set to *False*, precedence calls do not forward to the voice-messaging system. If the parameter is set to *True*, precedence calls forward to the voice-messaging system. For MLPP, the recommended setting for this parameter is *False*, as users, not the voice- -messaging system, should always answer precedence calls.

For more information about enterprise parameters, refer to the [Enterprise Parameters Configuration](#) chapter of the *Cisco CallManager Administration Guide*.

#### Additional Information

See the “[Related Topics](#)” section on page 13-30.

## Related Topics

- [Call Admission Control](#), *Cisco CallManager System Guide*
- [Resource Reservation Protocol](#), *Cisco CallManager System Guide*
- [Device Pool Configuration](#), *Cisco CallManager Administration Guide*
- [MLPP Domain Configuration](#), *Cisco CallManager Administration Guide*
- [Enterprise Parameters Configuration](#), *Cisco CallManager Administration Guide*
- [Automated Alternate Routing Group Configuration](#), *Cisco CallManager Administration Guide*

- [Partition Configuration](#), *Cisco CallManager Administration Guide*
- [Calling Search Space Configuration](#), *Cisco CallManager Administration Guide*
- [Route Pattern Configuration](#), *Cisco CallManager Administration Guide*
- [Translation Pattern Configuration](#), *Cisco CallManager Administration Guide*
- [Annunciator](#), *Cisco CallManager System Guide*
- [Annunciator Configuration](#), *Cisco CallManager Administration Guide*
- [Gateway Configuration](#), *Cisco CallManager Administration Guide*
- [Trunk Configuration](#), *Cisco CallManager Administration Guide*
- [Cisco IP Phone Configuration](#), *Cisco CallManager Administration Guide*
- [Device Profile Configuration](#), *Cisco CallManager Administration Guide*
- [Default Device Profile Configuration](#), *Cisco CallManager Administration Guide*
- [Annunciator](#), *Cisco CallManager System Guide*
- [Annunciator Configuration](#), *Cisco CallManager Administration Guide*
- [Route Pattern Configuration](#), *Cisco CallManager Administration Guide*
- [Translation Pattern Configuration](#), *Cisco CallManager Administration Guide*
- [Locations](#), *Cisco CallManager System Guide*
- [MLPP Domain Configuration](#), *Cisco CallManager Administration Guide*

**Additional Cisco Documentation**

- *Cisco CallManager Serviceability System Guide*
- *Cisco CallManager Serviceability Administration Guide*
- *Cisco IP Phone Administration Guide for Cisco CallManager, Cisco IP Phone Models 7960G and 7940G*

