



Enterprise Parameters Configuration

Enterprise parameters provide default settings that apply to all devices and services in the same cluster. (A cluster comprises a set of Cisco Unified CallManagers that share the same database.) When you install a new Cisco Unified CallManager, it uses the enterprise parameters to set the initial values of its device defaults. For more information on device defaults, refer to the [“Device Defaults Configuration” section on page 72-1](#) and refer to the [“System-Level Configuration Settings”](#) section of the *Cisco Unified CallManager System Guide*.

You cannot add or delete enterprise parameters, but you can use the following procedure to update existing enterprise parameters.



Note

Many of the enterprise parameters rarely require change. Do not change an enterprise parameter unless you fully understand the feature that you are changing or unless the Cisco Technical Assistance Center (TAC) specifies the change.

Procedure

Step 1 Choose **System** > **Enterprise Parameters**.

Step 2 Update the appropriate parameter settings.

To view the description of a particular enterprise parameter, click the parameter name. To view the descriptions of all the enterprise parameters, click the ? button.

Step 3 Click **Save** to save the changes in the database.
