



Device Firmware Load Information

Use device firmware load information to locate devices that are not using the default firmware load for their device type.

Finding Devices With Non-Default Firmware Loads

The Firmware Load Information window in Cisco Unified CallManager Administration enables you to quickly locate devices that are not using the default firmware load for their device type.



Note

Each device can have an individually assigned firmware load that overrides the default.

Use the following procedure to locate devices that are not using the default firmware load.

Procedure

-
- Step 1** Choose **Device > Device Settings > Firmware Load Information**.
- The page updates to display a list of device types that require firmware loads. For each device type, the **Devices Not Using Default Load** column links to configuration settings for any devices that use a non-default load.
- Step 2** To view a list of devices that are using a non-default device load, click the **Devices Not Using Default Load** column.
-

