



Log Into Cisco Unified Communications Operating System Administration

This chapter describes the procedure for accessing the Cisco Unified Communications Operating System Administration and also provides procedures for recovering a lost password.

Logging Into Cisco Unified Communications Operating System Administration

To access Cisco Unified Communications Operating System Administration and log in, follow this procedure:

Procedure

- Step 1** Log in to Cisco Unified CallManager Administration.
- Step 2** From the Navigation menu in the upper, right corner of the Cisco Unified CallManager Administration window, choose **Cisco Unified OS Administration** and click **Go**.

The Cisco Unified Communications Operating System Administration Logon window displays.



Note You can also access Cisco Unified Communications Operating System Administration directly by entering the following URL:
<http://server-name/iptplatform>.

- Step 3** Enter your Administrator username and password.



Note The Administrator username and password get established during installation or created using the command line interface.

- Step 4** Click **Submit**.

The Cisco Unified Communications Operating System Administration window displays.

Recovering the Administrator Password

If you lose the Administrator password and cannot access the system, use the following procedure to reset the Administrator password.

**Note**

During this procedure, you will be required to remove and then insert a valid CD or DVD in the disk drive to prove that you have physical access to the system.

Procedure

-
- Step 1** Log in to the system with the following username and password:
- Username: **pwrecovery**
 - Password: **pwreset**
- The Welcome to admin password reset window displays.
- Step 2** Press any key to continue.
- Step 3** If you have a CD or DVD in the disk drive, remove it now.
- Step 4** Press any key to continue.
- The system tests to ensure that you have removed the CD or DVD from the disk drive.
- Step 5** Insert a valid CD or DVD into the disk drive.
- The system tests to ensure that you have inserted the disk.
- Step 6** After the system verifies that you have inserted the disk, you get prompted to enter a new Administrator password.
-
-  **Note** The system resets the Administrator username to **admin**. If you want to set up a different Administrator username and password, use the CLI command **set password**. For more information, see [Appendix A, “Command Line Interface.”](#)
-
- Step 7** Reenter the new password.
- The system checks the new password for strength. If the password does not contain enough different characters, you get prompted to enter a new password.
- Step 8** After the system verifies the strength of the new password, the password gets reset, and you get prompted to press any key to exit the password reset utility.
-