



INDEX

A

authentication

- device [1-17](#)
- digest [1-17](#)
- interactions [1-6, 1-7](#)
- overview [1-17](#)
- restrictions [1-6, 1-7](#)
- with CTI/JTAPI/TAPI applications [13-2](#)

authentication string

- entering on phone [7-9](#)
- finding phones using [7-8](#)
- with CAPF [7-1](#)
- with CTI/JTAPI/TAPI applications [13-4](#)

authorization

- configuration settings (table)
 - for SIP trunk [16-4](#)
- configuring for SIP trunk [16-3](#)
- interactions [1-7](#)
- overview [1-17](#)

B

barge

- encryption restrictions with [1-13](#)
- security [11-1](#)
- security icons [11-3](#)

C

Certificate Authority Proxy Function (CAPF)

- activating service [7-5, 13-8](#)
- authentication string

- entering on phone [7-9](#)

CAPF service [3-5](#)

configuration checklist (table) [7-4](#)

configuration settings (table)

- for CTI/JTAPI/TAPI applications [13-11](#)
- for phones [7-7](#)

configuring an application user or end user CAPF profile [13-10](#)

configuring in Cisco Unified Serviceability [7-4](#)

deleting an application user or end user CAPF profile [13-12](#)

finding an application user or end user CAPF profile [13-9](#)

finding phones using LSC or authentication string [7-8](#)

generating CAPF report [7-8](#)

installing [1-13](#)

interactions and requirements [7-3](#)

interaction with Cisco Unified IP Phone [7-2](#)

overview [7-1](#)

updating service parameters [7-5](#)

using for phone certificate operations [7-6](#)

viewing certificate operation status for application user or end user [13-14](#)

with CTI/JTAPI/TAPI applications

- interactions and requirements [13-5](#)
- overview [13-4](#)
- updating service parameters [13-8](#)

certificates

external CAs [1-14](#)

Internet Explorer certificate [2-2](#)

Netscape certificate [2-6](#)

types [1-14](#)

Certificate Signing Requests (CSRs) [1-14](#)

Cisco Unified IP Phone

- authentication string
 - entering on phone [7-9](#)
- configuration checklist (table) for security [4-2](#)
- configuration settings (table)
 - for CAPF [7-7](#)
- configuration tips for phone security profiles [5-1](#)
- deleting CTL file [3-18](#)
- disabling the GARP setting [10-1](#)
- disabling the PC Port setting [10-2](#)
- disabling the PC Voice VLAN Access setting [10-2](#)
- disabling the Setting Access setting [10-2](#)
- disabling the Web Access setting [10-1](#)
- encrypted configuration file [8-1](#)
- interaction with CAPF [7-2](#)
- secure conference support [11-5](#)
- security icons [1-6](#)
- understanding security [4-1](#)
- viewing security settings [4-2](#)
- computer telephony integration (CTI)
 - configuration checklist (table) for securing [13-5](#)
 - secure user groups
 - adding application users and end users [13-7](#)
- conference bridge
 - conference list [11-3](#)
 - configuration checklist (table) for security [11-9](#)
 - configuration tips for security [11-8](#)
 - configuring minimum Meet-Me security [11-11](#)
 - configuring packet capture on a secure conference bridge [11-12](#)
 - configuring security [11-10](#)
 - minimum Meet-Me security level [11-3](#)
 - security [11-1](#)
 - security icons [11-3](#)
 - security interactions [11-6](#)
 - security requirements [11-2](#)
 - security restrictions [11-6](#)
- configuration file
 - encryption [1-21](#)
- CTL client

- CAPF service [3-5](#)
- cluster security mode
 - updating [3-14](#)
- configuration checklist (table) [3-4](#)
- configuration settings (table) [3-14](#)
- configuration tips [3-3](#)
- configuring
 - CTL client [3-9](#)
 - TLS port [3-6](#)
- CTL Provider service [3-5](#)
- deleting CTL file on phone [3-18](#)
- installing [1-13, 3-7](#)
- migrating [3-8](#)
- overview [3-2](#)
- security mode
 - verifying [3-16](#)
- security token
 - changing password [3-18](#)
 - configuring CTL client [3-9](#)
- setting the Smart Card service [3-17](#)
- uninstalling [3-19](#)
- upgrading [3-8](#)
- verifying [3-19](#)
- version
 - determining [3-19](#)
- CTL file
 - deleting entry [3-13](#)
 - deleting on phone [3-18](#)
 - updating [3-12](#)
- CTL Provider
 - activating service [3-5](#)

D

- device authentication
 - configuration settings (table)
 - for SCCP phone [5-4](#)
 - for SIP phones [5-6](#)
 - for SIP trunk [16-4](#)

- configuring for phones [5-3](#)
- configuring for SIP trunk [16-3](#)
- overview [1-17](#)
- digest authentication
 - associating digest user with a phone [9-4](#)
 - cluster ID [17-2](#)
 - configuration checklist (table)
 - for phones [9-1](#)
 - for SIP trunk [17-1](#)
 - configuration settings (table)
 - for application user digest credentials [17-3](#)
 - for end user [9-3](#)
 - for SIP phones [5-6](#)
 - for SIP realm [17-5](#)
 - for SIP trunk [16-4](#)
 - configuring a SIP realm [17-4](#)
 - configuring digest credentials
 - for application user [17-2](#)
 - for end user [9-3](#)
 - configuring for phones [5-3](#)
 - configuring for SIP trunk [16-3](#)
 - configuring service parameters [9-2](#)
 - deleting a SIP realm [17-5](#)
 - finding a SIP realm [17-3](#)
 - overview [1-17](#)

E

- encrypted configuration file
 - configuration checklist (table) [8-5](#)
 - configuration settings (table)
 - for manual key [8-7](#)
 - configuration tips [8-4](#)
 - configuring manual key distribution [8-6](#)
 - disabling [8-9](#)
 - enabling [8-6](#)
 - entering symmetric key [8-7](#)
 - manual key configuration checklist (table) [8-7](#)
 - manual key distribution [8-2](#)

- phone support [8-4](#)
- symmetric key encryption with public key [8-3](#)
- understanding [8-1](#)
- using symmetric key encryption w/public key [8-8](#)
- verifying [8-9](#)
- encryption
 - configuration checklist (table) for gateways and trunks [15-3](#)
 - configuration settings (table)
 - for SCCP phone [5-4](#)
 - for SIP phone [5-6](#)
 - for SIP trunk [16-4](#)
 - configuring for phones [5-3](#)
 - configuring SRTP allowed check box [15-5](#)
 - configuring with barge [1-13](#)
 - for H.323/H.225/H.245 trunk [15-2](#)
 - for H.323 gateway [15-2](#)
 - for MGCP gateway [15-1](#)
 - for SIP trunk [15-3](#)
 - installing [1-13](#)
 - interactions [1-6, 1-7, 11-6](#)
 - overview [1-21](#)
 - restrictions [1-6, 1-7, 11-6](#)
 - signaling
 - configuring for phones [5-3](#)
 - configuring for SIP trunk [16-3](#)
 - with CTI/JTAPI/TAPI applications [13-3](#)

etoken

- changing password [3-18](#)
- configuring CTL client [3-9](#)

F

- file authentication
 - configuring for phones [5-3](#)
 - overview [1-17](#)

H
HTTPS

- overview [2-1](#)
- virtual directories (table) [2-2](#)
- with Internet Explorer [2-2](#)
- with Netscape [2-6](#)

I
image authentication

- overview [1-17](#)

integrity

- overview [1-17](#)

IPSec [1-13](#)

- configuration checklist (table) for IPSec [15-3](#)
- configuring [15-4](#)
- gateway or trunk considerations [15-5](#)
- infrastructure considerations [15-4](#)
- recommendations [15-4, 15-5](#)

J
JTAPI

- configuration checklist (table) for securing [13-5](#)
- configuring security service parameters [13-13](#)

L
locally significant certificate (LSC)

- finding phones using [7-8](#)
- with CTI/JTAPI/TAPI applications [13-4](#)

M
media encryption (*See also* encryption)

- overview [1-21](#)

MGCP gateway

- configuration checklist (table) for security [15-3](#)
- configuring [15-4, 15-5](#)

P
phone hardening

- configuring [10-2](#)
- disabling the GARP setting [10-1](#)
- disabling the PC Port setting [10-2](#)
- disabling the PC Voice VLAN Access setting [10-2](#)
- disabling the Setting Access setting [10-2](#)
- disabling the Web Access setting [10-1](#)

port

- CTL Provider [3-6](#)
- Ethernet phone [3-6](#)
- SIP secure [3-6](#)

S
secure conference

- Cisco Unified IP Phone support [11-5](#)
- conference bridge requirements [11-2](#)
- conference list [11-3](#)
- configuration checklist (table) [11-9](#)
- configuration tips [11-8](#)
- configuring minimum Meet-Me security [11-11](#)
- configuring packet capture [11-12](#)
- configuring secure conference bridge [11-10](#)
- CTI support [11-6](#)
- interactions [11-6](#)
- minimum Meet-Me security level [11-3](#)
- restrictions [11-6](#)
- security icons [11-3](#)
- security overview [11-1](#)
- trunks and gateways [11-6](#)

secure sockets layer (SSL)

- installing [1-13](#)
- with HTTPS [2-1](#)

security

- authentication overview [1-17](#)
- authorization overview [1-17](#)
- best practices [1-11](#)
- certificate types [1-14](#)
- configuration checklist for authentication and encryption (table) [1-24](#)
- CTL client overview [3-2](#)
- encryption overview [1-21](#)
- external CAs [1-14](#)
- features list [1-5](#)
- HTTPS [2-1](#)
- installing [1-13](#)
- interactions [1-6, 1-7, 11-6](#)
- rebooting the cluster [1-12](#)
- rebooting the server [1-12](#)
- resetting devices [1-12](#)
- restarting Cisco Unified Communications Manager service [1-12](#)
- restrictions [1-6, 1-7, 11-6](#)
- SCCP calls (table) [1-5](#)
- SIP calls (table) [1-6](#)
- system requirements [1-5](#)
- terminology (table) [1-2](#)
- tokens [3-2, 3-7, 3-9, 3-12, 3-18](#)
- using barge with encryption [1-13](#)
- where to find more information [1-28](#)

security mode

- cluster
 - configuring [3-14](#)
 - verifying [3-16](#)

security profile

- applying for SIP trunk [16-7](#)
- applying to CUMA Server [18-4](#)
- applying to phones [5-9](#)
- configuration settings (table)
 - for SCCP phone [5-4](#)
 - for SIP phones [5-6](#)
 - for SIP trunk [16-4](#)

- configuration tips for phones [5-1](#)
- configuring for phones [5-3](#)
- configuring for SIP trunk [16-3](#)
- deleting for CUMA server [18-4](#)
- deleting for phones [5-10](#)
- deleting for SIP trunk [16-8](#)
- finding for CUMA servers [18-1](#)
- finding for phones [5-2](#)
- finding for SIP trunk [16-2](#)
- finding phones that use [5-11](#)
- overview for CUMA [18-1](#)
- overview for phones [5-1](#)
- overview for SIP trunk [16-1](#)

security token

- configuring CTL client [3-9](#)

signaling authentication

- overview [1-17](#)

signaling encryption

- overview [1-21](#)

Site Administrator Security Token (SAST) [3-2](#)

SRST

- configuration checklist (table) for securing [14-3](#)
- configuration tips for securing [14-2](#)
- overview for securing [14-1](#)
- troubleshooting
 - certificate deleted on gateway [14-5](#)

SRST reference

- configuration settings (table) for security [14-5](#)
- configuring [14-3](#)
- troubleshooting
 - deleting secured reference [14-5](#)

T

TAPI

- configuration checklist (table) for securing [13-5](#)
- configuring security service parameters [13-13](#)

Tftp service [3-2](#)TLS Proxy server [3-2](#)

- transport layer security (TLS) [1-13](#)
 - port [3-6](#)
- transport security
 - and real-time protocol (RTP) [1-13](#)
 - and secure real-time protocol (SRTP) [1-13](#)
 - configuration settings (table)
 - for SCCP phone [5-4](#)
 - for SIP phone [5-6](#)
 - for SIP trunk [16-4](#)
 - configuring for SIP phones [5-3](#)
 - configuring for SIP trunk [16-3](#)
 - IPSec [1-13](#)
 - TLS [1-13](#)
- troubleshooting
 - deleting CTL file on phone [3-18](#)
 - SRST certificate deleted on gateway [14-5](#)

V

- voice messaging
 - configuration checklist (table) for security [12-3](#)
 - security overview [12-1](#)
 - security requirements [12-1](#)
- voice messaging port
 - applying a security profile [12-3](#)
 - applying a security profile using the Wizard [12-4](#)
 - configuration checklist (table) for security [12-3](#)
 - security overview [12-1](#)