



Index

A

- accessibility features
 - described **18**
 - enabling audible alerts **19**
- Advanced Search button **53**
- Answer button **25**
- answering a call
 - broadcast **26**
 - incoming **25**
- audible alert ring settings, configuring **19**
- audible alerts
 - described **18**
 - enabling **19**

B

- Broadcast Calls window
 - described **6**
- button
 - Advanced Search **53**
 - Answer **25**
 - Call Control **9**
 - Consult Transfer **32**
 - Dial **29**
 - Direct Transfer **33**
 - Hang Up **29**
 - Hold **27**

- Join **33**
- Online/Offline **21**
- Resume **28**
- Transfer **31**
- Voice Messaging **37**

C

- call
 - answering
 - broadcast **26**
 - incoming **25**
 - disconnecting (ending) **29**
 - forwarding **37**
 - forwarding a call to voice messaging **37**
 - handling **25**
 - initiating an ad hoc conference **34**
 - joining **33**
 - making a call **29**
 - parking **35**
 - placing a call on hold **27**
 - retrieving a call from hold **28**
 - reverting a parked call **36**
 - transferring **30**
- Call Control
 - buttons **9**
 - icons **9**

- positioning toolbar **9**
- toolbar
 - buttons and tasks (table) **10**
 - described **9**
- window
 - call/line status **15**
 - components **5**
- changing position of call-control toolbar **9**
- color scheme, changing **45**
- columns, reordering in the Directory window **55**
- Consult Transfer button **32**
- consult transferring a call **32**
- context-sensitive menus **17**

D

- default keyboard shortcuts (table) **39**
- default window layout, choosing **46**
- Dial button **29**
- Dial Digits keypad **38**
- dial pad, described **17**
- dialing a call **29**
- Direct Transfer button **33**
- direct transferring a call **33**
- directory
 - locating a specific name **53**
 - reloading **54**
 - sorting **55**
 - using **53**
- Directory window
 - call/line status **15**
 - described **7**
 - reordering the columns **55**

- disconnecting a call **29**
- document
 - audience **ii**
 - conventions **iii**
 - organization **ii**
 - preface **i**
 - purpose **i**
 - related documentation **iii**
- documentation
 - related **iii**

E

- ending a call **29**
- exiting Cisco Unified CallManager Attendant Console **23**

F

- forwarding a call to voice-messaging system **37**

G

- getting started **1**

H

- Hang Up button **29**
- hanging up a call **29**
- hold
 - placing a call on **27**
 - retrieving a call from **28**
- Hold button **27**

I

icons

- call control **9**

- pop-to-top **14**

interface, Cisco Unified CallManager
Attendant Console (table) **3**

interface, using **1**

J

Join button **33**

joining a call **33**

K

keyboard shortcuts

- creating and editing **43**

- default (table) **39**

- navigation (table) **39**

- navigation, described **18**

L

layout, default window **46**

locating a user **53**

locking window size and layout **46**

Log in dialog box **4**

logging in to Cisco Unified CallManager
Attendant Console **21**

logging out of Cisco Unified CallManager
Attendant Console **23**

M

making a call **29**

menu bar, described **9**

menus, context-sensitive **17**

N

name, locating in the directory **53**

navigation shortcuts **18**

O

off line, going **21**

on line, going **21**

Online/Offline button **21**

P

Parked Calls window **8**

parking a call **35**

placing calls, methods **29**

pop-to-top icon **14**

R

Resume button **28**

retrieving a parked call **36**

S

settings

- customizing **43**

- screen appearance **44**
- viewing and editing **44**
- Settings dialog box **4**
- shortcuts, keyboard
 - creating and editing **43**
 - key sequences (table) **39**
- shortcuts, navigation
 - described **18**
 - key sequences (table) **39**
- sorting the directory **55**
- Speed Dials window
 - adding speed-dial entry **50**
 - adding speed-dial group **48**
 - call/line status **15**
 - deleting speed-dial entry **52**
 - deleting speed-dial group **49**
 - described **7, 47**
 - editing speed-dial entry **51**
 - importing and exporting speed-dial entries **51**
 - renaming speed-dial group **49**
 - sorting entries in speed-dial group **52**
- speed-dial entries
 - adding **50**
 - deleting **52**
 - editing **51**
 - importing and exporting **51**
- speed-dial groups
 - adding **48**
 - deleting **49**
 - renaming **49**
 - sorting entries **52**

- starting Cisco Unified CallManager Attendant Console **19**
- status bar **14**

T

- text size, changing **45**
- toolbar, Call Control
 - buttons and tasks (table) **10**
- toolbar, call-control
 - described **9**
- Transfer button **31**
- transferring a call
 - consult transfer **32**
 - direct **33**
 - unsupervised transfer **31**

U

- unsupervised transfer **31**

V

- Voice-Messaging button **37**
- voice-messaging system, forwarding a call to **37**

W

- window
 - Broadcast Calls **6**
 - Call Control **5**
 - Cisco Unified CallManager Attendant Console **5**

default layout **46**

Directory **7**

locking window size and layout **46**

Parked Calls **8**

Speed Dial **7**

Speed Dials **47**