

CHAPTER **20**

Devices Settings

Impacted GUIs: Cisco Unified Communications Manager Business Edition 3000 First Time Setup Wizard and Cisco Unified Communications Manager Business Edition 3000 Administrative Interface

The Device Settings page allows you to edit and delete devices. You can also generate CLI functionalities for ISR2901 gateways in the Device Settings page.

Table 20-1 describes the settings that display on the Devices page (Connections > Devices).

Note

You can edit both MCS7890-C1 and ISR2901 device type gateways. You can delete only ISR2901 device type gateways.

| Settin | g | Description | |
|---------------|--|---|--|
| Edit | | Click the Edit link corresponding Gateway connection to edit the configuration settings. | |
| Delete | | Click the Delete link corresponding to the Gateway connection settings to delete the gateway. A confirmation message appears and click Delete to delete the gateway. | |
| | | Note You cannot delete MCS7890-C1 gateway. You can delete only ISR2901 gateway. | |
| | | Warning If you delete a gateway, all the PSTN connections corresponding to the gateway will be deleted. | |
| Gener Note | rate CLI Commands This feature is available for ISR2901 | Click this to generate commands to configure ISR2901 gateways. | |
| | devices only. | Copy the CLI commands to the ISR2901 telnet or a serial-interface command line to configure the gateway. | |
| | | You need to generate CLI commands only for ISR2901 gateways. The MCS7890-C1 Gateway do not require generation of CLI commands. | |

Table 20-1Settings On the Devices Page

Γ

| Settin | g | Description |
|--------|--|---|
| Confe | erencing/Transcoding Settings | Choose the ISR2901 device that provides resources for |
| Note | This features is available for ISR2901 devices only. | transcoding and conferencing on the Cisco Unified Communications Manager Business Edition 3000. |
| | For MCS7890-C1 device, the internal gateway serves as a transcoding/conferencing device. | If you change the designated device you will need to update the configuration of both the previously designated and the newly designated devices. |

| Table 20-1Settings On the Devices Page (continued) |
|--|
|--|