



INDEX

A

AC adapter, connecting to [3-7](#)

adding

 Cisco Unified IP Phones manually [2-11](#)

audience, for this document [I-ix](#)

C

caller ID blocking [5-2](#)

call forward all [5-2](#)

CallManager 1-5 option [4-6, 4-7](#)

call waiting [5-2](#)

caution, cell phone interference [1-1](#)

CDP [1-4](#)

cell phone, interference [1-1](#)

Cisco Discovery Protocol

 See CDP

Cisco Unified Communications Manager

 adding phone to database of [2-9](#)

 verifying settings [7-5](#)

Cisco Unified Communications Manager Administration

 adding phones using [2-11](#)

 configuring Cisco Unified SIP Phone 3911 [4-9](#)

Cisco Unified Communications Manager required for Cisco Unified IP Phones [3-2](#)

Cisco Unified IP Phone

 adding manually to Cisco Unified Communications Manager [2-11](#)

 adding to Cisco Unified Communications Manager [2-9](#)

 cleaning [7-16](#)

 configuration checklist [1-11](#)

 installation checklist [1-14](#)

 installation procedure [3-6](#)

 mounting to wall [3-9](#)

 registering [2-9](#)

 resetting [7-15](#)

 supported networking protocols [1-3](#)

 technical specifications [C-1](#)

 troubleshooting [7-1](#)

Cisco Unified SIP Phone 3911

 figure [1-2](#)

cleaning the Cisco Unified IP Phone [7-16](#)

codec

 mismatch [7-14](#)

conference [5-2](#)

configuration file

creating [7-6](#)overview [2-6](#)XmlDefault.cnf.xml [2-6](#)

configuration menu

editing options [4-1](#)configuration settings, restoring [7-16](#)

configuring

SIP Phone dial plan [4-9](#)startup network settings [3-11](#)user features [5-5](#)using DTMF [4-9](#)

connecting

handset

connecting [3-7](#)headset [3-7](#)to AC adapter [3-7](#)to the network [3-7](#)

DDefault Router 1-5 option [4-5](#)

DHCP

description [1-4](#)troubleshooting [7-9](#)DHCP Address Released option [4-6](#)DHCP Enabled option [4-6](#)directory numbers, assigning manually [2-11](#)

DNS server

troubleshooting [7-11](#)verifying settings [7-5](#)DNS Server 1-5 option [4-5](#)

documentation

additional [1-xi](#)for users [A-2](#)Domain Name option [4-4](#)

Dynamic Host Configuration Protocol

See DHCP

Dynamic TFTP Server option [4-4](#)

Eediting, configuration values [4-1](#)Erase Configuration option [4-6](#)error messages, used for troubleshooting [7-3](#)

F

features

configuring on phone, overview [1-8](#)configuring with Cisco Unified
Communications Manager, overview [1-8](#)informing users about, overview [1-9](#)

figure

Cisco Unified SIP Phone 3911 [1-2](#)Cisco Unified SIP Phone 3911 cable
connections [3-8](#)firmware, verifying version [6-2](#)Firmware Versions screen [6-2](#)

footstand [3-8](#)

G

G.11u [1-1](#)

G.711a [1-1](#)

G.729 [1-1](#)

G.729a [1-1](#)

H

handset [3-7](#)

headset port [3-7](#)

hook switch contacts [7-15](#)

Host Name option [4-4](#)

HTTP, description [1-4](#)

I

installing

 Cisco Unified Communications Manager
 configuration [3-2](#)

 network requirements [3-2](#)

 preparing [2-9](#)

 procedure [3-6](#)

interference, cell phone [1-1](#)

Internet Protocol (IP) [1-5](#)

IP address, troubleshooting [7-5](#)

IP Address option [4-4](#)

K

KPML [4-9](#)

L

Locale Installer [B-1](#)

localization

 Installing the Cisco Unified
 Communications Manager Locale
 Installer [B-1](#)

loopback condition [7-15](#)

M

MAC address [2-12](#)

MAC Address option [4-4](#)

N

network configuration, resetting [4-6, 7-16](#)

Network Configuration menu

 CallManager 1-5 option [4-6, 4-7](#)

 Default Router 1-5 option [4-5](#)

 DHCP Address Released option [4-6](#)

 DHCP Enabled option [4-6](#)

 DNS Server 1-5 option [4-5](#)

 Domain Name option [4-4](#)

 Dynamic TFTP Server option [4-4](#)

 Erase Configuration option [4-6](#)

- Host Name option [4-4](#)
- IP Address option [4-4](#)
- locking options [4-2](#)
- MAC Address option [4-4](#)
- Subnet Mask option [4-4](#)
- TFTP Server 1 option [4-4](#)
- unlocking options [4-2](#)
- network connection, moving [7-13](#)
- network connectivity, verifying [7-4](#)
- networking protocol
 - CDP [1-4](#)
 - DHCP [1-4](#)
 - HTTP [1-4](#)
 - IP [1-5](#)
 - RTP [1-5](#)
 - SDP [1-5](#)
 - SIP [1-6](#)
 - TCP [1-6](#)
 - TFTP [1-6](#)
 - UDP [1-6](#)
- networking protocols, supported [1-3](#)
- network outages, identifying [7-9](#)
- network port
 - connecting to [3-7](#)
- network requirements, for installing [3-2](#)
- network settings, startup configuration [3-11](#)
- network statistics [6-1](#)
- Network Statistics screen [6-1](#)

P

- physical connection, verifying [7-9](#)
- plugging in Cisco Unified IP Phone [3-6](#)
- PoE [2-3](#)
- power
 - external [2-4](#)
 - guidelines [2-3](#)
 - outage [2-5](#)
 - PoE [2-3, 2-4](#)
 - providing to phone [2-3](#)
- power cycle [7-7, 7-12](#)
- power over Ethernet
 - See PoE
- power source
 - power injector [2-4](#)

R

- Real-Time Transport Protocol
 - See RTP
- redial
 - description [5-3](#)
- resetting
 - Cisco Unified IP phone [7-15](#)
 - continuously [7-8](#)
 - intentionally [7-10](#)
- RFC interoperability [1-1](#)
- RTP [1-5](#)

S

- SDP, description [1-5](#)
- shared line [5-4](#)
- SIP, description [1-6](#)
- SIP Dial Rules [4-9](#)
- speed dial lines [5-4](#)
- SRST [4-7](#)
- startup problems [7-1](#)
- startup process
 - accessing TFTP server [2-8](#)
 - configuring VLAN [2-8](#)
 - contacting Cisco Unified Communications Manager [2-9](#)
 - loading stored phone image [2-7](#)
 - obtaining IP address [2-8](#)
 - obtaining power [2-7](#)
 - requesting configuration file [2-8](#)
 - understanding [2-7](#)
 - verifying [3-10](#)
- statistics, network [6-1](#)
- Subnet Mask option [4-4](#)
- switch
 - loopback condition [7-15](#)

T

- TCP [1-6](#)
- technical specifications, for Cisco Unified IP Phone [C-1](#)
- telephony features
 - caller ID blocking [5-2](#)
 - call forward all [5-2](#)
 - call waiting [5-2](#)
 - conference [5-2](#)
 - redial [5-3](#)
 - shared line [5-4](#)
 - speed dial lines [5-4](#)
 - transfer [5-4](#)
- TFTP
 - description [1-6](#)
 - troubleshooting [7-4](#)
- TFTP Server 1 option [4-4](#)
- time, displayed on phone [3-2](#)
- transfer [5-4](#)
- Transmission Control Protocol
 - See TCP
- Trivial File Transfer Protocol
 - See TFTP
- troubleshooting
 - Cisco Unified Communications Manager settings [7-5](#)
 - Cisco Unified IP Phone [7-1](#)
 - DHCP [7-9](#)
 - DNS [7-11](#)
 - DNS settings [7-5](#)
 - DTMF delay [7-13](#)
 - gaps in voice calls [7-14](#)
 - hook switch contacts [7-15](#)
 - IP addressing and routing [7-5](#)

- loopback condition [7-15](#)
- network connectivity [7-4](#)
- network outages [7-9](#)
- phones resetting [7-10, 7-12, 7-13](#)
- physical connection [7-9](#)
- services on Cisco Unified Communications Manager [7-6](#)
- sound sample mismatch [7-14](#)
- TFTP settings [7-4](#)
- VLAN configuration [7-10](#)
- voice quality [7-12](#)

- verifying [7-10](#)
- voice messaging system, accessing [A-2](#)

W

- wall mounting, Cisco Unified IP Phone [3-9](#)

X

- XmlDefault.cnf.xml [2-6](#)

U

- UDP [1-6](#)

- User Datagram Protocol

- See UDP

- users

- accessing voice messaging system [A-2](#)
 - documentation for [A-2](#)
 - providing support to [A-1](#)
 - required information [A-1](#)

V

- verifying

- firmware version [6-2](#)
 - startup process [3-10](#)

- VLAN