



W

[write](#)

write

To write to, erase, copy, or display the running configuration, use the **write** command in Cisco Unified Messaging Gateway EXEC mode.

write [erase | memory | terminal]

Syntax Description

erase	(Optional) Erases the running configuration.
memory	(Optional) Writes the running configuration to the startup configuration. This is the default.
terminal	(Optional) Displays the running configuration.

Command Modes

Cisco UMG EXEC

Command History

Cisco UMG Version	Modification
1.0	This command was introduced.

Usage Guidelines

Use the **write** or **write memory** command as a shortcut for the **copy running-config startup-config** command.

Related Commands

Command	Description
copy running-config	Copies the current running configuration to the startup configuration.
erase startup-config	Deletes the current startup configuration.