



E

Last Updated: November 17, 2010

[erase startup-config](#)

erase startup-config

To erase the startup configuration, use the **erase startup-config** command in Cisco UMG EXEC mode.

erase startup-config

Syntax Description

This command has no arguments or keywords.

Command Modes

Cisco UMG EXEC

Command History

Cisco UMG Version	Modification
1.0	This command was introduced.

Examples

The following example deletes the startup configuration from non-volatile memory:

```
umg-1# erase startup-config
```

Related Commands

Command	Description
write	Copies the running configuration to the startup configuration.