



R

Last Updated: November 17, 2010

[registration](#)

registration

To enter registration configuration mode in order to configure autoregistration parameters for endpoints of the type Cisco Unity Express 3.1 and later versions on Cisco UMG, use the **registration** command in Cisco UMG configuration mode.

registration

Syntax Description

This command has no arguments or keywords.

Command Modes

Cisco UMG configuration (config)

Command History

Cisco UMG Version	Modification
1.0	This command was introduced.

Usage Guidelines

After you use the **registration** command to enter the registration configuration mode, in addition to setting endpoint registration credentials (username and password), you can set the endpoint registration lifetime and block endpoints to prevent them from registering.



Note

On the <Abbreviation>Cisco Unity Express side, you must configure the matching connection parameters.

Examples

The following example illustrates the use of the **registration** command:

```
umg-1# config t
umg-1(config)# registration
umg-1(config-reg)# username ny password text cue1
umg-1(config-reg)# username dc password text cue2
Leave sub menu to commit the changes
umg-1(config-reg)# expiration 2000
Currently registered endpoint expiration will be unaffected.
umg-1(config-reg)# end
umg-1(config)# end
umg-1# show registration users
UMG registration users :
      username umg-ny password cue1
      username umg-dc password cue2
umg-1#
```

Related Commands

Command	Description
block location-id	Specifies a Cisco Unity Express 3.1 and later versions endpoint that will be prevented from registering with Cisco UMG.
expiration	Specifies the registration lifetime of autoregistered <Abbreviation>Cisco Unity Express endpoints.

Command	Description
show endpoint	Displays a list of endpoints and their details or a specific endpoint.
show registration	Displays the registration configurations and endpoint registration status on the current configuring messaging gateway.
username	Specifies the registration credentials for autoregistering <Abbreviation>Cisco Unity Express endpoints.

