



W

Last Updated: November 17, 2010

[write](#)

write

To write to, erase, copy, or display the running configuration, use the **write** command in Cisco Unified Messaging Gateway EXEC mode.

write [erase | memory | terminal]

Syntax Description

erase	Erases the running configuration.
memory	Writes the running configuration to the startup configuration. This is the default.
terminal	Displays the running configuration.

Command Modes

Cisco UMG EXEC

Command History

Cisco UMG Version	Modification
1.0	This command was introduced.

Usage Guidelines

Use the **write** or **write memory** command as a shortcut for the **copy running-config startup-config** command.

Related Commands

Command	Description
copy running-config	Copies the current running configuration to the startup configuration.
erase startup-config	Deletes the current startup configuration.