



Configuring Unassigned Branch Voicemail Servers

After you manually configure branch voicemail servers, as described in [Changing a Branch Voicemail Server](#), you must associate them with specific sites. You can do this from the Site Profile page (see [Changing Information for a Single Site](#)), but if you need to make many associations, this can become tedious. Use the Unassigned Branch Voicemail Servers page as a faster method of assigning SRSV-CUE devices to sites.

Procedure

- Step 1** Log in to the [Cisco UMG GUI](#). See the [Logging In to the Cisco UMG Graphical User Interface \(GUI\)](#) module.
- Step 2** Select **Configure > Unassigned Branch Voicemail Servers**.
The system displays the Unassigned Branch Voicemail Servers page with a list of all the unassigned branch voicemail servers on one side and all the sites on the other side.
- Step 3** Select the unassigned branch voicemail server that you want to assign to a site.
- Step 4** Select a site to assign to the unassigned branch voicemail server.
- Step 5** Click **Assign Branch Voicemail Server to Site**.



Note You can also double-click a site to submit it.
