



Viewing Licenses for the Cisco Unified SRSV System

Procedure

- Step 1** Log in to the [Cisco UMG GUI](#). See the [Logging In to the Cisco UMG Graphical User Interface \(GUI\)](#) module.
- Step 2** Choose **Administration > Licenses**.
The system displays the Licenses page, with a listing of all the system licenses.
-

