



## C

---

**Last Updated: August 5, 2011**



**Note**

---

For information about other CLI commands that are not listed in this document, see the [Cisco Unity Express Command Reference for 3.0 and Later Versions](#).

---

**clear counters interfaces**

**clear crashbuffer**

# clear counters interfaces

To clear interface counters, use the **clear counters interfaces** command in Cisco UMG EXEC mode.

## clear counters interfaces

**Syntax Description** This command has no arguments or keywords.

**Command Default** None. Interface counters are not cleared.

**Command Modes** Cisco UMG EXEC

| Command History | Cisco UMG Version | Modification                 |
|-----------------|-------------------|------------------------------|
|                 | 1.0               | This command was introduced. |

**Usage Guidelines** Use this command when you have interface counters you want to clear, for example, the general debug counters. This command clears all counters, including statistics counters.

**Examples** The following example illustrates the use of the **clear counters interfaces** command.

```
umg-1> enable
umg-1# clear counters interfaces
umg-1# show interfaces ide 0
IDE hd0 is up, line protocol is up
    0 reads, 0 bytes
    0 read errors
    0 write, 0 bytes
    0 write errors
umg-1#
```

| Related Commands | Command           | Description                     |
|------------------|-------------------|---------------------------------|
|                  | clear crashbuffer | Clears the kernel crash buffer. |

# clear crashbuffer

To clear the kernel crash buffer, use the **clear crashbuffer** command in Cisco UMG EXEC mode.

**clear crashbuffer**

|                           |                                            |
|---------------------------|--------------------------------------------|
| <b>Syntax Description</b> | This command has no arguments or keywords. |
|---------------------------|--------------------------------------------|

|                        |                                    |
|------------------------|------------------------------------|
| <b>Command Default</b> | None. Crash buffer is not cleared. |
|------------------------|------------------------------------|

|                      |                |
|----------------------|----------------|
| <b>Command Modes</b> | Cisco UMG EXEC |
|----------------------|----------------|

|                        |                          |                              |
|------------------------|--------------------------|------------------------------|
| <b>Command History</b> | <b>Cisco UMG Version</b> | <b>Modification</b>          |
|                        | 1.0                      | This command was introduced. |

|                         |                                                                                                         |
|-------------------------|---------------------------------------------------------------------------------------------------------|
| <b>Usage Guidelines</b> | Use this command to clear the kernel crash buffer after the reasons for a crash are fully investigated. |
|-------------------------|---------------------------------------------------------------------------------------------------------|

|                 |                                                                                    |
|-----------------|------------------------------------------------------------------------------------|
| <b>Examples</b> | The following example illustrates the use of the <b>clear crashbuffer</b> command. |
|-----------------|------------------------------------------------------------------------------------|

```
umg-1 enable>  
umg-1# clear crashbuffer  
umg-1#
```

|                         |                           |                                |
|-------------------------|---------------------------|--------------------------------|
| <b>Related Commands</b> | <b>Command</b>            | <b>Description</b>             |
|                         | clear counters interfaces | Clears the interface counters. |

■ clear crashbuffer