



Configuring Unassigned Branch Voicemail Servers

Last updated: August 5, 2011

After you manually configure a [branch voicemail server](#), you must associate it with a specific [site](#). You can do this from the Site Profile page (see [Changing the Information for a Single Cisco Unified SRST Site](#)), but if you need to make many associations, this can become tedious. Use the Unassigned Branch Voicemail Servers page as a faster method of assigning SRSV-CUE devices to sites.

Procedure

- Step 1** Select **Configure > Unassigned Branch Voicemail Servers**.
- The system displays the Unassigned Branch Voicemail Servers page with a list of all the unassigned branch voicemail servers on one side and all the unassigned sites on the other side.
- Step 2** Select the unassigned branch voicemail server that you want to assign to a site.
- Step 3** Select a site to assign to the unassigned branch voicemail server.
- Step 4** Click **Assign Branch Voicemail Server to Site**.



Tip If you select an unassigned branch voicemail server, you can simply double-click a site to assign the site to it.
