



Creating, Changing, and Viewing a Site Template

Last updated: August 5, 2011

Procedure

Step 1 Select **Configure > Site Templates**.

The system displays the Site Templates page and a list of all the [site](#) templates.

Step 2 Do one of the following:

- To create a new site template, click **Add**.
- To view the details about or to change an existing site template, click the underlined name of the site template.

The system displays the Site Template Profile page, including the following information:

Table 11 *Site Template Profile Parameters*

Parameter	Description
Name	The name of the site template. Restriction: The name cannot have spaces in it.
Auto-Learn Voicemail Pilot	Specifies whether the Cisco UMG device automatically learns the voicemail pilot number from Cisco Unified Communications Manager. If you select No, you must enter the pilot number in the Pilot Number field.
Pilot Number	The phone extension that the Cisco UMG device assigns as the pilot number on the SRSV-CUE device. This number must agree with the dial-peer extension configured on the Cisco Unified Communications Manager directory number for call-forward busy/noan for the SRSV-CUE device to receive incoming voicemail calls. The number must be between one and 15 digits. Only digits are allowed; spaces and dashes are not allowed.
Enable Live Record	Enables the live record feature to be provisioned on the SRSV-CUE device.

Table 11 **Site Template Profile Parameters (continued)**

Parameter	Description
Live Record Pilot Number	The phone extension that the Cisco UMG device provisions on the SRSV-CUE device to support the live record feature. Note This parameter is only available if you check Enable Live Record. The number must be between one and 15 digits. Only digits are allowed; spaces and dashes are not allowed.
Live Record Beep Enable	Enables an audible beep to be played during a live record session. Note This parameter is only available if you check Enable Live Record.
Live Record Beep Interval	The interval, in seconds, between beeps when the live record feature is in use. Note This parameter is only available if you check Enable Live Record and Live Record Beep Enable. The range is from 1 to 30.
Live Record Beep Duration	The duration, in milliseconds, of the live record beep. Note This parameter is only available if you check Enable Live Record and Live Record Beep Enable. The range is from 50 to 1000.
Enable Live Reply	Enables the live reply voicemail feature to be provisioned on the SRSV-CUE device.
Mailbox Size	Default size, in seconds, of a subscriber mailbox on the SRSV-CUE device. The range is from 1 to 10000000.
Maximum Message Size	Maximum size, in seconds, of any voicemail message that can be left on the SRSV-CUE device. The range is from 1 to 10000000 and the maximum message size cannot be larger than the Mailbox Size.
Message Expiration	Default number of days after which a message expires on the SRSV-CUE device. The range is from 1 to 365.
Enable Menu Items Changed Prompt	Enables a special voicemail prompt to be played when the Cisco Unified SRSV system is active, indicating that users are currently connected to the survivable voicemail system.
MWI Mode	Determines the message waiting indicator (MWI) mode. The options are: • Automatic • Always-on • Always-off

Table 11 *Site Template Profile Parameters (continued)*

Parameter	Description
MWI Type	MWI control type. The options are: • Sub-Notify • Unsolicited This setting must match the configuration of the central Cisco Unified Communications Manager.

Step 3 Enter information in the fields. See [Table 11](#).

Step 4 Click **Update**.

Related Topics

- [Using Site Templates](#)

