



L

Last Updated: August 5, 2011



Note

For information about other CLI commands that are not listed in this document, see the [Cisco Unity Express Command Reference for 3.0 and Later Versions](#).

[license activate srsv mailboxes](#)

[license activate srst nodes](#)

[license activate srsv nodes](#)

[license activate srsv ports](#)

license activate srsv mailboxes

To activate the licenses for Cisco Unified SRSV-CUE mailboxes, use the **license activate srsv mailboxes** command in Cisco Unified SRSV-CUE mode. Using the **no** form of this command sets the usage to zero and disables the feature.

license activate srsv mailboxes *number*

no license activate srsv mailboxes

Syntax Description	<i>number</i>	The number of mailboxes to activate. Must be a multiple of 5.
---------------------------	---------------	---

Command Modes	Cisco SRSV-CUE EXEC
----------------------	---------------------

Command History	Cisco Unified SRSV-CUE Release	Modification
	8.0	This command was introduced.

Examples The following example illustrates the use of the **license activate srsv mailboxes** command when the license has not yet been activated:

```
se-192-1-1-171# license activate srsv mailboxes 10
```

Evaluation licenses are being activated in the device for the following feature(s):

Feature Name: SRSV-CUE-MBX

PLEASE READ THE FOLLOWING TERMS CAREFULLY. INSTALLING THE LICENSE OR LICENSE KEY PROVIDED FOR ANY CISCO PRODUCT FEATURE OR USING SUCH PRODUCT FEATURE CONSTITUTES YOUR FULL ACCEPTANCE OF THE FOLLOWING TERMS. YOU MUST NOT PROCEED FURTHER IF YOU ARE NOT WILLING TO BE BOUND BY ALL THE TERMS SET FORTH HEREIN.

You hereby acknowledge and agree that the product feature license is terminable and that the product feature enabled by such license may be shut down or terminated by Cisco after expiration of the applicable term of the license (e.g., 30-day trial period). Cisco reserves the right to terminate or shut down any such product feature electronically or by any other means available. While alerts or such messages may be provided, it is your sole responsibility to monitor your terminable usage of any product feature enabled by the license and to ensure that your systems and networks are prepared for the shut down of the product feature. You acknowledge and agree that Cisco will not have any liability whatsoever for any damages, including, but not limited to, direct, indirect, special, or consequential damages related to any product feature being shutdown or terminated. By clicking the "accept" button or typing "yes" you are indicating you have read and agree to be bound by all the terms provided herein.

ACCEPT? [y/n]?y

License activation count saved for use at next reload

The following example illustrates the use of the **license activate srsv mailboxes** command when the license has already been activated:

```
se-192-1-1-149# license activate srsv mailboxes 25
```

Current license already active, count saved for use at next reload

The following example illustrates the use of the **license activate srsv mailboxes** command to disable the licenses:

```
se-192-1-1-149# no license activate srsv mailboxes
```

License will be disabled at next reload

Related Commands

Command	Description
show license status application srsv	Displays the Cisco Unified SRSV-CUE license status.

license activate srst nodes

To activate the license for Cisco Unified E-SRST nodes, use the **license activate srst nodes** command in Cisco UMG EXEC mode. Using the **no** form of this command sets the usage to zero and disables the feature.

license activate srst nodes *number*

no license activate srst nodes

Syntax Description

<i>number</i>	The number of nodes to activate.
---------------	----------------------------------

Command Modes

Cisco UMG EXEC

Command History

Cisco UMG Version	Modification
8.5	This command was introduced.

Usage Guidelines

The *number* argument can be between 0 and the maximum number of nodes supported by the device and must be a multiple of 25. This activation count is applied for all types of licenses, so it can be used to reduce the count below the module maximum count or below the count of any other installed license.

Examples

The following example illustrates the use of the **license activate srst nodes** command when the license has not yet been activated:

```
se-192-1-1-149# license activate srst nodes 25
```

Evaluation licenses are being activated in the device for the following feature(s):

Feature Name: CUMG-SRST-NODE

PLEASE READ THE FOLLOWING TERMS CAREFULLY. INSTALLING THE LICENSE OR LICENSE KEY PROVIDED FOR ANY CISCO PRODUCT FEATURE OR USING SUCH PRODUCT FEATURE CONSTITUTES YOUR FULL ACCEPTANCE OF THE FOLLOWING TERMS. YOU MUST NOT PROCEED FURTHER IF YOU ARE NOT WILLING TO BE BOUND BY ALL THE TERMS SET FORTH HEREIN.

You hereby acknowledge and agree that the product feature license is terminable and that the product feature enabled by such license may be shut down or terminated by Cisco after expiration of the applicable term of the license (e.g., 30-day trial period). Cisco reserves the right to terminate or shut down any such product feature electronically or by any other means available. While alerts or such messages may be provided, it is your sole responsibility to monitor your terminable usage of any product feature enabled by the license and to ensure that your systems and networks are prepared for the shut down of the product feature. You acknowledge and agree that Cisco will not have any liability whatsoever for any damages, including, but not limited to, direct, indirect, special, or consequential damages related to any product feature being shutdown or terminated. By clicking the

"accept" button or typing "yes" you are indicating you have read and agree to be bound by all the terms provided herein.

ACCEPT? [y/n]?**y**

License activation count saved for use at next reload

The following example illustrates the use of the **license activate srst nodes** command when the license has already been activated:

```
se-192-1-1-149# license activate srst nodes 25
```

Current license already active, count saved for use at next reload

The following example illustrates the use of the **license activate srst nodes** command to disable the licenses:

```
se-192-1-1-149# no license activate srst nodes
```

License will be disabled at next reload

Related Commands

Command	Description
show license status application srst	Displays the Cisco Unified SRST license status.

license activate srsv nodes

To activate the license for Cisco Unified SRSV nodes, use the **license activate srsv nodes** command in Cisco UMG EXEC mode. Using the **no** form of this command sets the usage to zero and disables the feature.

license activate srsv nodes *number*

no license activate srsv nodes

Syntax Description

<i>number</i>	The number of nodes to activate.
---------------	----------------------------------

Command Modes

Cisco UMG EXEC

Command History

Cisco UMG Version	Modification
8.0	This command was introduced.

Usage Guidelines

The *number* argument can be between 0 and the maximum number of nodes supported by the device and must be a multiple of 25. This activation count is applied for all types of licenses, so it can be used to reduce the count below the module maximum count or below the count of any other installed license.

Examples

The following example illustrates the use of the **license activate srsv nodes** command when the license has not yet been activated:

```
se-192-1-1-149# license activate srsv nodes 25
```

Evaluation licenses are being activated in the device for the following feature(s):

Feature Name: CUMG-SRSV-NODE

PLEASE READ THE FOLLOWING TERMS CAREFULLY. INSTALLING THE LICENSE OR LICENSE KEY PROVIDED FOR ANY CISCO PRODUCT FEATURE OR USING SUCH PRODUCT FEATURE CONSTITUTES YOUR FULL ACCEPTANCE OF THE FOLLOWING TERMS. YOU MUST NOT PROCEED FURTHER IF YOU ARE NOT WILLING TO BE BOUND BY ALL THE TERMS SET FORTH HEREIN.

You hereby acknowledge and agree that the product feature license is terminable and that the product feature enabled by such license may be shut down or terminated by Cisco after expiration of the applicable term of the license (e.g., 30-day trial period). Cisco reserves the right to terminate or shut down any such product feature electronically or by any other means available. While alerts or such messages may be provided, it is your sole responsibility to monitor your terminable usage of any product feature enabled by the license and to ensure that your systems and networks are prepared for the shut down of the product feature. You acknowledge and agree that Cisco will not have any liability whatsoever for any damages, including, but not limited to, direct, indirect, special, or consequential damages related to any product feature being shutdown or terminated. By clicking the

"accept" button or typing "yes" you are indicating you have read and agree to be bound by all the terms provided herein.
ACCEPT? [y/n]?**y**

License activation count saved for use at next reload

The following example illustrates the use of the **license activate srsv nodes** command when the license has already been activated:

```
se-192-1-1-149# license activate srsv nodes 25
```

Current license already active, count saved for use at next reload

The following example illustrates the use of the **license activate srsv nodes** command to disable the licenses:

```
se-192-1-1-149# no license activate srsv nodes
```

License will be disabled at next reload

Related Commands

Command	Description
show license status application srsv	Displays the Cisco Unified SRSV license status.

license activate srsv ports

To activate the license for Cisco Unified SRSV-CUE ports, use the **license activate srsv ports** command in Cisco Unified SRSV-CUE EXEC mode. Using the **no** form of this command sets the usage to zero and disables the feature.

license activate srsv ports *number*

no license activate srsv ports

Syntax Description

<i>number</i>	The number of ports to activate. Must be a multiple of 2.
---------------	---

Command Modes

Cisco Unified SRSV-CUE EXEC

Command History

Cisco Unified SRSV-CUE Release	Modification
8.0	This command was introduced.

Examples

The following example illustrates the use of the **license activate srsv ports** command when the license has not yet been activated:

```
se-192-1-1-171# license activate srsv ports 4
```

Evaluation licenses are being activated in the device for the following feature(s):

Feature Name: SRSV-CUE-PORT

PLEASE READ THE FOLLOWING TERMS CAREFULLY. INSTALLING THE LICENSE OR LICENSE KEY PROVIDED FOR ANY CISCO PRODUCT FEATURE OR USING SUCH PRODUCT FEATURE CONSTITUTES YOUR FULL ACCEPTANCE OF THE FOLLOWING TERMS. YOU MUST NOT PROCEED FURTHER IF YOU ARE NOT WILLING TO BE BOUND BY ALL THE TERMS SET FORTH HEREIN.

You hereby acknowledge and agree that the product feature license is terminable and that the product feature enabled by such license may be shut down or terminated by Cisco after expiration of the applicable term of the license (e.g., 30-day trial period). Cisco reserves the right to terminate or shut down any such product feature electronically or by any other means available. While alerts or such messages may be provided, it is your sole responsibility to monitor your terminable usage of any product feature enabled by the license and to ensure that your systems and networks are prepared for the shut down of the product feature. You acknowledge and agree that Cisco will not have any liability whatsoever for any damages, including, but not limited to, direct, indirect, special, or consequential damages related to any product feature being shutdown or terminated. By clicking the "accept" button or typing "yes" you are indicating you have read and agree to be bound by all the terms provided herein.

ACCEPT? [y/n]?y

License activation count saved for use at next reload

The following example illustrates the use of the **license activate srsv ports** command when the license has already been activated:

```
se-192-1-1-149# license activate srsv ports 6
```

Current license already active, count saved for use at next reload

The following example illustrates the use of the **license activate srsv ports** command to disable the licenses:

```
se-192-1-1-149# no license activate srsv ports
```

License will be disabled at next reload

Related Commands

Command	Description
show license status application srsv	Displays the Cisco Unified SRSV-CUE license status.

