



Monitoring the Provisioning Status of a Branch Device

Last updated: August 5, 2011

While the Cisco UMG system is actively provisioning the branch call agent devices or [SRSV-CUE](#) devices, you can examine the realtime status of the provisioning process by clicking **Monitor > Provisioning Status**. If you manually started the provisioning cycle, the system automatically displays the provisioning monitor page.

The system automatically refreshes the Provisioning Status page until all the selected sites have finished the provisioning cycle. During this time, you can navigate away from this page and return later to review the updated status. If the provisioning has not finished, the page will display the updated status for individual sites.

- **Site**—The name of the site being provisioned.
- **Progress**—The current state of provisioning. Can be one of the following: not started, in progress, or complete.
- **Result**—Indicates the outcome of the provisioning process for the site. Can be either success or failed.

If the system is not currently provisioning any sites, the system displays an informational message stating this.

Related Topics

- See [Viewing the Site Provisioning History Report](#) to learn how to generate the Site Provisioning report.
- See [System Alerts](#) for a list of all the alert descriptions.

