



Z

Last Updated: August 03, 2008

[zerooutnumber](#)

zerooutnumber

To specify the zero out number for a mailbox, use the **zerooutnumber** command in Cisco Unity Express mailbox configuration mode. Use the **no** or **default** form of this command to remove the configuration of the execution timeout.

zerooutnumber *E164Phone*

nozerooutnumber *E164Phone*

Syntax Description

<i>E164Phone</i>	Specifies the E164 phone number that a caller is forwarded to when they dial zero.
------------------	--

Command Default

none.

Command Modes

Cisco Unity Express mailbox configuration (config-mailbox)

Command History

Cisco Unity Express Version	Modification
3.0	This command was introduced.
7.1	This command was deprecated.

Usage Guidelines

This command is deprecated in releases 7.1 and later, and is replaced by the **caller-flow caller-input** command.

Examples

The following example sets the zero out number to 555-0100:

```
se-10-0-0-0# config t
se-10-0-0-0(config)# voice mailbox owner user8
se-10-0-0-0(config-mailbox)# zerooutnumber 5550100
```

Related Commands

Command	Description
voice mailbox owner	Enters mailbox configuration submode.
show voicemail	Shows the properties of the voice-mail system