



## List of Supported Cisco IOS Commands

---

This appendix lists the Cisco IOS commands that access points and bridges support. Cisco IOS commands that are not in this list have not been tested on access points and bridges and might not be supported.

Commands related to wireless LANs are described in [Chapter 2, “Cisco IOS Commands for Access Points and Bridges,”](#) and appear in blue in this list. You can click those commands to browse to a description of the command. You can find descriptions and usage instructions for the rest of the commands in this list in the *Cisco IOS Release 12.3 Master Indexes*. Click this URL to browse to the master indexes:

[http://www.cisco.com/en/US/products/ps6350/products\\_product\\_indices\\_list.html](http://www.cisco.com/en/US/products/ps6350/products_product_indices_list.html)

### A

aaa accounting

aaa accounting update

aaa authentication login

aaa group server

aaa new-model

access-class



---

**Note** The **access-class** command is supported only on access points that have a console port.

---

access-list

[accounting \(SSID configuration mode\)](#)

[antenna](#)

archive download-sw

archive upload

arp

[authentication \(local server configuration mode\)](#)

[authentication client](#)

[authentication key-management](#)

authentication network-eap (SSID configuration mode)  
 authentication open (SSID configuration mode)  
 authentication shared (SSID configuration mode)

## B

beacon  
 boot buffersize  
 boot ios-break  
 boot upgrade  
 bridge



### Note

---

The **bridge 1 protocol ieee** command is not supported on access points and bridges. You cannot disable this command unless you reboot the unit.

---

bridge aging-time  
 bridge forward-time  
 bridge hello-time  
 bridge max-age  
 bridge priority  
 bridge protocol ieee  
 bridge-group block-unknown-source  
 bridge-group input-address-list  
 bridge-group input-pattern-list  
 bridge-group input-type-list  
 bridge-group output-address-list  
 bridge-group output-pattern-list  
 bridge-group output-type-list  
 bridge-group path-cost  
 bridge-group port-protected  
 bridge-group priority  
 bridge-group spanning-disabled  
 bridge-group subscriber-loop-control  
 bridge-group source-learning  
 bridge-group unicast-flooding  
 broadcast-key

# C

[cca](#)  
cd  
cdp enable  
cdp holdtime  
cdp run  
cdp timer  
[channel](#)  
[channel-match \(LBS configuration mode\)](#)  
[class-map](#)  
clear access-list counters  
clear cdp counters  
clear cdp table  
[clear dot11 aaa authentication mac-authen filter-cache](#)  
[clear dot11 cckm-statistics](#)  
[clear dot11 client](#)  
[clear dot11 hold-list](#)  
[clear dot11 statistics](#)  
[clear iapp rogue-ap-list](#)  
[clear iapp statistics](#)  
clear logging  
clear vlan  
[clear wlcpc wds](#)  
clock timezone  
clock summer-time  
[concatenation](#)  
configure terminal  
copy  
[countermeasure tkip hold-time](#)

# D

databits



**Note** The **databits** command is supported only on access points that have a console port.

debug cdp adjacency

debug cdp events  
debug cdp packets  
debug dot11  
debug dot11 aaa  
debug dot11 dot11radio  
debug dot11 ids  
debug iapp  
debug interface fastethernet  
debug ip http authentication  
debug ip http ssi  
debug ip http tokens  
debug ip http transactions  
debug ip http url  
debug radius local-server  
debug vlan packets  
debug wlccp ap  
debug wlccp packet  
debug wlccp rmlib  
debug wlccp wds  
delete  
description  
dfs band  
dir  
disable  
disconnect  
distance  
dot11 aaa authentication attributes service-type login-only  
dot11 aaa authentication mac-authen filter-cache  
dot11 aaa csid  
dot11 activity-timeout  
dot11 adjacent-ap age-timeout  
dot11 antenna-alignment  
dot11 arp-cache  
dot11 carrier busy  
dot11 extension aironet  
dot11 holdoff-time  
dot11 ids eap attempts  
dot11 igmp snooping-helper

dot11 lbs  
dot11 linktest  
dot11 location isocc  
dot11 mbssid  
dot11 meter  
dot11 network-map  
dot11 phone  
dot11 priority-map avvid  
dot11 ssid  
dot11 update-group-key  
dot11 vlan-name  
dot1x reauth-period  
duplex

## E

eapfast authority  
eapfast pac expiry  
eapfast server-key  
enable  
encapsulation dot1q  
encryption  
encryption key  
encryption mode ciphers  
encryption mode wep  
end  
erase  
exception core-file  
exception crashinfo buffersize  
exception crashinfo file  
exception dump  
exception flash  
exception memory  
exec-timeout  
exit

## F

fair-queue  
 format  
[fragment-threshold](#)  
 full-duplex

## G

[group \(local server configuration mode\)](#)  
[guest-mode \(SSID configuration mode\)](#)

## H

half-duplex  
 help  
 hold-queue  
 holdoff-time  
 hostname

## I

[iapp standby mac-address](#)  
[iapp standby poll-frequency](#)  
[iapp standby primary-shutdown](#)  
[iapp standby timeout](#)  
[information-element ssid1 \(SSID configuration mode\)](#)  
[infrastructure-client](#)  
[infrastructure-ssid \(SSID configuration mode\)](#)  
 interface  
[interface dot11 \(LBS configuration mode\)](#)  
[interface dot11radio](#)  
 interface fastethernet

**Caution**

Access points and bridges do not support the **interface loopback** command. Configuring a loopback interface might generate an IAPP GENINFO storm on your network.

interface virtual-dot11Radio

ip access-group  
 ip access-list  
 ip address  
 ip address dhcp  
 ip default-gateway  
 ip dhcp-server  
 ip domain-lookup  
 ip http authentication  
 ip http help-path  
 ip http path  
 ip http port  
 ip http server  
 ip name-server  
[ip redirection](#)  
 ip telnet

## L

[l2-filter bridge-group-acl](#)

[led flash](#)

length



**Note** The **length** command is supported only on access points that have a console port.

line

logging

[logging buffered](#)

[logging snmp-trap](#)

logging console

logging history

logging history size

logging facility

logging monitor

logging on

logging rate-limit

logging trap

login

logout




---

**Note** The **loopback** command is not supported on access points and bridges.

---

## M

[match \(class-map configuration\)](#)  
[max-associations \(SSID configuration mode\)](#)  
[mbssid](#)  
[mbssid \(SSID configuration mode\)](#)  
[method \(LBS configuration mode\)](#)  
[mobile station](#)  
[mobility network-id](#)  
[monitor](#)




---

**Note** The **monitor** command is supported only on access points that have a console port.

---

[more](#)  
[multicast address \(LBS configuration mode\)](#)

## N

[nas \(local server configuration mode\)](#)

## P

[packet retries](#)  
[packet-type \(LBS configuration mode\)](#)  
[parent](#)  
[parent timeout](#)  
[parity](#)




---

**Note** The **parity** command is supported only on access points that have a console port.

---

[payload-encapsulation](#)  
[ping](#)  
[policy-map](#)  
[power client](#)  
[power local](#)



[preamble-short](#)

privilege



---

**Note** The **privilege** command is supported only on access points that have a console port.

---

pwd

## R

[radius local-server pac-generate](#)

radius-server attribute

radius-server deadtime

[radius-server local](#)

radius-server retransmit

radius-server timeout

radius-server vsa send accounting

reload

[rts](#)

## S

[server-address \(LBS configuration mode\)](#)

service-policy output

service sequence-number

service timestamps

session-timeout



---

**Note** The **session-timeout** command is supported only on access points that have a console port.

---

[short-slot-time](#)

show access-lists

show bridge

show bridge group

show buffers

show cdp

show cdp entry

show cdp interface

show cdp neighbors

show cdp traffic  
show clock  
[show controllers dot11radio](#)  
show controllers fastethernet  
show debugging  
show dhcp server  
[show dot11 aaa authentication mac-authen filter-cache](#)  
[show dot11 adjacent-ap](#)  
[show dot11 associations](#)  
[show dot11 bssid](#)  
[show dot11 carrier busy](#)  
[show dot11 ids eap](#)  
[show dot11 network-map](#)  
[show dot11 statistics client-traffic](#)  
[show dot11 vlan-name](#)  
[show environment](#)  
show file information  
show file systems  
show flash  
show history  
show hosts  
show html users  
[show iapp rogue-ap-list](#)  
[show iapp standby-parms](#)  
[show iapp statistics](#)  
[show interfaces dot11radio](#)  
[show interfaces dot11radio aaa](#)  
[show interfaces dot11radio statistics](#)  
show interfaces fastethernet  
show ip access-list



---

**Note** The **show ip local** command is not supported on access points and bridges.

---

[show led flash](#)  
show line  
show logging  
show memory  
[show power-injector](#)

show privilege  
show processes  
show queueing  
show radius  
[show radius local-server statistics](#)  
show registry  
show running-config  
[show running-config ssid](#)  
show sessions  
show smf  
show snmp  
show snmp engineID  
show snmp group  
show snmp user  
[show spanning-tree](#)  
show stacks  
show startup-config  
show subsys  
show tech-support  
show terminal  
show users  
show version  
show vlan  
[show wccp](#)  
shutdown  
snmp ifindex  
snmp-server  
snmp-server chassis-id  
snmp-server community  
snmp-server contact  
snmp-server enable traps  
[snmp-server enable traps envmon temperature](#)  
[snmp-server group](#)  
snmp-server host  
[snmp-server location](#)  
snmp-server system-shutdown  
[snmp-server user](#)  
[snmp-server view](#)

## T

snmp trap link-status

[speed \(Ethernet interface\)](#)

[speed \(radio interface\)](#)

speed (serial line interface)



**Note** The **speed** (serial line interface) command is supported only on access points that have a console port.

[speed ofdm](#)

[ssid](#)

[station-role](#)

[station-role install](#)

stopbit



**Note** The **stop bit** command is supported only on access points that have a console port.

## T

terminal-type



**Note** The **terminal-type** command is supported only on access points that have a console port.

test fastethernet

test led

timeout (serial line interface)



**Note** The **timeout** (serial line interface) command is supported only on access points that have a console port.

[traffic-class](#)

## U

undebg

[user \(local server configuration mode\)](#)

username

# V

verify

vlan (SSID configuration mode)

# W

width

wlccp ap

wlccp authentication-server

wlccp wds aaa authentication mac-authen filter-cache

wlccp wds priority

wlccp wnm ip address

workgroup-bridge client-vlan

world-mode

wpa-psk

