



APPENDIX A

List of Supported Cisco IOS Commands

This appendix lists the Cisco IOS commands that access points and bridges support. Cisco IOS commands that are not in this list have not been tested on access points and bridges and might not be supported.

Commands related to wireless LANs are described in [Chapter 2, “Cisco IOS Commands for Access Points and Bridges”](#) and appear in blue in this list. You can click those commands to browse to a description of the command. You can find descriptions and usage instructions for the rest of the commands in this list in the *Cisco IOS Release 12.3 Master Indexes*. Click this URL to browse to the master indexes:

http://www.cisco.com/en/US/products/sw/iosswrel/ps5187/products_product_indices_list.html

A

aaa accounting
aaa accounting delay-start
aaa accounting update
aaa authentication
aaa authentication login
[aaa authentication login default local cache](#)
[aaa authorization exec default local cache](#)
[aaa cache profile](#)
[aaa pod server](#)
aaa new-model
aaa pod server access-class



Note The **access-class** command is supported only on access points that have a console port.

access-list
[accounting \(SSID configuration mode\)](#)

admission-control (QOS Class interface configuration mode)



Note This command is not supported on repeaters.

admit-traffic (SSID configuration mode)



Note This command is not supported on repeaters.

admit-traffic (QOS Class interface configuration mode)



Note This command is not supported on repeaters.

anonymous-id (dot1x credentials configuration mode)

antenna

ampdu

archive download-sw

archive upload

arp

authentication (local server configuration mode)

authentication client

authentication key-management

authentication network-eap (SSID configuration mode)

authentication open (SSID configuration mode)

authentication shared (SSID configuration mode)

B

beacon

beacon privacy guest-mode

boot buffersize

boot ios-break

boot mode-button

boot upgrade

bridge



Note The **bridge 1 protocol ieee** command is not supported on access points and bridges. You cannot disable this command unless you reboot the unit.

bridge aging-time

bridge forward-time

bridge hello-time
bridge max-age
bridge priority
bridge protocol ieee
bridge-group block-unknown-source
bridge-group input-address-list
bridge-group input-pattern-list
bridge-group input-type-list
bridge-group output-address-list
bridge-group output-pattern-list
bridge-group output-type-list
bridge-group path-cost
bridge-group port-protected
bridge-group priority
bridge-group spanning-disabled
bridge-group subscriber-loop-control
bridge-group source-learning
bridge-group unicast-flooding
broadcast-key

C

cache authentication profile
cache authorization profile
cache expiry
cca
cd
cdp enable
cdp holdtime
cdp run
cdp timer
channel
channel-match (LBS configuration mode)
class-map
clear access-list counters
clear cdp counters
clear cdp table
clear dot11 aaa authentication mac-authen filter-cache

[clear dot11 cckm-statistics](#)
[clear dot11 client](#)
[clear dot11 ids mfp client statistics](#)
[clear dot11 hold-list](#)
[clear dot11 statistics](#)
[clear eap sessions](#)
[clear iapp rogue-ap-list](#)
[clear iapp statistics](#)
[clear ip igmp snooping membership](#)
[clear logging](#)
[clear vlan](#)
[clear wlccp wds](#)
[clear wlccp wds recovery statistics](#)
[clock timezone](#)
[clock summer-time](#)
[concatenation](#)
[configure terminal](#)
[copy](#)
[countermeasure tkip hold-time](#)
[crypto pki authenticate](#)
[crypto pki enroll](#)
[crypto pki import](#)
[crypto pki trustpoint](#)
[cw-max \(QOS Class interface configuration mode\)](#)
[cw-min \(QOS Class interface configuration mode\)](#)

D

[databits](#)



Note The **databits** command is supported only on access points that have a console port.

[debug aaa pod](#)
[debug cdp adjacency](#)
[debug cdp events](#)
[debug cdp packets](#)
[debug dot11](#)
[debug dot11 aaa](#)

debug dot11 cac



Note This command is not supported on repeaters.

debug dot11 dot11radio

debug dot11 ids

debug dot11 ids mfp

debug eap

debug iapp

debug interface fastethernet

debug ip http authentication

debug ip http ssi

debug ip http tokens

debug ip http transactions

debug ip http url

debug ip igmp snooping

debug radius local-server

debug vlan packets

debug wlccp ap

debug wlccp ap mn---tbd

debug wlccp ap rm enhanced-neighbor-list

debug wlccp packet

debug wlccp rmlib

debug wlccp wds

delete

description (dot1x credentials configuration mode)

dfs band

dir

disable

disconnect

distance

dot11 aaa authentication attributes service-type login-only

dot11 aaa authentication mac-authen filter-cache

dot11 aaa csid

dot11 activity-timeout

dot11 adjacent-ap age-timeout

dot11 antenna-alignment

dot11 arp-cache

dot11 arp-cache
dot11 extension aironet
dot11 extension power native
dot11 holdoff-time
dot11 ids eap attempts
dot11 ids mfp
dot11 igmp snooping-helper
dot11 lbs
dot11 linktest
dot11 location isocc
dot11 mbssid
dot11 meter
dot11 network-map
dot11 phone
dot11 priority-map avvid
dot11 qos class
dot11 ssid
dot11 update-group-key
dot11 vlan-name
dot11 wpa handshake timeout
dot1x credentials
dot1x eap profile (configuration interface mode)
dot1x eap profile (SSID configuration mode)
dot1x reauth-period
dot1x timeout supp-response
duplex

E

eap profile
eapfast authority
eapfast pac expiry
eapfast server-key
enable
encapsulation dot1q
encryption
encryption key
encryption mode ciphers

encryption mode wep
end
erase
exception core-file
exception crashinfo buffersize
exception crashinfo file
exception dump
exception flash
exception memory
exec-timeout
exit

F

fair-queue
fixed-slot (QOS Class interface configuration mode)
format
fragment-threshold
full-duplex

G

group (local server configuration mode)
guard-interval
guest-mode (SSID configuration mode)

H

half-duplex
help
hold-queue
holdoff-time
hostname

I

iapp standby mac-address
iapp standby poll-frequency

[iapp standby primary-shutdown](#)
[iapp standby timeout](#)
[ids mfp client](#)
[information-element ssid1 \(SSID configuration mode\)](#)
[infrastructure-client](#)
[infrastructure-ssid \(SSID configuration mode\)](#)
[interface](#)
[interface dot11 \(LBS configuration mode\)](#)
[interface dot11radio](#)
[interface fastethernet](#)

**Caution**

Access points and bridges do not support the **interface loopback** command. Configuring a loopback interface might generate an IAPP GENINFO storm on your network.

[interface virtual-dot11Radio](#)
[ip access-group](#)
[ip access-list](#)
[ip address](#)
[ip address dhcp](#)
[ip default-gateway](#)
[ip dhcp-server](#)
[ip domain-lookup](#)
[ip http authentication](#)
[ip http help-path](#)
[ip http path](#)
[ip http port](#)
[ip http server](#)
[ip igmp snooping vlan](#)
[ip name-server](#)
[ip redirection](#)
[ip telnet](#)

**Note**

[l2-filter bridge-group-acl](#)
[l2-filter-block-arp](#)

[led display](#)[led flash](#)[length](#)

Note The **length** command is supported only on access points that have a console port.

[line](#)[logging](#)[logging buffered](#)[logging snmp-trap](#)[logging console](#)[logging history](#)[logging history size](#)[logging facility](#)[logging monitor](#)[logging on](#)[logging rate-limit](#)[logging trap](#)[login](#)[logout](#)

Note The **loopback** command is not supported on access points and bridges.

M

[match \(class-map configuration\)](#)[max-associations \(SSID configuration mode\)](#)[mbssid](#)[mbssid \(SSID configuration mode\)](#)[method \(eap profile configuration mode\)](#)[method \(LBS configuration mode\)](#)[mobile station](#)[mobility network-id](#)[monitor](#)

Note The **monitor** command is supported only on access points that have a console port.

[more](#)

[multicast address \(LBS configuration mode\)](#)

N

[nas \(local server configuration mode\)](#)

P

[packet max-retries](#)

[packet retries](#)

[packet timeout](#)

[packet speed](#)

[packet-type \(LBS configuration mode\)](#)

[parent](#)

[parent](#)

[parity](#)



Note

The **parity** command is supported only on access points that have a console port.

[password \(dot1x credentials configuration mode\)](#)

[payload-encapsulation](#)

[ping](#)

[policy-map](#)

[power client](#)

[power inline negotiation](#)

[power local](#)

[preamble-short](#)

[privilege](#)



Note

The **privilege** command is supported only on access points that have a console port.

[probe-response gratuitous](#)

[pwd](#)

R

[radius local-server pac-generate](#)

[radius-server attribute](#)

radius-server deadtime
radius-server host
[radius-server local](#)
radius-server retransmit
radius-server timeout
radius-server vsa send accounting
reload
[rts](#)

S

[server-address \(LBS configuration mode\)](#)
service-policy output
service sequence-number
service timestamps
session-timeout



Note The **session-timeout** command is supported only on access points that have a console port.

[short-slot-time](#)
show access-lists
show boot
[show boot mode-button](#)
show bridge
show bridge group
show buffers
show cdp
show cdp entry
show cdp interface
show cdp neighbors
show cdp traffic
show clock
[show controllers dot11radio](#)
show controllers fastethernet
show debugging
show dhcp server
[show dot11 aaa authentication mac-authen filter-cache](#)
[show dot11 adjacent-ap](#)

[show dot11 associations](#)

[show dot11 bssid](#)

[show dot11 cac](#)



Note This command is not supported on repeaters.

[show dot11 carrier busy](#)

[show dot11 directed-roam](#)

[show dot11 ids eap](#)

[show dot11 ids mfp](#)

[show dot11 network-map](#)

[show dot11 statistics client-traffic](#)

[show dot11 traffic-streams](#)

[show dot1x](#)

[show dot1x credentials](#)

[show eap registrations](#)

[show eap sessions](#)

[show environment](#)

[show file information](#)

[show file systems](#)

[show flash](#)

[show history](#)

[show hosts](#)

[show html users](#)

[show iapp rogue-ap-list](#)

[show iapp standby-parms](#)

[show iapp statistics](#)

[show interfaces dot11radio](#)

[show interfaces dot11radio aaa](#)

[show interfaces dot11radio statistics](#)

[show interfaces fastethernet](#)

[show ip access-list](#)



Note The **show ip local** command is not supported on access points and bridges.

[show ip igmp snooping groups](#)

[show ip igmp snooping vlan](#)

[show led flash](#)

show line
show logging
show memory
[show power-injector](#)
show privilege
show processes
show queueing
show radius
[show radius local-server statistics](#)
show registry
show running-config
[show running-config ssid](#)
show sessions
show smf
show snmp
show snmp engineID
show snmp group
show snmp user
[show spanning-tree](#)
show stacks
show startup-config
show subsys
show tech-support
show terminal
show users
show version
show vlan
[show wlccp](#)
[show wlccp ap mn](#)
[show wlccp ap rm enhanced-neighbor-list](#)
shutdown
snmp ifindex
snmp-server
snmp-server chassis-id
snmp-server community
snmp-server contact
[snmp-server enable traps](#)
[snmp-server enable traps envmon temperature](#)

[snmp-server group](#)

snmp-server host

[snmp-server location](#)

snmp-server system-shutdown

[snmp-server user](#)

[snmp-server view](#)

snmp trap link-status

[speed \(Ethernet interface\)](#)

[speed \(radio interface\)](#)

speed (serial line interface)



Note The **speed** (serial line interface) command is supported only on access points that have a console port.

[speed ofdm](#)

[ssid](#)

[station-role](#)

[station-role install](#)

stopbit



Note The **stop bit** command is supported only on access points that have a console port.

T

terminal-type



Note The **terminal-type** command is supported only on access points that have a console port.

test fastethernet

test led

timeout (serial line interface)



Note The **timeout** (serial line interface) command is supported only on access points that have a console port.

[traffic-class](#)

[traffic-stream](#)



Note This command is not supported on repeaters.

transmit-op (QOS Class interface configuration mode)

U

undebug

user (local server configuration mode)

username (dot1x credentials configuration mode)

V

verify

vlan (SSID configuration mode)

W

width

wlccp ap eap profile

wlccp ap username

wlccp authentication-server

wlccp wds aaa authentication mac-authen filter-cache

wlccp wds mode wds-only

wlccp wds priority

wlccp wnm ip address

workgroup-bridge client-vlan

world-mode

wpa-psk

