



Preface

This preface describes the audience, organization, and conventions of the *Cisco Wireless LAN Command Reference Guide, Release 7.0.116.0*. It also provides information on how to obtain other documentation. This chapter includes the following sections:

- [Audience, page 5](#)
- [Organization, page 6](#)
- [Organization, page 6](#)
- [Conventions, page 6](#)
- [Related Documentation, page 7](#)
- [Obtaining Documentation and Submitting a Service Request, page 7](#)

Audience

This publication is for experienced network administrators who configure and maintain Cisco wireless LAN controllers and Cisco lightweight access points.

Purpose

This guide describes the tasks and commands available to configure and maintain Cisco wireless LAN controllers.



Note

This version of the *Cisco Wireless LAN Controller Command Reference* pertains specifically to controller software release 7.0.116.0.

Organization

This guide is organized into these chapters:

Chapter Title	Description
Chapter 1, “Using the Command-Line Interface”	Describes how to use the command-line interface (CLI) on the controller.
Chapter 2, “CLI Commands”	Provides detailed information about the CLI commands for the controller 7.0.116.0 release.

Conventions

This document uses the following conventions:

Convention	Indication
bold font	Commands and keywords and user-entered text appear in bold font.
<i>italic</i> font	Document titles, new or emphasized terms, and arguments for which you supply values are in <i>italic</i> font.
[]	Elements in square brackets are optional.
{ x y z }	Required alternative keywords are grouped in braces and separated by vertical bars.
[x y z]	Optional alternative keywords are grouped in brackets and separated by vertical bars.
string	A nonquoted set of characters. Do not use quotation marks around the string or the string will include the quotation marks.
<code>courier</code> font	Terminal sessions and information the system displays appear in <code>courier</code> font.
< >	Nonprinting characters such as passwords are in angle brackets.
[]	Default responses to system prompts are in square brackets.
!, #	An exclamation point (!) or a pound sign (#) at the beginning of a line of code indicates a comment line.



Note

Means *reader take note*.



Tip

Means *the following information will help you solve a problem*.



Caution

Means *reader be careful*. In this situation, you might perform an action that could result in equipment damage or loss of data.

**Timesaver**

Means *the described action saves time*. You can save time by performing the action described in the paragraph.

Related Documentation

These documents provide complete information about the Cisco Unified Wireless Network solution:

- *Quick Start Guide: Cisco 2100 Series Wireless LAN Controllers*
- *Quick Start Guide: Cisco 4400 Series Wireless LAN Controllers*
- *Cisco 5500 Series Wireless Controller Installation Guide*
- *Cisco Wireless LAN Controller Command Reference*
- *Cisco Wireless Control System Configuration Guide*
- *Release Notes for Cisco Wireless LAN Controllers and Lightweight Access Points, Release 7.0.116.0*
- *Quick Start Guide: Cisco Wireless Control System*
- Quick start guide and hardware installation guide for your specific lightweight access point

Click this link to browse to user documentation for the Cisco Unified Wireless Network solution:

<http://www.cisco.com/cisco/web/psa/default.html?mode=prod>

Obtaining Documentation and Submitting a Service Request

For information on obtaining documentation, submitting a service request, and gathering additional information, see the monthly *What's New in Cisco Product Documentation*, which also lists all new and revised Cisco technical documentation, at:

<http://www.cisco.com/en/US/docs/general/whatsnew/whatsnew.html>

Subscribe to the *What's New in Cisco Product Documentation* as an RSS feed and set content to be delivered directly to your desktop using a reader application. The RSS feeds are a free service. Cisco currently supports RSS Version 2.0.

