



## Preface

---

This preface describes the audience, organization, and conventions of the *Cisco Wireless LAN Controller Command Reference, Release 7.2*. It also provides information on how to obtain other documentation. This chapter includes the following sections:

- [Audience, page vii](#)
- [Organization, page viii](#)
- [Organization, page viii](#)
- [Conventions, page viii](#)
- [Related Documentation, page ix](#)
- [Obtaining Documentation and Submitting a Service Request, page ix](#)

## Audience

This publication is for experienced network administrators who configure and maintain Cisco wireless LAN controllers and Cisco lightweight access points.

## Purpose

This guide describes the tasks and commands available to configure and maintain Cisco wireless LAN controllers.



### Note

---

This version of the *Cisco Wireless LAN Controller Command Reference* pertains specifically to controller software release 7.2.

---

# Organization

This guide is organized into these chapters:

Chapter Title	Description
<a href="#">Chapter 1, “Using the Command-Line Interface”</a>	Describes how to use the command-line interface (CLI) on the controller.
<a href="#">Chapter 2, “CLI Commands”</a>	Provides detailed information about the CLI commands for the controller 7.2 release.

# Conventions

This document uses the following conventions:

Convention	Indication
<b>bold font</b>	Commands and keywords and user-entered text appear in <b>bold font</b> .
<i>italic font</i>	Document titles, new or emphasized terms, and arguments for which you supply values are in <i>italic font</i> .
[ ]	Elements in square brackets are optional.
{ x   y   z }	Required alternative keywords are grouped in braces and separated by vertical bars.
[ x   y   z ]	Optional alternative keywords are grouped in brackets and separated by vertical bars.
string	A nonquoted set of characters. Do not use quotation marks around the string or the string will include the quotation marks.
<code>courier font</code>	Terminal sessions and information the system displays appear in <code>courier font</code> .
< >	Nonprinting characters such as passwords are in angle brackets.
[ ]	Default responses to system prompts are in square brackets.
!, #	An exclamation point (!) or a pound sign (#) at the beginning of a line of code indicates a comment line.



## Note

Means *reader take note*.



## Tip

Means *the following information will help you solve a problem*.



## Caution

Means *reader be careful*. In this situation, you might perform an action that could result in equipment damage or loss of data.

**Timesaver**

Means *the described action saves time*. You can save time by performing the action described in the paragraph.

## Related Documentation

These documents provide complete information about the Cisco Unified Wireless Network solution:

- Cisco 5500 Series Wireless Controller Installation Guide
- Cisco Wireless LAN Controller Command Reference
- Cisco Wireless Control System Configuration Guide
- Release Notes for Cisco Wireless LAN Controllers and Lightweight Access Points, Release 7.2.100.0
- Quick Start Guide: Cisco Wireless Control System
- Quick start guide and hardware installation guide for your specific lightweight access point

Click this link to browse to user documentation for the Cisco Unified Wireless Network solution:

<http://www.cisco.com/cisco/web/psa/default.html?mode=prod>

## Obtaining Documentation and Submitting a Service Request

For information on obtaining documentation, submitting a service request, and gathering additional information, see the monthly *What's New in Cisco Product Documentation*, which also lists all new and revised Cisco technical documentation, at:

<http://www.cisco.com/en/US/docs/general/whatsnew/whatsnew.html>

Subscribe to the *What's New in Cisco Product Documentation* as an RSS feed and set content to be delivered directly to your desktop using a reader application. The RSS feeds are a free service. Cisco currently supports RSS Version 2.0.

