

# End-of-Sale and End-of-Life Announcement for the Cisco Prime Assurance Manager

### EOL8790

Cisco announces the end-of-sale and end-of-life dates for the Cisco Prime Assurance Manager. The last day to order the affected product(s) is March 20, 2013. Customers with active service contracts will continue to receive support from the Cisco Technical Assistance Center (TAC) as shown in Table 1 of the EoL bulletin. Table 1 describes the end-of-life milestones, definitions, and dates for the affected product(s). Table 2 lists the product part numbers affected by this announcement. For customers with active and paid service and support contracts, support will be available until the termination date of the contract, even if this date exceeds the Last Date of Support shown in Table 1.

With the release of Cisco Prime Infrastructure 1.2, Cisco Prime Assurance Manager features are available through the assurance module. This integrated management solution couples end-user awareness and application performance visibility with comprehensive lifecycle management of wired and wireless networks for a powerful unified solution.

 Table 1.
 End-of-Life Milestones and Dates for the Cisco Prime Assurance Manager

| Milestone   | Definition  | Date               |
|---|---|--------------------|
| End-of-Life<br>Announcement Date                    | The date the document that announces the end-of-sale and end-of-life of a product is distributed to the general public.   | September 19, 2012 |
| End-of-Sale Date                                    | The last date to order the product through Cisco point-of-sale mechanisms. The product is no longer for sale after this date.   | March 20, 2013     |
| Last Ship Date:<br>App. SW                          | The last-possible ship date that can be requested of Cisco and/or its contract manufacturers. Actual ship date is dependent on lead time.   | June 18, 2013      |
| End of SW Maintenance<br>Releases Date:<br>App. SW  | The last date that Cisco Engineering may release any final software maintenance releases or bug fixes. After this date, Cisco Engineering will no longer develop, repair, maintain, or test the product software.   | March 20, 2014     |
| End of New Service<br>Attachment Date:<br>App. SW   | For equipment and software that is not covered by a service-and-support contract, this is the last date to order a new service-and-support contract or add the equipment and/or software to an existing service-and-support contract.                         | March 20, 2014     |
| End of Service Contract<br>Renewal Date:<br>App. SW | The last date to extend or renew a service contract for the product.  | June 16, 2015      |
| Last Date of Support:<br>App. SW                    | The last date to receive applicable service and support for the product as entitled by active service contracts or by warranty terms and conditions. After this date, all support services for the product are unavailable, and the product becomes obsolete. | March 31, 2016     |

HW = Hardware OS SW = Operating System Software App. SW = Application Software

 Table 2.
 Product Part Numbers Affected by This Announcement

| End-of-Sale Product<br>Part Number | Product Description   | Replacement Product<br>Part Number | Replacement Product Description                                 | Additional Information |
|------------------------------------|---|------------------------------------|---|------------------------|
| L-PAM-1.1-ADD                      | Cisco Prime Assurance<br>aggregate for L-PAM-1.1-<br>ADD licenses | R-PI12-K9                          | Cisco Prime Infrastructure 1.2                                  | -                      |
| L-PAM-1.1-ADD-100                  | Cisco Prime Assurance 1.1<br>Add-On Flow License for<br>100 I/Fs  | L-PI12-AS-100                      | Prime Infrastructure 1.2 -<br>Assurance - 100 Interface<br>Lic  | -                      |
| L-PAM-1.1-ADD-1K                   | Cisco Prime Assurance 1.1<br>Add-On Flow License for<br>1K I/Fs   | L-PI12-AS-1K                       | Prime Infrastructure 1.2 -<br>Assurance - 1K Interface<br>Lic   | -                      |
| L-PAM-1.1-ADD-50                   | Cisco Prime Assurance 1.1<br>Add-On Flow License for<br>50 I/Fs   | L-PI12-AS-50                       | Prime Infrastructure 1.2 -<br>Assurance - 50 Interface<br>Lic   | -                      |
| L-PAM-1.1-ADD-500                  | Cisco Prime Assurance 1.1<br>Add-On Flow License for<br>500 I/Fs  | L-PI12-AS-500                      | Prime Infrastructure 1.2 -<br>Assurance - 500 Interface<br>Lic  | -                      |
| L-PAM-1.1-ADD-5K                   | Cisco Prime Assurance 1.1<br>Add-On Flow License for<br>5K I/Fs   | L-PI12-AS-5K                       | Prime Infrastructure 1.2 -<br>Assurance - 5K Interface<br>Lic   | -                      |
| PAM-1.1-BS100-K9                   | Prime Assurance 1.1 Base<br>Lic for 100 I/F & unlimited<br>NAMs   | L-PI12-AS-100                      | Prime Infrastructure 1.2 -<br>Assurance - 100 Interface<br>Lic  | -                      |
| PAM-1.1-BS15-K9                    | Prime Assurance Manager<br>1.1 Base Lic for 15 I/F& 5<br>NAMs     | L-PI12-AS-15                       | Prime Infrastructure 1.2 -<br>Assurance - 15 Int Lic - 5<br>NAM | -                      |
| PAM-1.1-BS1K-K9                    | Prime Assurance 1.1 Base<br>Lic for 1K I/F & unlimited<br>NAMs    | L-PI12-AS-1K                       | Prime Infrastructure 1.2 -<br>Assurance - 1K Interface<br>Lic   | -                      |
| PAM-1.1-BS50-K9                    | Prime Assurance 1.1 Base<br>Lic for 50 I/F & unlimited<br>NAMs    | L-PI12-AS-50                       | Prime Infrastructure 1.2 -<br>Assurance - 50 Interface<br>Lic   | -                      |
| PAM-1.1-BS500-K9                   | Prime Assurance 1.1 Base<br>Lic for 500 I/F & unlimited<br>NAMs   | L-PI12-AS-500                      | Prime Infrastructure 1.2 -<br>Assurance - 500 Interface<br>Lic  | -                      |
| PAM-1.1-BS5K-K9                    | Prime Assurance 1.1 Base<br>Lic for 5K I/F & unlimited<br>NAMs    | L-PI12-AS-5K                       | Prime Infrastructure 1.2 -<br>Assurance - 5K Interface<br>Lic   | -                      |

# **Product Migration Options**

Customers are encouraged to migrate to the Cisco Prime Infrastructure 1.2. Information about this product can be found at: <a href="http://www.cisco.com/go/primeinfrastructure">http://www.cisco.com/go/primeinfrastructure</a>.

Customers may be able to use the Cisco Technology Migration Program (TMP) where applicable to trade-in eligible products and receive credit toward the purchase of new Cisco equipment. For more information about Cisco TMP, customers should work with their Cisco Partner or Cisco account team. Cisco Partners can find additional TMP information on Partner Central at

http://www.cisco.com/web/partners/incentives\_and\_promotions/tmp.html.

Customers may be able to continue to purchase the Cisco Prime Assurance Manager through the Cisco Certified Refurbished Equipment program. Refurbished units may be available in limited supply for sale in certain countries on a first-come, first-served basis until the Last Date of Support has been reached. For information about the Cisco Certified Refurbished Equipment program, go to: <a href="http://www.cisco.com/go/eos">http://www.cisco.com/go/eos</a>.

Service prices for Cisco products are subject to change after the product End-of-Sale date.

The Cisco Takeback and Recycle program helps businesses dispose properly of surplus products that have reached their end of useful life. The program is open to all business users of Cisco equipment and its associated brands and subsidiaries. For more information, go to:

http://www.cisco.com/web/about/ac227/ac228/ac231/about cisco takeback recycling.html.

## For More Information

For more information about the Cisco Prime Infrastructure, visit <a href="http://www.cisco.com/go/primeinfrastructure">http://www.cisco.com/go/primeinfrastructure</a>, or contact your local account representative.

To request information about the Cisco Prime Infrastructure, send an e-mail to <u>ask-prime-infrastructure@cisco.com</u>.

For more information about the Cisco End-of-Life Policy, go to: http://www.cisco.com/en/US/products/products end-of-life policy.html.

For more information about the Cisco Product Warranties, go to: http://www.cisco.com/en/US/products/prod\_warranties\_listing.html.

To subscribe to receive end-of-life/end-of-sale information, go to: http://www.cisco.com/cisco/support/notifications.html.

# Subscribe for RSS Notifications for End-of-Life and End-of-Sale Notices

To subscribe to the End-of-Life and End-of-Sale RSS Feed, insert the following URL into your RSS application: http://www.cisco.com/web/feeds/products/end\_of\_life\_rss.xml.

Any authorized translation issued by Cisco Systems or affiliates of this end-of-life Product Bulletin is intended to help customers understand the content described in the English version. This translation is the result of a commercially reasonable effort; however, if there are discrepancies between the English version and the translated document, please refer to the English version, which is considered authoritative.



Americas Headquarters Cisco Systems, Inc. San Jose, CA Asia Pacific Headquarters Cisco Systems (USA) Pte. Ltd. Singapore Europe Headquarters Cisco Systems International BV Amsterdam, The Netherlands

 $Cisco\ has\ more\ than\ 200\ offices\ worldwide.\ Addresses,\ phone\ numbers,\ and\ fax\ numbers\ are\ listed\ on\ the\ Cisco\ Website\ at\ www.cisco.com/go/offices.$ 

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: www.cisco.com/go/trademarks. Third party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1110R)

Printed in USA C51-717068-00 09/12