• 1 | 1 • 1 | 1 • CISCO ..

Newer Cisco SBA for Government Guides Available

This guide is part of an older series of Cisco Smart Business Architecture for Government. To access the latest Cisco SBA for Government Guides, go to http://www.cisco.com/go/govsba

Cisco strives to update and enhance SBA guides on a regular basis. As we develop a new series of SBA guides, we test them together, as a complete system. To ensure the mutual compatibility of designs in Cisco SBA guides, you should use guides that belong to the same series.







SBA FOR GOVT

LARGE

BORDERLESS NETWORKS

SBA FOR GOVERNMENT

Revision: H2CY10

Using this SIEM Partner Guide

This document is for the reader who:

- Has read the Cisco Security Information and Event Management Deployment Guide and the Internet Edge Deployment Guide
- Wants to connect Borderless Networks to a LogLogic SIEM solution
- Wants to gain a general understanding of the LogLogic SIEM solution
- · Has a level of understanding equivalent to a CCNA® certification
- Wants to solve compliance and regulatory reporting problems
- Wants to enhance network security and operations
- Wants to improve IT operational efficiency
- · Wants the assurance of a validated solution

Related Documents

Before reading this guide





Using this SIEM Partner Guide

Table of Contents

Cisco SBA for Large Agencies—Borderless Networks1
Agency Benefits
LogLogic Open Log Management Products5
Deploying Loglogic MX Solution7
Sending Logs from Cisco Devices to a LogLogic MX Appliance9
Searching and Generating Reports14
LogLogic Example
Products Verified with Cisco SBA18
Appendix A: SBA for Large Agencies Document System

ALL DESIGNS, SPECIFICATIONS, STATEMENTS, INFORMATION, AND RECOMMENDATIONS (COLLECTIVELY, "DESIGNS") IN THIS MANUAL ARE PRESENTED "AS IS," WITH ALL FAULTS. CISCO AND ITS SUPPLIERS DISCLAIM ALL WARRANTIES, INCLUDING, WITHOUT LIMITATION, THE WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE. IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITA-TION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THE DESIGNS, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THE DESIGNS ARE SUBJECT TO CHANGE WITHOUT NOTICE. USERS ARE SOLELY RESPONSIBLE FOR THEIR APPLICATION OF THE DESIGNS. THE DESIGNS DO NOT CONSTITUTE THE TECHNICAL OR OTHER PROFESSIONAL ADVICE OF CISCO, ITS SUPPLIERS OR PARTNERS. USERS SHOULD CONSULT THEIR OWN TECHNICAL ADVISORS BEFORE IMPLEMENTING THE DESIGNS. RESULTS MAY VARY DEPENDING ON FACTORS NOT TESTED BY CISCO.

Any Internet Protocol (IP) addresses used in this document are not intended to be actual addresses. Any examples, command display output, and figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses in illustrative content is unintentional and coincidental. Cisco Unified Communications SRND (Based on Cisco Unified Communications Manager 7.x)

© 2010 Cisco Systems, Inc. All rights reserved.

Cisco SBA for Large Agencies—Borderless Networks

The Cisco Smart Business Architecture (SBA) for Government Large Agencies—Borderless Networks offers partners and customers valuable network design and deployment best practices, helping agencies deliver superior end-user experience that include switching, routing, security and wireless technologies combined with comprehensive management capabilities for the entire system. Customers can use the guidance provided in the architecture and deployment guides to maximize the value of their Cisco network in a simple, fast, affordable, scalable and flexible manner.

The modular design of the architecture means that technologies can be added when the agency is ready to deploy them. The architecture also provides Cisco-tested configurations and topologies, which CCNA-level engineers can use for design and installation, and to support agency needs.

Cisco offers a number of options to provide security management capabilities. This guide is focused on our partnership with Loglogic and their MX Series Security Information and Event Manager (SIEM) product.

Figure 1. LogLogic MX Series Appliance Integrated into SBA for Large Agencies—Borderless Networks



Agency Benefits

LogLogic offers a comprehensive suite of log and security management products that help large agencies to:

- Achieve regulatory compliance
- Protect valuable customer information
- · Improve the efficiency of IT operations

The LogLogic logging, security, and IT search products shown in Figure 2 provide support for a broad range of Cisco networking, security, communication and infrastructure products.

Figure 2. Components of the LogLogic Log Management Platform



Compliance Reporting Benefits

LogLogic provides support for a number of compliance mandates, including PCI, SOX/COBIT, HIPAA, FISMA, ITIL, ISO, and NERC. LogLogic compliance reporting solutions are easily installed on top of the log management infrastructure, and immediately begin producing detailed compliance reports for key Cisco security and networking products.

Compliance Management Solutions & Benefits

LogLogic's Compliance Manager provides auditing and workflow solutions for PCI and SOX/COBIT compliance reports. This includes the following key benefits:

- Ensure and prove compliance review timeliness
- · Access top-down executive views of compliance posture
- Dramatically improve audit speed and accuracy
- Reduce the cost of compliance
- Map data against agency policies
- Automate IT compliance functions

Security Benefits

Using LogLogic's extensive logging and IT Search capabilities, agencies can improve their security posture and provide detailed forensics support for security incidents. Security benefits of the LogLogic solution include the following:

- The LogLogic Open Log Management platform provides first-level alerting through pattern matching and log learning technology. LogLogic's Open Log Management platform also provides rapid searches against a complete record of user and system activity.
- LogLogic Security Event Manager adds sophisticated correlation and contextual analysis for advanced threat monitoring and fraud detection, helping to automate the incident management and response process.
- LogLogic Database Security Manager provides in-depth database threat and activity monitoring and can protect, amongst others, against SQL injection attacks. LogLogic Database Security Manager can also block suspicious activities in real-time.

IT Operations and Performance Management Benefits

LogLogic's scalable log collection, indexing, searching, and behavioral analytics solutions allow IT organizations to gain visibility and control over their valuable assets and resources. This allows these organizations to increase network and application performance, availability, and accountability. Additional benefits include the following:

- The LogLogic Open Log Management platform monitors system behavior in real time. Advanced behavioral algorithms detect degradation in performance before it causes downtime. LogLogic's advanced alerting and search features also detect obscure error conditions as they happen, and help to identify the root cause.
- The LogLogic Open Log Management platform includes a free reporting package for the IT Infrastructure Library (ITIL), making it easier to implement best practices in the area of service desk management and change management.
- The LogLogic Open Log Management platform can monitor user and system activity of virtual applications and cross-correlate information from various applications.

LogLogic Open Log Management Products

The LogLogic product family includes the MX, LX, and ST Log Management Intelligence (LMI) appliances. These products all work in conjunction with Cisco products to provide advanced log collection, storage, archival, alerting, compliance and reporting solutions. The LogLogic product family is designed for scalability, performance, and to be quickly installed with rapid access to information and reports.

Figure 3. LogLogic LX and ST Appliances



The LogLogic MX solution is designed specifically for the mid-market, delivering comprehensive assurance for log data compliance mandates. Each LogLogic MX appliance includes a LogLogic Compliance and Control Suite with more than 100 customizable alerts and reports covering identity and access management, user activity, change, security, operational continuity and IT performance. The software platform on this single form factor appliance also incorporates one-year on-board log archival and storage capabilities, as well as indexed log data for fast Google-like search. In addition, each appliance includes one year of LogLogic maintenance and support.

LogLogic MX appliances integrate with the LogLogic Compliance Suite to cater to specific mid-market requirements. This mid-market, enterprise-grade functionality includes:

• Reporting, search, and collection performance—the ability to process custom log sources and easily customize reports previously reserved for enterprise customers.

- Chain of custody features for built-in raw log archives—enterprisegrade log data archival protection through checksum management.
- Open web services API and aftermarket applications—custom portal development and operational process automation through a fully featured SOA and web services API.

Figure 4. Comparison of LogLogic Appliances

LogLogic Appliances	MX3020	LX1020	LX4020	ST1020	ST2020-SAN	ST4020
					<u> </u>	विकास में
Max Sustained MPS	1,000	5,000	10,000	75,000	150,000	150,000
Max Device Count	2000	16,000	16,000	16,000	16,000	16,000
Usable Storage (GB)	2,000	1,000	4,000	1,000	Up to 512TB	7,000
Rack Units	20	10	20	10	10	20

LogLogic Compliance Suites

LogLogic Compliance Suites turn log data into automated reports and alerts for monitoring controls and requirements for PCI, SOX/COBIT, HIPAA, HITECH, FISMA, ITIL, ISO, and NERC. Each Compliance Suite is a field installable option on MX product lines. Key features of the Compliance Suites include:

- Agile Log Reporting—Lets administrators create highly customized reports from easy-to-use templates. Lets administrators create reports for different mandates in seconds with no vendor intervention.
- Log Learning—Powerful and intelligent dynamic learning lets administrators set alerts based on changes to individual Cisco devices, groups of Cisco devices, or the network.
- Log Forensics—Indexing and Google-like search algorithms allow near-instant data retrieval search terabytes of unaltered, unfiltered data in seconds.
- Open Log Routing—Routes raw data, reports and alerts to existing SIEM, network management, trouble ticket, and LogLogic Compliance Manager products.
- Log Process Audit—Enables network activity audits to provide proof of compliance or critical information for legal proceedings.

 Table 1. Comparison of LogLogic MX, ST, and LX Appliances

	MX Appliance	ST Appliance	LX Appliances
Description	All-in-one log collection, report- ing, management and compliance solution for SMB	Enterprise scal- able log collection, storage, archive, search, and alerting	Enterprise scal- able log analytics, reporting, and compliance reporting
Number of Users (Admin)	unlimited	unlimited	unlimited
Events Per Second (eps)	1000 eps	75,000 - 150,000 eps	5,000 - 10,000 eps

Deploying Loglogic MX Solution

This section outlines the steps required to configure the LogLogic appliances to process log data from Cisco devices.

Setting up the LogLogic Appliance

This section provides an overview on setting up the LogLogic appliance using the GUI. Specifically, this section goes over the following steps:

- 1. Connecting the appliance to a network
- 2. Logging into the appliance
- 3. Configuring log source auto-identification
- 4. Configuring network settings
- 5. Setting the time zone and time

Setting up the appliance is extremely fast and simple.

Step 1: Connecting the Appliance to a Network

The LogLogic appliance initially uses a default network address of 10.0.0.11 with a network mask of 255.255.255.0. Use a switch or an Ethernet crossover cable to make a direct connection between the appliance and a workstation configured with a 10.0.0.0/24 address.

Step 2: Logging in to the Appliance

- 1. Open a web browser on your workstation and connect to the appliance by entering https://10.0.0.11 in the browser address line.
- 2. Click **YES** to accept the certificate. A login screen appears, as shown in Figure 5.
- 3. Enter the default username (admin) and password (admin). The Appliance displays the End User License Agreement (EULA).
- 4. Accept the EULA. The Appliance asks you to enter a new password, which must contain at least one number.

- 5. Enter a new password. The Appliance displays the navigation menu, and a warning that the time is not yet set on the Appliance. You can ignore this warning; it is addressed later in this procedure.
- 6. Create a secondary administrative account.

Figure 5. The Login Screen

🗟 LogLogic - Login Page - Microsoft Internet Explorer	
File Edit View Favorites Tools Help	<u>#</u>
🔇 Back - 🔘 - 🗷 😰 🐔 🔎 Search 👷 Favorites 🤣 🍰 🕞 🏂	
Ackhress 💣 https://10.0.0.11/log.app20/loginPage	So Links **
	LogLogie MX 2010
Canal Canal	Login

Step 3: Configuring Log Source Auto-Identification

The auto-identification feature allows the appliance to quickly discover the actual Cisco product name and use this as the name of the device. Not all devices can be auto-identified, but for those that can, this feature is extremely handy in helping to easily identify the device.

- 1. Expand the Administration option in the left margin of the browser window.
- 2. Under Administration, select **System Settings**. The **General** tab appears.
- 3. Next to Auto-identify Log Sources, select Yes.
- 4. If you want to enable SSH connections to the appliance, next to **Enable SSH Daemon at Startup**, select **Yes**.
- 5. Click Update.

Step 4: Configuring Network Settings

- 1. Under System Settings > Administration, select the Network tab, shown in Figure 6.
- 2. Configure the IP address information for your network, then click Update.
- 3. Select **Reboot Later**. The following step, in which you configure time settings, will also prompt for a reboot, so both network and time settings can be applied at the same time.

Figure 6. The Network Settings Tab

logl.ogic - MX 2010 - admin - M	icrosoft Internet Explorer			
File Edit View Favorites Tools I	мþ			
3 tock + 3 - 1 2 🐔	Search 👷 Favorites	🙆 🙆 👹 📾 🍪		
Address a https://10.0.0.11/logapp20/lo	girPage			🛩 🛃 Go 🛛 Links 🏁
loglogic.	User 10 - admin General Remot	o Servers - Data Referition	Time Legis Page Patsword Control 🕤	LogLogic MX 2010 (Help][Log Out]
Dashbeards System Status Log Source Status Real: Time Viewer Starch Adents Custom Reports Starch Real-Time Reports Starmary Reports Perfore.cos	Hostnane let Ao 2 Defaut Gotoway P 10 DNS Servers	ulhed haan betti 8021		
■ Advanted atten Access Carted Decine Configuration Chill Funct Decision Period Experiment Records Provide Manage Convext Manage Convext Manage Status Manage Finding Provide Manage Finding	Prefice network setting entro	P Address [10:00:011 #52 His lova(0)	Netnask 259 356 300 0 Uppfarb	

Figure 7. Configuring System Time and Time Zone



Reader Tip

Time zone configuration is important to the operation of the appliance. If you select an incorrect time zone, your reports and CLI access might not function properly. To ensure consistency of log timestamps, make sure that the NTP time source used by your appliance is the same one used by your routers, firewalls, and other network devices.

Step 5: Setting the Time Zone and Time

- 1. Under Administration > System Settings, select the Time tab, shown in Figure 7.
- 2. Select the appropriate time zone from the Time Zone drop-down menu.
- 3. Select **Update Time** to define how to synchronize the appliance clock with your local time.
- Cisco recommends using the Network Time Protocol (NTP) to ensure that information is logged with consistent timestamps. Select NTP Server and provide the address of a time source that is reachable from your network.
- 5. Click **Update**. When notified that the appliance will be rebooted to apply the settings, click **OK**.

Sending Logs from Cisco Devices to a LogLogic MX Appliance

Sending Syslog Messages from Cisco Routers and Firewalls to the LogLogic Appliance

This section describes the steps required to configure a Cisco ASA 5500 Series Adaptive Security Appliance or a Cisco Integrated Services Router (ISR) to send syslog messages to a LogLogic appliance.

Configuring a Cisco ASA 5500 to Generate Syslog Events

Enter the following global-configuration command:

logging host inside **ip-address-of-loglogic**

For example, if the LogLogic appliance has IP address 10.4.200.112, enter: logging host inside 10.4.200.112

Press Ctrl + Z to exit config mode, and then type the following command to save the configuration changes:

copy running-config startup-config

Configuring a Cisco ISR to Generate Syslog Events

Enter the following global-configuration command:

logging ip-address-of-loglogic

For example, if the LogLogic appliance has IP address 10.4.200.112, enter: logging 10.4.200.112

Press Ctrl + Z to exit config mode, and then type the following command to save the configuration changes:

copy running-config startup-config

Note that no special configuration steps are required on the LogLogic appliance in order to receive syslog messages.

Retrieving Event Records from Cisco Intrusion Prevention System (IPS) Sensors

This section describes the configuration steps on a Cisco IPS 4200 Series device to allow a LogLogic appliance to collect security events using the Security Device Event Exchange (SDEE) protocol.

Configuring a Cisco IPS 4200 for SDEE

To allow SDEE to function properly, the IPS must allow access to its HTTP or HTTPS service, and must also provide a username and password that the LogLogic appliance can use to authenticate its requests. The viewer privilege is sufficient to retrieve SDEE events, so a good security practice is to create a separate username for this purpose with the minimum privilege level required. For example, to create a user named "sensor", type the following configuration command on the IPS:

username sensor privilege viewer

The IPS will prompt you to choose the password for the user.

Setting Up a LogLogic Universal Collector to Retrieve SDEE Events from Cisco IPS 4200 Series Sensors

This section provides an overview on setting up the LogLogic Universal Collector (UC) and Universal Collector Manager (UCM) using the GUI in order to collect Cisco IPS events via SDEE.

Prior to configuring the UC ensure that you meet the following prerequisites:

- Proper UCM and UC application up and running (please refer to the LogLogic UC documentation for details)
- · User configured on the Cisco IPS sensor with at least viewer privilege
- HTTP or HTTPS server running on the Cisco IPS sensor

Step 1: Log Source Settings

In the UC GUI, go to **Collector Management > Add a log source** and select **Cisco IDS/IPS through SDEE**. Specify the address of the LogLogic LMI appliance to which the logs will be forwarded, and then create the Cisco IPS host entry, making sure to specify the IP address.

Step 2: Log Collector Settings

Select the collector you want to use (we recommend that you use a remote log collector), and then select the way the server is connecting to the log collector.

Step 3: Connection Settings

Specify the SDEE Connection Parameters of the Cisco IPS sensor, including IP address, login name, password, and port.

Step 4: Summary

Confirm the configuration as shown in Figure 8, and the UC configuration will be updated automatically.

Figure 8. Final Step of Configuring Universal Collector for SDEE

STEP 4. Summary.

Log Source Settings Log Collector Settings	By proceeding to the next step, the following parameters will be applied on your configuration:						
Connection Settings Summary Configuration Completed	The Log Source is of type Cisco IDS/IPS through SDEE and is installed on host ciscoips1 . The Log Source will be called ciscoips1_sdeeToLmi2 . After the next step, you will not be able to modify this name.						
	The log collector ciscoips1 will be used to collect the information. The log collector will be installed on host ciscoips1 .						
	The messages will be forwarded to the LMI (LX/ST/MX) 10.1.19.83.						
	Specify the SDEE Connection Parameters:						
	Address: 10.60.0.109 Login: admin Password: ******** Port: 443						
	Previous 🕨 Confirm						

Sending Cisco IronPort Email Security Appliance Logs to an Intermediate Host

This section describes the configuration steps involved to send logs from a Cisco IronPort Email Security Appliance to an FTP server on your network, from which the LogLogic appliance will then retrieve them. There are numerous logs maintained by the Cisco IronPort Email Security Appliance; in the example below, we demonstrate how to export the IronPort Text Mail Logs.

Configuring a Log Subscription for Mail Logs

- 1. In the Email Security Appliance web management interface, go to **System** Administration > Log Subscriptions and click Add Log Subscription.
- 2. Select IronPort Text Mail Logs from the Log Type drop-down list.
- 3. Provide a Log Name, which will be used to name the directory created on the FTP server to hold the log files, and a File Name, which will be used as the basis for the individual log file names within that directory.
- 4. Next to **Retrieval Method**, select **FTP on Remote Server** and supply the FTP information for an intermediate host on your network, to which the Cisco IronPort Email Security Appliance will push the log files, as shown in Figure 9.

Figure 9. Log Subscription Configuration on the Cisco IronPort Email Security Appliance

I) IR	ONPORT C3	50				υ
	Monitor	Mail Policies	Security Services	Network	System Administration	
	es es 12					

Edit Log Subscription

og Subscription					
Log Type:	IronPort Text Mail Logs				
Log Name:	[mail_logs (will be used to name the log directory)				
File Name:	mail				
Maximum File Size:	95M (Add a trailing K or M to in	dicate size units)			
Log Level:	C Critical (The least detailed setting, Only errors are logged.) C Warning (All errors and warnings created by the system.) C Information (Captures the second-by-second operations of the system. Recommended.) C Debug (Wore specific data are logged to help debug specific problems.) C Trace (The most detailed setting, all information that can be is logged. Recommended for developers only.)				
Retrieval Method:	C FTP on esa.dc.ssu.org				
	Maximum Number of Files: 10				
	FTP on Remote Server				
	Maximum Time Interv Between Transferring	al 3600 seconds			
	FTP Hos	10.4.200.112			
	Directory	: /			
	Username	logupload			
	Password				

Sending Cisco IronPort Web Security Appliance Logs to an Intermediate Host

This section describes the configuration steps involved to send logs from a Cisco IronPort Web Security Appliance to an FTP server on your network, from which the LogLogic appliance will then retrieve them. There are numerous logs maintained by the Cisco IronPort Web Security Appliance; in the example below, we demonstrate how to export Access Logs.

Configuring a Log Subscription for Access Logs

- 1. In the Web Security Appliance management interface, go to System Administration > Log Subscriptions and click Add Log Subscription.
- 2. Select Access Logs from the Log Type drop-down list. Leave Log Style set to the default value of Squid.
- 3. Provide a Log Name, which will be used to name the directory created on the FTP server to hold the log files, and a File Name, which will be used as the basis for the individual log file names within that directory.
- 4. Next to **Retrieval Method**, select **FTP on Remote Server** and supply the FTP information for an intermediate host on your network, to which the Cisco IronPort Web Security Appliance will push the log files, as shown in Figure 10.

Figure 10. Log Subscription Configuration on the Cisco IronPort Web Security Appliance

		_					
Monitor	Web Security Manager	с: 	Security Services	Network	System Administration		
dit Log Sub	scription	_					
og sabsteription	Log Type:	Ac	cess Logs				
	Log Name:	ac (v)	cessiogs will be used to name the log	directory)			
	Log Style:	600	Squid Apache Squid Details				
	Custom Fields (optional):): %k %p %u %KF Custom Fields Referen					
	File Name:	e: aclog					
	Maximum File Size:	10 (A	G idd a trailing K, M, or G to i	indicate size units)			
	Log Compression:		Enable				
	Log Exclusions (Optional):	(8	inter the HTTP status codes	of transactions th	at should not be included in the Access Log)		
	Retrieval Method:	0	FTP on mgmt.ironport.wsa	s.ssu.org			
		Maximum Number of Files: 100					
		()	FTP on Remote Server				
			Maximum Time Interval Between Transferring:	3600 seconds			
			FTP Host:	10.4.200.112			
			Directory:	1			
			Username:	wsa			
				-			

Configuring the LogLogic Appliance to Receive Logs from Cisco IronPort Web and Email Security Appliances

This section shows how to configure LogLogic to import the log files from the intermediate FTP server, configured in the previous procedure. Use the **Add File Transfer** tab to add a remote log source from which you intend to transfer files. After you have added all the remote log sources, you can specify rules using the **File Transfer Rules** feature.

Step 1: Add the FTP Server as a New Device

- 1. In the LogLogic web management interface, go to Administration > Manage Devices and select the Devices tab
- 2. Click Add New.
- 3. In the Name field, type a name for the log source.
- 4. Type an optional description in the Description field.
- 5. From the **Device Type** drop-down menu, select the type of logs to be transferred; for example, for Access Logs from a Cisco IronPort Web Security Appliance, select **Squid**.
- 6. In the **Host IP** field, type the IP address of the FTP server from which you want to transfer files.
- 7. Set Enable Data Collection to Yes.
- 8. Click Add.

Figure 11. Adding a New Device

loglogic	User ID - admin						
10810810	Add Device	File Transfe	er Rule				?
Dashhoards System Status Log Source Status	Name	Cisco Ironport_WS	IA				
Real-Time Viewer Search Alerts	Description					_	
Custom Reports Real-Time Reports Summary Reports Preferences	Device Type Enable Data Collecti	Squid an ⊙Yes ○No	×	Host IP	10.4.240.15	Ċ	
Administration Access Control Backup Configuration Check Point Devices	Refresh Device File Transfer History	e Name through DNS Lo	okups				
File Transfer History ImportExport Manage Devices Manage Packages Manage SSL Certificate Manage Users Manage Brating					Cancel	Add	
PIX/ASA Messages Port Descriptions System Settings							

Step 2: Define a File Transfer Rule

- 1. Select the File Transfer Rule tab.
- 2. Ensure that the device you created in Step 1 is selected, and click Add Rule
- 3. In the resulting Add File Transfer Rule tab, enter a name for this rule in the Rule Name field
- 4. Leave Protocol set to FTP, and enter the FTP configuration information in the User ID, Password, and Verify Password fields.
- 5. In the **Files** field, enter the path and file name of the log files on the FTP server. Note that the file name will be the same as the log file name on the Cisco IronPort Email or Web Security Appliance.
- 6. Under Collection Time, select the desired file collection interval.
- 7. Set Enable to Yes.
- 8. Click Add.

Figure 12. Configuring a File Transfer Rule

	Modify Devic	ce N	fodity File Transfe	r Rule		
Dashboards System Status Log Source Status Real-Time Viewer Search Jierts	Device Name Rule Name	wsa_tile_devi	ice			
Custom Reports Real-Time Reports Summary Reports	Protocol Passsword	FTP		User ID Verify Password	wea	_
Preferences	Files	webcat_"				·
Administration Access Control Backup Configuration	File Format	Squid Native		M		
Check Point Devices File Transfer History Import/Export	Evory	10 Minu	ites 🗸 🗸	Ī		
Manage Devices Manage Packages	O Every	10 Hour	s 19			
Manage SSL Certificate Manage Users Message Routing	O Weekh	y on Sunday		00.00	2	
PIX/ASA Mossages Port Descriptions System Settings	File Transfer History		View)		
aintenance	Lise Advanced D	Dunlication Dete	ection 💿 yes 🔿	No		

Exporting Event Records from Cisco Security MARS to the LogLogic Appliance

This section describes the configuration steps involved to enable archive file export on Cisco Security MARS.

Configuring Cisco Security MARS to Export Archive Files

The Cisco Security MARS appliance can export archive copies of events, sessions, and raw messages (ES files). The archives can be saved to an external network-attached storage (NAS) system or other host using the Network File System (NFS) or Secure FTP (SFTP) protocols. Raw event records are exported at ten-minute intervals.

You can use the same server to archive the data for more than one Cisco Security MARS appliance; however, you must specify a unique directory in the path for each appliance that you want archive. If you use the same base directory, the appliances overwrite each other's data, effectively corrupting the images.

For information on enabling archive file export, please see the "Backup, Recover, Restore, and Standby Server Options" chapter of the *Cisco Security MARS Initial Configuration and Upgrade Guide* at the following URL: <u>http://www.cisco.com/en/US/docs/security/security_management/</u> <u>cs-mars/6.0/initial/configuration/bckRstrSby.html#wp1270005</u>.

Adding Devices Monitored by the LogLogic Appliance

This guide assumes that you have already configured Cisco Security MARS to receive event logs from the other Cisco devices on your network. Those logs are passed along from Cisco Security MARS to the LogLogic appliance in the raw event records, exactly in the form they were received. To load the records into LogLogic, perform the following steps. Note that while Cisco Security MARS uses either NFS or SFTP to export its logs, the LogLogic appliance appliance can use any supported transfer mechanism to import the files.

Step 1: Add the File Server as a New Device

- 1. In the LogLogic web management interface, go to Administration > Manage Devices and select the Devices tab
- 2. Click Add New.
- 3. In the Name field, type a name for the log source.
- 4. Type an optional description in the Description field.
- 5. From the Device Type drop-down menu, select Other File Device.

- 6. In the Host IP field, type the IP address of the server from which you want to transfer files.
- 7. Set Enable Data Collection to Yes.
- 8. Click Add.

Step 2: Define a File Transfer Rule

- 1. Select the File Transfer Rule tab.
- 2. Ensure that the device you created in Step 1 is selected, and click Add Rule.
- 3. In the resulting Add File Transfer Rule tab, enter a name for this rule in the Rule Name field
- 4. Select the appropriate Protocol, and enter the required configuration.
- 5. In the Files field, enter the */ES/rm-* to collect all of the raw message files.
- 6. Under **Collection Time**, select the desired file collection interval. Remember that Cisco Security MARS exports archive files at tenminute intervals, regardless of the LogLogic configuration.
- 7. Set Enable to Yes.
- 8. Click Add.

Figure 13. File Transfer Configuration for Cisco Security MARS



Searching and Generating Reports

LogLogic's searching and reporting capabilities enable users to search, analyze and make sense of log data from a wide variety of connected log sources quickly and effectively. Users can use LogLogic's reporting capabilities to create customizable real-time reports, send information to executives at regular intervals, and perform ad-hoc searches for troubleshooting or issue remediation. The LogLogic solution ships with built-in intelligence and report templates for access control, user accounting, network connectivity and policy, IDS and VPN activity, and web surfing activity. Report templates can easily be customized to suit the end-user's particular reporting requirements. Reports can be generated, emailed, and exported as PDF or CSV files on demand.

In addition, LogLogic also offers high-speed full-text indexed raw log data search capabilities. This combines keyword search features with data querying features into one overall search process. The keyword search for log messages uses Boolean expressions; AND, OR, and NOT are applied as logical operators to help users focus searches on the messages of interest. Data querying settings assure that all messages satisfying specified criteria (not just those assumed to be most relevant) are delivered, sorted by time. LogLogic's index search delivers only those messages which fully satisfy the Boolean search criteria. Finally, advanced regular expression searches add more power to searches.

Generating Reports

Report Configuration

Real-time reports are can be configured and customized freely. LogLogic's dynamic report configuration page provides options for the users to customize everything pertaining to the summarization and presentation of the reports. For example, the following figure shows that users can choose the devices or device groups as well as the timeframe in which the reports should be run. Users can choose to run reports for the last hour, or specify a time range, as illustrated in Figure 14.

Figure 14. Reporting Active Firewall Connections

Active FW Connections	•
Saved Qustom Re port De vice Type Cisco ASA Cisco PIX P Address Port	COE AII Cisco ASA C
Protocol All Time Interval Time Interval The selected time interval spans from 04/26/10 19:20:15 to HouryPeriods Last Hour	04/26/10 20:20:15.
Time Period From : Date 04/26/10 mm/ddd/yy The Date 04/26/10 mm/ddd/y The Date 04/26/10 mm/ddd/y The Date 04/26/10 mm/ddd/y The Date 04/26/10 mm/ddd/y The Date 04/26/10 mm/dd/y The Date 04/26/	e 00:00:00 hb:mm:ss
To: Date (Un/2011) III Tim mm/ddd/yy	b):mm:ss
Advanced Options Save Oustom Report	
	Save As CSV Run

Report Results

After the report configuration parameters are chosen, pressing the **Run** button on the lower right of the screen will cause the specified report to be executed. An example **Denied Connections** report is shown in Figure 15.

Figure 15. A Sample Report

	Denied Connections	1 0	thart						1 of 2581 Pa	
	Source Device +	Attempts	Drc IP	Brc Port	Dest P	DestPort	Protocol	Description	Access Group	Direction
01	All Cisco PIX	1	65 23 244 21	eny	45.200.115.161	3127	тcp		outside_access_in	INBOUND
2	All Cisco PIX	1	194 2 12.118.46	en y	45.200.103.102	8	icm p		outside_access_in	INBOUND
3	All Cloco PIX	1	200.207.11.116	any	45.200.85.93	8	icm p		outside_access_in	INBOUND
- 4	All Cisco PIX	1	64 23 1.123.110	any	45.200.39.89	8	icm p		outside_access_in	INBOUND
0 5	All Cisco PIX	1	85 23 244 21	any	45.200.115.44	3127	top		outside_access_in	INBOUND
6	Al Cisco PIX	2	85.138.3.5	any	45 200 202 39	3127	юp		outside_access_in	INBOUND
07	All Cisco PIX	1	80.63.125.43	any	45.200.218.123	8	icm p		outside_access_in	INBOUND
. 8	All Cisco PIX	1	81.71.134.163	eny	45.200.34.60	3127	юр		outside_access_in	INBOUND
9	All Cisco PIX	1	218.83.155.79	eny	45.200.137.208	80	юp	-	outside_access_in	INDOUND
10	All Cisco PIX	1	64.62.145.98	eny	45.200.131.95	4899	юp		outside_access_in	INBOUND
. 11	All Cisco PIX	1	81.68.205.94	any	45.200.243.117	8	icm p		outside_access_in	INBOUND
12	All Cloco PIX	2	222.136.102.159	any	45.200.212.164	80	кp		outside_access_in	INDOUND
13	All Cisco PIX	1	219.132.166.33	eny	45.200.50.60	8	icm p		outside_access_in	INBOUND
14	All Cisco PIX	1	80.181.106.201	en y	45 200 247 229	8	icm p		outside_access_in	INBOUND
15	All Cisco PIX	1	80.12.48.233	any	45.200.163.202	8	km p		outside_access_in	INDOUND
16	All Cisco PIX	1	85.136.171.19	en y	45.200.1.27	0	icm p		outside_access_in	INDOUND
17	Al Cisco PIX	з	68.54.252.114	any	45.200.178.204	80	жp	waran	outside_access_in	INBOUND
18	All Cisco PIX	1	59.159.151.165	any	45,200.184.162	8	icm p		outside_access_in	INBOUND
19	All Cisco PIX	2	68.48.245.83	any	45.200.12.157	00	жp	waran	outside_access_in	INDOUND
20	Al Cisco PIX	1	218.168.172.232	any	45 200 18 222	8	icm p		outside_access_in	INBOUND

In addition, by selecting the **Chart** tab, a chart of the associated report will be displayed.

Figure 16. A Sample Chart

Denied Connections First 12 "Attempts" for Cisco PIX sorted by Source Device Descending



Device - All Cisco PKK Src IP - 65.23.244.21 Dest IP - 45.200.115.161 Access Group - outside_access_i Direction - INBOUND Device - All Cisco PKK Src IP - 164.212.118.46 Dest IP - 45.200.103.102 Access Group - outside_access_i Direction - INBOUND Device - All Cisco PKK Src IP - 200.207.11.116 Dest IP - 45.200.39.89 Access Group - outside_access_i Direction - INBOUND Device - All Cisco PKK Src IP - 64.231.123.110 Dest IP - 45.200.39.89 Access Group - outside_access_i Direction - INBOUND Device - All Cisco PKK Src IP - 64.231.123.110 Dest IP - 45.200.39.89 Access Group - outside_access_i Direction - INBOUND Device - All Cisco PKK Src IP - 65.23.244.21 Dest IP - 45.200.202.39 Access Group - outside_access_i Direction - INBOUND Device - All Cisco PKK Src IP - 8513.83.50 Dest IP - 45.200.223.94 Access Group - outside_access_i Direction - INBOUND Device - All Cisco PKK Src IP - 8513.83.50 Dest IP - 45.200.223.94 Access Group - outside_access_i Direction - INBOUND Device - All Cisco PKK Src IP - 8513.51.51.22 Dest IP - 45.200.224.54 Access Group - outside_access_i Direction - INBOUND Device - All Cisco PKK Src IP - 813.83.51.22 Dest IP - 45.200.284.152 Access Group - outside_access_i Direction - INBOUND Device - All Cisco PKK Src IP - 815.155.156.156 Dest IP - 45.200.77.55 Access Group - outside_access_i Direction - INBOUND Device - All Cisco PKK Src IP - 53.159.151.165 Dest IP - 45.200.77.55 Access Group - outside_access_i Direction - INBOUND Device - All Cisco PKK Src IP - 68.31.23.18 Dest IP - 45.200.77.55 Access Group - outside_access_i Direction - INBOUND Device - All Cisco PKK Src IP - 68.31.23.12.18 Dest IP - 45.200.178.204 Access Group - outside_access_i Direction - INBOUND Device - All Cisco PKK Src IP - 68.31.23.12.18 Dest IP - 45.200.178.204 Access Group - outside_access_i Direction - INBOUND Device - All Cisco PKK Src IP - 68.31.21.21.21.21 Dest IP - 45.200.178.204 Access Group - outside_access_i Direction - INBOUND

Index Search

Index searches are accessed via the **Search > IndexSearch** navigation menu item. An example Index Search result is show in Figure 17.

Figure 17. Index Search Example



Compliance Reports

LogLogic Compliance Suites deliver automated process validation, reporting and alerts based on infrastructure data to evidence, and enforce agency and IT policies related to compliance. By automating compliance reporting and alerting based on critical infrastructure data collected and stored by LogLogic Appliances, the LogLogic Compliance Suites reduce complexity and resource requirements for implementing control frameworks like PCI, COBIT/SOX, HIPAA, HITECH, FISMA, ITIL, ISO, and NERC. Each LogLogic Compliance Suite delivers 100+ reports and 75+ alerts—both easily customizable—specifically tuned to a particular control framework, for execution on LogLogic Appliances.

Figure 18. Customized Compliance Reports

	cusit	om Reports		₩ cf c 1 of 1 3 pr Page;						
View:	Se	le ct	•							
			Name +	Description						
1		Run	Gisco Router Config Changes	Cisco Router Config Changes						
2		Run	PCI: Cisco PIX Failover Disabled	Displays all logs related to disabling Cisco PIX's failover capability.						
3		Run	PCI: Cisco PIX Failover Performed Displays all logs related to performing a Cisco PIX failover							
4		Run	PCI: Cisco PIX Policy Changed Displays all configuration changes made to the Cisco PIX firewall							
5		Run	PCI: Cisco PIX Restarted Displays all Cisco PIX restart activities to detect unusual activities							
6		Run	PCI: Cisco PIX Routing Failure Displays all Cisco PIX routing error messages							
7		Run	PCI: Cisco Routers and Switches Restart	Displays all Cisco routers and switches	s restart activities to detect un	nusual activities				
8		Run	PCI: Cisco Switch Policy Changes	Displays all configuration changes to t	he Cisco router and switch po	licies.				

LogLogic Example

The following example scenario shows how an Application Distribution report, using logs from an agency's Cisco ASA 5500 Series firewall, can reveal anomalous patterns in network usage, and help to detect malicious or other undesirable activity.

The Application Distribution report can be used to validate that corporate network policies, such as permissible network applications, network bandwidth QoS, and so on, are being followed. The report can be accessed in the web interface by going to **Real-Time Reports > Connectivity > Application Distribution**. An example report is shown in Figure 19. The example shows fairly common network traffic, including web browsing on ports 80 and 443, email traffic on ports 25 and 110, domain lookups, and management traffic. However, note the highlighted outbound TCP session on port 5190, associated with AOL Instant Messenger (AIM) traffic. In our example, this calls for closer investigation, possibly because the agency's network policies do not permit this chat client to be used.

	Application Distribution			Chart		385		e 1 c	
	Source Device	Port	Protocol	Description	Outbound Connections	Outbound Bytes *	Bar Graph	Percentage	
1	All Cisco PIX	443	ъp	https	8	4006478		35.77	
2	All Cisco PIX	110	tcp	pop3	8	2533094		22.62	
3	All Cisco PIX	80	tcp	*****	87	2425042 ·		21.65	
4	All Cisco PIX	22	tcp	ssh	0	865418		7.73	
5	All Cisco PIX	161	udp	snm p	31	308989	-	2.76	
6	All Cisco PIX	25	tcp	sm tp	0	304724	1	2.72	
7	All Cisco P1X	3128	top		1	228405	1	2.04	
8	All Cisco PIX	1443	tcp		0	195362		1.74	
9	All Cisco PIX	53	udp	domein	868	66994		0.60	
10	All Cisco PIX	514	udp	syslog	4	64924		0.58	
11	All Cisco PIX	5190	top	aol	1	55165	-	0.49	
12	All Cisco PIX	995	tcp	pop3s	0	31174		0.28	
13	All Cisco PIX	1863	top		0	30045	-	0.27	
14	All Cisco PIX	59255	udp		2	11205		0.10	
15	All Cisco PIX	6271	top		0	7284		0.07	
16	All Cisco PIX	48904	tcp		0	5298		0.05	
17	All Cisco PIX	5004	udp		1	4437	-	0.04	
18	All Cisco PIX	1723	tcp	pptp	0	4416		0.04	
19	All Cisco PIX	389	udp	Idap	14	3344		0.03	
20	All Cisco PIX	2020	top		1	3276		0.03	

Figure 19. Application Distribution Report Example

Clicking on the 5190 port number in the Application Distribution report shows details about the individual connections, and reveals that there are a number of internal users at IP address 45.200.x.y interacting with AOL servers. In this example scenario, this indicates widespread policy violations, suggesting the need to adjust outgoing firewall rules, and also to increase user awareness of the acceptable use policy on the network.

Figure 20. Detailed Investigation Example

1	Source Device	Source IP	Destination P	Port	Description	Messages *	In Evtes	Out Bytes
1	Al Claco PIX	205.188.12.92	45 200.1 229	10p /5190	aci	9	46925	0
2	All Cisco PIX	64.12.28.236	45,200.1,229	tcp /5190	eol	7	337633	0
3	All Cisco PIX	205.188.248.144	45 200 1 229	tcp /5190	aol	6	10878	0
4	All Cloco PIX	64.12.24.188	45 200 99 238	tcp /5190	aol	5	125510	0
3 5	All Cisco PIX	64.12.201.36	45 200.99 246	tcp /5190	loa	5	9460	0
6	All Cloco PIX	45.200.99.246	64.12.201.36	tcp /5190	60	4	0	7568
7	All Claco PIX	207.200.122.170	45,200,40,45	udp /5190	eol	4	19905	0
8	All Cloco PIX	64.12.29.76	45 200.99 238	tcp /5190	eol	3	10302	0
9	All Cisco PIX	64.12.161.185	45 200 99 254	tcp /5190	ad	3	2063	0
10	All Cisco PIX	64.12.28.236	45.200.99.246	tcp /5190	los	3	105254	0
11	All Cisco PIX	45,200.1.229	64.12.28.236	tcp /5190	eol	2	0	70495
12	All Cisco PIX	64.12.26.56	45.200.99.254	tcp /5190	loa	2	12303	0
13	All Cisco PIX	205.188.153.121	45.200.99.246	tcp /5190	eol	2	1398	0
14	All Cisco P1X	64.12.24.188	45 200 1 218	tcp /5190	aol	1	20	0
15	All Cloco PIX	207.200.122.163	45.200.1.231	udp /5190	eol	1	24	0
16	All Cisco PIX	205.168.12.96	45 200 99 249	tcp /5190	loa	1	17164	0
17	All Cisco PIX	64.12.165.89	45,200.99,246	10p /5190	loe	1	886	0
18	All Cisco PIX	64.12.161.185	45.200.1.218	tcp /5190	eol	1	6-30	0
19	All Cisco PIX	205.188.72.10	45,200.1.213	tcp /5190	eol	1	70609	0
20	Al Cisco Pix	64.12.28.208	45 200.1 225	tcp /5190	ad	1	6216	0

Products Verified with Cisco SBA

LogLogic MX 3020 Appliance version 4.9.0.1 has been verified with Cisco SBA using the following software versions:

- · Cisco ASA 5500 Series 8.2(1)
- Cisco IOS Software Release 15.0(1)M2
- · Cisco IOS XE Release 2.6.1
- Cisco Intrusion Prevention System 7.0.(2)E3
- Cisco IronPort AsyncOS Version 7.1 for Email
- Cisco IronPort AsyncOS Version 6.3 for Web
- · Cisco Security MARS 6.0.5

Contact Information

End Users

- Please contact <u>sales@loglogic.com</u> with any questions
- Submit an inquiry about Loglogic Products and the Cisco SBA for Large Agencies—Borderless Networks

Resellers

- Please contact info@loglogic.com for any questions
- For more information on how to become a LogLogic reseller, please visit the Partner Section at <u>http://www.loglogic.com</u>

For more information on the Loglogic and Cisco Partnership, please visit <u>http://www.cisco.com/go/securitypartners</u>

Appendix A: SBA for Large Agencies Document System







Americas Headquarters Cisco Systems, Inc. San Jose, CA

Asia Pacific Headquarters Cisco Systems (USA) Pte. Ltd. Singapore Europe Headquarters Cisco Systems International BV Amsterdam, The Netherlands

Cisco has more than 200 offices worldwide. Addresses, phone numbers, and fax numbers are listed on the Cisco Website at www.cisco.com/go/offices.

Cisco and the Cisco Logo are trademarks of Cisco Systems, Inc. and/or its affiliates in the U.S. and other countries. A listing of Cisco's trademarks can be found at www.cisco.com/go/trademarks. Third party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1005R)

C07-641093-00 12/10