

Configuring the Multiprotocol over ATM Client

This chapter describes the required and optional tasks for configuring the Multiprotocol over ATM (MPOA) client (MPC).

For a complete description of the commands in this chapter, refer to the *Cisco IOS Switching Services Command Reference*. To locate documentation of other commands that appear in this chapter, use the command reference master index or search online.

To identify the hardware platform or software image information associated with a feature, use the Feature Navigator on Cisco.com to search for information about the feature or refer to the software release notes for a specific release. For more information, see the section “[Identifying Supported Platforms](#)” in the chapter “Using Cisco IOS Software.”

The MPC functionality involves ingress/egress cache management, data-plane and control-plane virtual circuit connection (VCC) management, MPOA frame processing, and participation in MPOA protocol and MPOA flow detection.

How MPC Works

The MPC software module implements the functionality of the MPC in compliance with the ATM Forum MPOA specification. An MPC identifies packets sent to an MPOA-capable router over the nonbroadcast multi-access (NBMA) network and establishes a shortcut VCC to the egress MPC, if possible. The MPC then routes these packets directly over this shortcut VCC, bypassing the intermediate routers and enabling the fast routing of internetwork-layer packets across an NBMA network. The Catalyst 5000 series switch can be designated as an MPC. If the Catalyst 5000 series switch is configured with an RSM/VIP2 (with an ATM interface) it can be configured as an MPC or an MPS.

A router is usually designated as an MPOA server (MPS), but can also be designated as an MPC. MPC on the router is primarily meant to provide router-initiated and router-terminated shortcuts for non-NBMA networks. For this reason, MPC information in this chapter primarily refers to the Catalyst 5000 series switch, and MPS information refers to the router or the RSM/VIP2 with an ATM interface in a Catalyst 5000 series switch.

MPC Configuration Task List

To configure an MPC on your network, perform the tasks described in the following sections. The first two sections contain required tasks; the remaining tasks are optional:

- [Configuring the ELAN ID](#) (Required)

- Configuring the MPC (Required)
- Configuring the MPC Variables (Optional)
- Monitoring and Maintaining the MPC (Optional)

Configuring the ELAN ID

For MPOA to work properly, a LEC must belong to an ELAN that has a defined ELAN ID. To obtain an ELAN ID, use either of the following commands in LANE database configuration mode:



Note

To configure an MPC on a Catalyst 5000 series ATM module, establish connection with the ATM module, enter privileged mode, and then enter configuration mode. For information on performing these tasks, refer to the *Catalyst 5000 Series Software Configuration Guide*.

Command	Purpose
Router(lane-config-dat)# name elan-name elan-id id	Defines an ELAN ID for the LEC (in LANE database configuration mode).
Router(lane-config-dat)# lane server-bus ethernet elan-name [elan-id id]	Configures the LEC with the ELAN ID (in interface configuration mode).



Caution

If an ELAN ID is supplied, make sure both commands use the same elan-id value.

Configuring the MPC

To configure an MPC on your network, use the following commands in beginning in global configuration modes:

Step	Command	Purpose
Step 1	Router(config)# mpoa client config name mpc-name	In global configuration mode, defines an MPC with a specified name.
Step 2	Router(config-if)# interface atm {mod-num/port-num number}	In interface configuration mode, specifies the ATM interface to which the MPC is associated.
Step 3	Router(config-if)# mpoa client name mpc-name	In interface configuration mode, attaches an MPC to the ATM interface.
Step 4	Router(config-if)# interface atm-num.sub-interface-num	In interface configuration mode, specifies the ATM interface that contains the LEC to which you will bind the MPC.
Step 5	Router(config-if)# lane client mpoa client name mpc-name	In interface configuration mode, binds a LEC to the specified MPC.
	Repeat Steps 4 and 5 for every LEC to be served by the MPC/MPS.	

Configuring the MPC Variables

An MPC has to be defined with a specified name before you can change its variables.

To change the variables for an MPC, use the following commands in MPC configuration mode:

Command	Purpose
Step 1 Router(mpoa-client-config) # mpoa client config name mps-name	Defines an MPC with the specified name.
Step 2 Router(mpoa-client-config) # atm-address atm-address	(Optional) Specifies the control ATM address that the MPC should use (when it is associated with a hardware interface).
Step 3 Router(mpoa-client-config) # shortcut-frame-count count	(Optional) Specifies the maximum number of times a packet can be routed to the default router within shortcut-frame time before an MPOA resolution request is sent.
Step 4 Router(mpoa-client-config) # shortcut-frame-time time	(Optional) Sets the shortcut-setup frame time for the MPC.

Monitoring and Maintaining the MPC


To monitor and maintain the configuration of an MPC, use the following commands in EXEC mode, as needed:

Command	Purpose
Router# show mpoa client [name mpc-name]	Displays information about a specified MPC or all MPCs.
Router# show mpoa client [name mpc-name] cache [ingress egress] [ip-addr ip-addr]	Displays ingress and egress cache entries associated with an MPC.
Router# show mpoa client [name mpc-name] statistics	Displays all the statistics collected by an MPC.
Router# clear mpoa client [name mpc-name] cache [ingress egress] [ip-addr ip-addr]	Clears cache entries.
Router# show mpoa client [name mpc-name] [remote-device]	Displays all the MPOA devices that this MPC has learned.
Router# show mpoa default-atm-addresses	Displays the default ATM addresses for the MPC.

MPC Configuration Example

This section contains an example of the commands needed to configure an MPC. The lines beginning with exclamation points (!) are comments explaining the command shown on the subsequent line. [Figure 99](#) shows an example of how you can configure your system to use MPOA.

Figure 99 Example of an MPOA Configuration

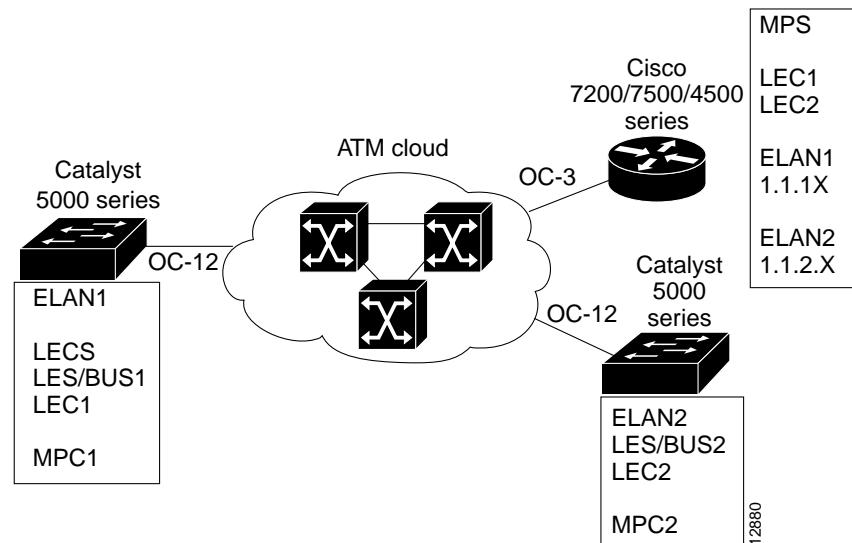

The following example configures the MPC and attaches the MPC to a hardware interface:

```

! Define the MPC "MYMPC"
mpoa client config name MYMPC
! Leave everything as default
exit
! Specify the ATM interface to which the MPC is attached
interface ATM 1/0
! Attach MPC MYMPC to the HW interface
mpoa client name MYMPC
! Specify the ATM interface that contains the LEC to which you will bind the MPC
interface atm 1/0.1
! Bind a LANE client to the specified MPC
lane client mpoa client name MYMPC
! Go back up to global config mode
exit

```

The following example shows a typical configuration file for the first MPC:

```

Current configuration:
!
version 11.3
! Go to LANE database config mode
exit
lane database mpoa-test
hostname mpc-1
! Define the ELAN ID and ATM address
name elan1 server-atm-address 47.00918100000000613E5A2F01.006070174821.01
name elan1 elan-id 101
name elan2 server-atm-address 47.00918100000000613E5A2F01.006070174821.02
name elan2 elan-id 102
! Define the MPC "mpc-1"

```

```
mpoa client config name mpc-1
    interface Ethernet0
! Go back up to global config mode
exit
! Specify the ATM interface to which the MPC is attached
interface ATM0
    atm pvc 1 0 5 qsaal
    atm pvc 2 0 16 ilmi
    lane config auto-config-atm-address
    lane config database mpoa-test
! Attach MPC mpc-1 to the HW interface
    mpoa client name mpc-1
! Specify the ATM interface that contains the LEC to which you will bind the MPC
interface ATM0.1 multipoint
    lane server-bus ethernet elan1
! Bind a LANE client to the specified MPC
    lane client mpoa client name mpc-1
    lane client ethernet 1 elan1
! Go back up to global config mode
exit
```

The following example shows a typical configuration file for the second MPC:

```
Current configuration:
!
version 11.3
hostname mpc-2
! Go back up to global config mode
exit
! Define the MPC "mpc-2"
mpoa client config name mpc-2
! Specify the ATM interface to which the MPC is attached
interface ATM0
    atm pvc 1 0 5 qsaal
    atm pvc 2 0 16 ilmi
    mpoa client name mpc-2
! Specify the ATM interface that contains the LEC to which you will bind the MPC
interface ATM0.1 multipoint
    lane server-bus ethernet elan2
    lane client mpoa client name mpc-2
    lane client ethernet 2 elan2
! Go back up to global config mode
exit
```

MPC Configuration Example