



Creating Dynamic VSANs

This chapter includes the following topics:

- [Information About DPVM, page 4-1](#)
- [Licensing Requirements for VSANs, page 4-4](#)
- [Guidelines and Limitations, page 4-4](#)
- [Default Settings, page 4-5](#)
- [Creating DPVM, page 4-5](#)
- [Monitoring DPVM, page 4-11](#)
- [Field Descriptions for DPVM, page 4-12](#)
- [Additional References, page 4-13](#)

Information About DPVM

Port VSAN membership on the switch is assigned on a port-by-port basis. By default each port belongs to the default VSAN.

You can dynamically assign VSAN membership to ports by assigning VSANs based on the device WWN. This method is referred to as Dynamic Port VSAN Membership (DPVM). DPVM offers flexibility and eliminates the need to reconfigure the port VSAN membership to maintain fabric topology when a host or storage device connection is moved between two Cisco MDS 9000 family switches or two ports within a switch. It retains the configured VSAN regardless of where a device is connected or moved. To assign VSANs statically, see [Chapter 2, “Configuring and Managing VSANs.”](#)

DPVM configurations are based on port world wide name (pWWN) and node world wide name (nWWN) assignments. A DPVM database contains mapping information for each device pWWN/nWWN assignment and the corresponding VSAN. The Cisco NX-OS software checks the database during a device FLOGI and obtains the required VSAN details.

The pWWN identifies the host or device and the nWWN identifies a node consisting of multiple devices. You can assign any one of these identifiers or any combination of these identifiers to configure DPVM mapping. If you assign a combination, then preference is given to the pWWN.

DPVM uses the Cisco Fabric Services (CFS) infrastructure to allow efficient database management and distribution. DPVM uses the application driven, coordinated distribution mode and the fabric-wide distribution scope (for information about CFS, refer to the *Cisco MDS 9000 Family NX-OS System Management Configuration Guide*).

Send documentation comments to dcnm-san-docfeedback@cisco.com



Note DPVM does not cause any changes to device addressing. DPVM only pertains to the VSAN membership of the device, ensuring that the host gets the same VSAN membership on any port on the switch. For example, if a port on the switch has a hardware failure, you can move the host connection to another port on the switch and you do not need to update the VSAN membership manually.



Note DPVM is not supported on FL ports. DPVM is supported only on F ports.

- [About DPVM Configuration, page 4-2](#)
- [About DPVM Databases, page 4-2](#)
- [About Autolearned Entries, page 4-3](#)
- [About DPVM Database Distribution, page 4-3](#)
- [About Locking the Fabric, page 4-4](#)
- [About Copying DPVM Databases, page 4-4](#)

About DPVM Configuration

To use the DPVM feature as designed, be sure to verify the following requirements:

- The interface through which the dynamic device connects to the Cisco MDS 9000 Family switch must be configured as an F port.
- The static port VSAN of the F port should be valid (not isolated, not suspended, and in existence).
- The dynamic VSAN configured for the device in the DPVM database should be valid (not isolated, not suspended, and in existence).



Note The DPVM feature overrides any existing static port VSAN membership configuration. If the VSAN corresponding to the dynamic port is deleted or suspended, the port is shut down.

About DPVM Databases

The DPVM database consists of a series of device mapping entries. Each entry consists of a device pWWN or nWWN assignment along with the dynamic VSAN to be assigned. You can configure a maximum of 16,000 DPVM entries in the DPVM database. This database is global to the whole switch (and fabric) and is not maintained for each VSAN.

The DPVM feature uses three databases to accept and implement configurations.

- Configuration (config) database—All configuration changes are stored in the configuration database when distribution is disabled.
- Active database—The database currently enforced by the fabric.
- Pending database—All configuration changes are stored in the DPVM pending database when distribution is enabled (see the “[About DPVM Database Distribution](#)” section on page 4-3).

Send documentation comments to dcnm-san-docfeedback@cisco.com

Changes to the DPVM config database are not reflected in the active DPVM database until you activate the DPVM config database. Changes to the DPVM pending database are not reflected in the config or active DPVM database until you commit the DPVM pending database. This database structure allows you to create multiple entries, review changes, and let the DPVM config and pending databases take effect.

About Autolearned Entries

The DPVM database can be configured to automatically learn (autolearn) about new devices within each VSAN. The autolearn feature can be enabled or disabled at any time. Learned entries are created by populating device pWWNs and VSANs in the active DPVM database. The active DPVM database should already be available to enable autolearn.

You can delete any learned entry from the active DPVM database when you enable autolearn. These entries only become permanent in the active DPVM database when you disable autolearn.



Note Autolearning is only supported for devices connected to F ports. Devices connected to FL ports are not entered into the DPVM database because DPVM is not supported on FL ports.

The following conditions apply to learned entries:

- If a device logs out while autolearn is enabled, that entry is automatically deleted from the active DPVM database.
- If the same device logs multiple times into the switch through different ports, then the VSAN corresponding to last login is remembered.
- Learned entries do not override previously configured and activated entries.
- Learning is a two-part process—Enabling autolearning followed by disabling autolearning. When the **auto-learn** option is enabled, the following applies:
 - Learning currently logged-in devices—Occurs from the time learning is enabled.
 - Learning new device logins—Occurs as and when new devices log in to the switch.

About DPVM Database Distribution

Using the CFS infrastructure, each DPVM server learns the DPVM database from each of its neighboring switches during the ISL bring-up process. If you change the database locally, the DPVM server notifies its neighboring switches, and that database is updated by all switches in the fabric.

If fabric distribution is enabled, all changes to the configuration database are stored in the DPVM pending database. These changes include the following tasks:

- Adding, deleting, or modifying database entries.
- Activating, deactivating, or deleting the configuration database.
- Enabling or disabling autolearning.

These changes are distributed to all switches in a fabric when you commit the changes. You can also discard (abort) the changes at this point.

Send documentation comments to dcnm-san-docfeedback@cisco.com

**Tip**

See the “Viewing the Pending Database” section on page 4-11 to view the contents of the pending database.

If the DPVM database is available on all switches in the fabric, devices can be moved anywhere and offer the greatest flexibility. To enable database distribution to the neighboring switches, the database should be consistently administered and distributed across all switches in the fabric. The Cisco NX-OS software uses the Cisco Fabric Services (CFS) infrastructure to achieve this requirement (refer to the *Cisco MDS 9000 Family NX-OS System Management Configuration Guide*).

About Locking the Fabric

The first action that modifies the existing configuration creates the DPVM pending database and locks the feature in the fabric. Once you lock the fabric, the following conditions apply:

- No other user can make any configuration changes to this feature.
- A copy of the configuration database becomes the DPVM pending database. Modifications from this point on are made to the DPVM pending database. The DPVM pending database remains in effect until you commit the modifications to the DPVM pending database or discard (abort) the changes to the DPVM pending database.

About Copying DPVM Databases

The following circumstances may require the active DPVM database to be copied to the DPVM config database:

- If the learned entries are only added to the active DPVM database.
- If the DPVM config database or entries in the DPVM config database are accidentally deleted.

**Note**

If you copy the DPVM database and fabric distribution is enabled, you must commit the changes.

Licensing Requirements for VSANs

The following table shows the licensing requirements for this feature:

License	License Description
ENTERPRISE_PKG	The enterprise license is required to enable VSAN. For a complete explanation of the licensing scheme, see the <i>Cisco MDS 9000 Family NX-OS Licensing Guide</i> .

Guidelines and Limitations

This section explains the database guidelines for this feature.

A database merge refers to a union of the configuration database and static (unlearned) entries in the active DPVM database. For information about CFS merge support, refer to the *Cisco MDS 9000 Family NX-OS System Management Configuration Guide* for detailed concepts.

Send documentation comments to dcnm-san-docfeedback@cisco.com

When merging the DPVM database between two fabrics, follow these guidelines:

- Verify that the activation status and the autolearn status is the same in both fabrics.
- Verify that the combined number of device entries in each database does not exceed 16 K.



Caution

If you do not follow these two conditions, the merge will fail. The next distribution will forcefully synchronize the databases and the activation states in the fabric.

Default Settings

Table 4-1 lists the default settings for DPVM parameters.

Table 4-1 Default DPVM Parameters

Parameters	Default
DPVM	Disabled.
DPVM distribution	Enabled.
Autolearning	Disabled.

Creating DPVM

This section includes the following topics:

- [Configuring DPVM with the DPVM Wizard, page 4-5](#)
- [Configuring DPVM Config and Pending Databases, page 4-6](#)
- [Activating DPVM Config Databases, page 4-7](#)
- [Enabling Autolearning, page 4-7](#)
- [Clearing Learned Entries, page 4-8](#)
- [Disabling DPVM Database Distribution, page 4-8](#)
- [Locking the Fabric, page 4-9](#)
- [Committing Changes, page 4-9](#)
- [Discarding Changes, page 4-10](#)
- [Clearing a Locked Session, page 4-10](#)
- [Copying DPVM Databases, page 4-10](#)
- [Comparing Database Differences, page 4-11](#)

Configuring DPVM with the DPVM Wizard


Detailed Steps

To use the DPVM Setup Wizard to set up dynamic port VSAN membership, follow these steps:

Send documentation comments to dcnm-san-docfeedback@cisco.com

- Step 1** Click the **DPVM Setup Wizard** icon in the DCNM-SAN toolbar (See [Figure 4-1](#)).

Figure 4-1 DPVM Wizard Icon

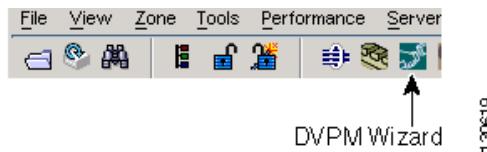

You see the Select Master Switch page.

- Step 2** Click the switch you want to be the master switch. This switch controls the distribution of the DPVM database to other switches in the fabric.
- Step 3** Click **Next**.
You see the AutoLearn Current End Devices page.
- Step 4** (Optional) Click the **Create Configuration From Currently Logged In End Devices** check box if you want to turn on autolearning.
- Step 5** Click **Next**.
You see the Edit and Activate Configuration page.
- Step 6** Verify the current or autolearned configuration. Optionally, click **Insert** to add more entries into the DPVM config database.
- Step 7** Click **Finish** to update the DPVM config database, distribute the changes using CFS, and activate the database, or click **Cancel** to exit the DPVM Setup Wizard without saving changes.
- Step 8** Select the switch you want to be the master switch. This switch controls the distribution of the DPVM database to other switches in the fabric.
- Step 9** Click **Next**.
You see the AutoLearn Current End Devices page.
- Step 10** (Optional) Check the **Create Configuration From Currently Logged In End Devices** check box if you want to enable autolearning.
- Step 11** Click **Next**.
You see the Edit and Activate Configuration page.
- Step 12** Verify the current or autolearned configuration. Optionally, click **Insert** to add more entries into the DPVM config database.
- Step 13** Click **Finish** to update the DPVM config database, distribute the changes using CFS, and activate the database, or click **Cancel** to exit the DPVM Setup Wizard without saving changes.

Configuring DPVM Config and Pending Databases

Detailed Steps

To create and populate the config and pending databases, follow these steps:

Send documentation comments to dcnm-san-docfeedback@cisco.com

Step 1 Expand **Fabricxx> All VSANs**, and then select **DPVM** in the Logical Attributes pane.

You see the DPVM configuration in the Information pane.

Step 2 Click the **CFS** tab and select a master switch by checking a check box in the Master column.



Note You must click the CFS tab in order to activate the other tabs.

Step 3 Click the **Config Database** tab and then click the **Create Row** to insert a new entry.

You see the Create Config Database dialog box.

Step 4 Choose an available WWN and VSAN combination or fill in the pWWN and Login VSAN fields.

Step 5 Click **Create** to save these changes in the config or pending database or click **Close** to discard any unsaved changes.

Step 6 Click the **CFS** tab and select the Config Action drop-down menu for the master database.

Step 7 Select **commit** from the drop-down menu to distribute these changes or **abort** to discard the changes.

Activating DPVM Config Databases

When you explicitly activate the DPVM config database, the DPVM config database becomes the active DPVM database. Activation may fail if conflicting entries are found between the DPVM config database and the currently active DPVM database. However, you can force activation to override conflicting entries.

Detailed Steps

To activate the DPVM config database, follow these steps:

Step 1 Expand **Fabricxx> All VSANs**, and then select **DPVM** from the Logical Attributes pane.

You see the DPVM configuration in the Information pane.

Step 2 Click the **Action** tab and set the Action drop-down menu to **activate** or **forceActivate** to activate the DPVM config database.

Step 3 Click the **CFS** tab and select the Config Action drop-down menu for the master database.

Step 4 Select **commit** from the drop-down menu to distribute these changes or **abort** to discard the changes.



Note To disable DPVM, you must explicitly deactivate the currently active DPVM database.

Enabling Autolearning

Detailed Steps

To enable autolearning, follow these steps:

Send documentation comments to dcnm-san-docfeedback@cisco.com

-
- | | |
|---------------|---|
| Step 1 | Expand Fabricxx> All VSANs , and then select DPVM from the Logical Attributes pane.
You see the DPVM configuration in the Information pane. |
| Step 2 | Click the Actions tab and check the Auto Learn Enable check box to enable autolearning. |
| Step 3 | Click the CFS tab and select commit to distribute these changes or abort to discard the changes. |
-

Clearing Learned Entries

You can clear DPVM entries from the active DPVM database (if autolearn is still enabled) using one of two methods.

Restrictions

These two procedures do not start a session and can only be issued in the local switch.

Detailed Steps

To clear a single autolearn entry, follow these steps:

-
- | | |
|---------------|---|
| Step 1 | Expand Fabricxx> All VSANs , and then select DPVM from the Logical Attributes pane.
You see the DPVM configuration in the Information pane. |
| Step 2 | Click the Actions tab and select clearOnWWN from the Auto Learn Clear drop-down menu. |
| Step 3 | Check the clear WWN check box next to the WWN of the autolearned entry that you want to clear. |
| Step 4 | Click CFS and select commit to distribute these changes or abort to discard the changes. |
-

To clear all autolearn entries, follow these steps:

-
- | | |
|---------------|---|
| Step 1 | Expand Fabricxx> All VSANs , and then select DPVM from the Logical Attributes pane.
You see the DPVM configuration in the Information pane. |
| Step 2 | Click the Actions tab.
You see the DPVM Actions menu. |
| Step 3 | Select clear from the Auto Learn Clear drop-down menu. |
| Step 4 | Click the CFS tab and select commit to distribute these changes or abort to discard the changes. |
-

Disabling DPVM Database Distribution

Detailed Steps

These changes are distributed to all switches in a fabric when you commit the changes. You can also discard (abort) the changes at this point.

Send documentation comments to dcnm-san-docfeedback@cisco.com



- Tip** See the “Viewing the Pending Database” section on page 4-11 to view the contents of the pending database.

To disable DPVM database distribution to the neighboring switches, follow these steps:

-
- Step 1** Expand **Fabricxx> All VSANs**, and then select **DPVM** from the Logical Attributes pane. You see the DPVM configuration in the Information pane.
- Step 2** Click the **CFS** tab and select **disable** from the Admin drop-down menu.
- Step 3** Click **Apply Changes** to save this change or click **Undo Changes** to discard the change.
-

Locking the Fabric

Detailed Steps

To lock the fabric and apply changes to the DPVM pending database, follow these steps:

-
- Step 1** Expand **Fabricxx> All VSANs**, and then select **DPVM** from the Logical Attributes pane. You see the DPVM configuration in the Information pane.
- Step 2** Click the **Config Database** tab and **Create Row**. You see the Create Config Database dialog box.
- Step 3** Choose an available pWWN and login VSAN.
- Step 4** Click **Create** to save this change to the pending database or click **Close** to discard any unsaved change.
-

Committing Changes

If you commit the changes made to the configuration, the configuration in the DPVM pending database are distributed to other switches. On a successful commit, the configuration change is applied throughout the fabric and the lock is released.

Detailed Steps

To commit the DPVM pending database, follow these steps:

-
- Step 1** Expand **Fabricxx> All VSANs**, and then select **DPVM** from the Logical Attributes pane. You see the DPVM configuration in the Information pane.
- Step 2** Click the **CFS** tab and select **commit from** the Config Action drop-down menu.
- Step 3** Click **Apply Changes** to save this change or click **Undo Changes** to discard the change.
-

Send documentation comments to dcnm-san-docfeedback@cisco.com

Discarding Changes

If you discard (abort) the changes made to the DPVM pending database, the configurations remain unaffected and the lock is released.

Detailed Steps

To discard the DPVM pending database, follow these steps:

-
- Step 1** Expand **Fabricxx> All VSANs**, and then select **DPVM** from the Logical Attributes pane. You see the DPVM configuration in the Information pane.
 - Step 2** Click the **CFS** tab and select **abort** from the Config Action drop-down menu.
 - Step 3** Click **Apply Changes** to save this change or click **Undo Changes** to discard the change.
-

Clearing a Locked Session

If you have performed a DPVM task and have forgotten to release the lock by either committing or discarding the changes, an administrator can release the lock from any switch in the fabric. If the administrator performs this task, your changes to the DPVM pending database are discarded and the fabric lock is released.

Restrictions

The DPVM pending database is only available in the volatile directory and is subject to being discarded if the switch is restarted.

Detailed Steps

To use administrative privileges and release a locked DPVM session using DCNM-SAN, follow these steps:

-
- Step 1** Expand **Fabricxx> All VSANs**, and then select **DPVM** from the Logical Attributes pane. You see the DPVM configuration in the Information pane.
 - Step 2** Click the **CFS** tab and select **clear** from the Config Action drop-down menu.
 - Step 3** Click **Apply Changes** to save this change or click **Undo Changes** to discard the change.
-

Copying DPVM Databases

Detailed Steps

To copy the currently active DPVM database to the DPVM config database, follow these steps:

Send documentation comments to dcnm-san-docfeedback@cisco.com

-
- Step 1** Expand **Fabricxx> All VSANs**, and then select **DPVM** in the Logical Attributes pane.
You see the DPVM configuration in the Information pane.
- Step 2** Click the **Actions** tab and check the **CopyActive to Config** check box.
- Step 3** Click the **CFS** tab and select **commit** from the Config Action drop-down menu.
-

Comparing Database Differences

Detailed Steps

To compare the currently active database entries to the DPVM config database, follow these steps:

-
- Step 1** Expand **Fabricxx> All VSANs**, and then select **DPVM** from the Logical Attributes pane.
You see the DPVM configuration in the Information pane.
- Step 2** Click the **Active Database** tab.
You see the DPVM active database in the Information pane.
- Step 3** Select **Config** from the Compare With drop-down menu.
You see the comparison dialog box.
- Step 4** Select **Close** to close the comparison dialog box.
-

Monitoring DPVM

To view the configuration information, perform the following tasks:

- [Viewing the Pending Database, page 4-11](#)

Viewing the Pending Database

To view the pending database, follow these steps:

-
- Step 1** Expand **Fabricxx> All VSANs**, and then select **DPVM** from the Logical Attributes pane.
You see the DPVM configuration in the Information pane.
- Step 2** Click the **CFS** tab and set the Config View drop-down menu to **pending**.
- Step 3** Click **Apply Changes**.
- Step 4** Click the **Config Database** tab.
You see the pending database entries.
-

■ Field Descriptions for DPVM

Send documentation comments to dcnm-san-docfeedback@cisco.com

Field Descriptions for DPVM

This section describes the field descriptions for this feature.

DPVM Actions

Field	Description
Action	Helps in activating the set of bindings.
Result	Indicates the outcome of the activation.
Status	Indicates the state of activation. If true, then activation has been attempted as the most recent operation. If false, then an activation has not been attempted as the most recent operation.
CopyActive to Config	When set to copy(1), results in the active (enforced) binding database to be copied on to the configuration binding database. The learned entries are also copied.
Auto Learn Enable	Helps to learn the configuration of devices logged into the local device on all its ports and the VSANs to which they are associated.
Auto Learn Clear	Assists in clearing the autolearned entries.
Clear WWN	Represents the Port WWN (pWWN) to be used for clearing its corresponding autolearned entry.

DPVM Config Database

Field	Description
Type	Specifies the type of the corresponding instance of cdpvmLoginDev object.
WWN or Name	Represents the logging-in device.
VSAN Id	Represents the VSAN to be associated to the port on the local device on which the device represented by cdpvmLoginDev logs in.
Switch Interface	Represents the device alias.

DPVM Active Database

Field	Description
Type	Specifies the type of the corresponding instance of cdpvmEnfLoginDev.
WWN or Name	Represents the logging in device address.
VSAN Id	Represents the VSAN of the port on the local device through which the device represented by cdpvmEnfLoginDev logs in.

Send documentation comments to dcnm-san-docfeedback@cisco.com

Field	Description
Interface	Represents the device alias.
IsLearned	Indicates whether this is a learned entry or not. If true, then it is a learned entry. If false, then it is not.

Additional References

For additional information related to implementing VSANs, see the following section:

- [Related Document, page 4-13](#)
- [Standards, page 4-13](#)
- [RFCs, page 4-13](#)
- [MIBs, page 4-13](#)

Related Document

Related Topic	Document Title
Cisco MDS 9000 Family Command Reference	<i>Cisco MDS 9000 Family Command Reference</i>

Standards

Standard	Title
No new or modified standards are supported by this feature, and support for existing standards has not been modified by this feature.	–

RFCs

RFC	Title
No new or modified RFCs are supported by this feature, and support for existing RFCs has not been modified.	–

MIBs

MIBs	MIBs Link
• CISCO-DYNAMIC-PORT-VSAN-MIB	To locate and download MIBs, go to the following URL: http://www.cisco.com/en/US/products/ps5989/prod_technical_reference_list.html

■ Additional References

Send documentation comments to dcnm-san-docfeedback@cisco.com