

Cisco Unified CallManager Release 5.0-PBX Interoperability: NEC IPX2400 R15 to a Cisco CMM Using T1-PRI QSIG with MGCP

Table of Contents

Table of Contents	
ntroduction	1
Network Topology	
_imitations	
System Components	
Hardware Requirements	
Software Requirements	
Peatures	3
Configuration	2
Configuring the NEC2400 IPX PBX	2
Cisco Unified CallManager Configuration	
Acronyms	

Introduction

This is an application note for connectivity of NEC IPX2400 Release 15 PBX with Cisco Unified CallManager Release 5.0 via Cisco Communication Media Module CMM-T1 as MGCP gateway using ISO QSIG protocol.


The network topology diagram (Figure 1) shows the test setup for end-to-end interoperability with the Cisco Unified CallManager connected to the PBX via Communication Media Module CMM-T1 link as MGCP gateway. Connectivity is achieved by using the PRI QSIG T1 protocol type on the MGCP gateway with Unified CallManager Service parameter QSIG variant of ISO and ISO switch type on the NEC IPX2400

This Application note uses the Communication Media Module CMM-T1 voice gateway, however other Cisco voice gateways are also an option to use since Unified CallManager QSIG implementation does not depend on the physical interface.



Network Topology

Figure 1. Network Topology or Test Setup

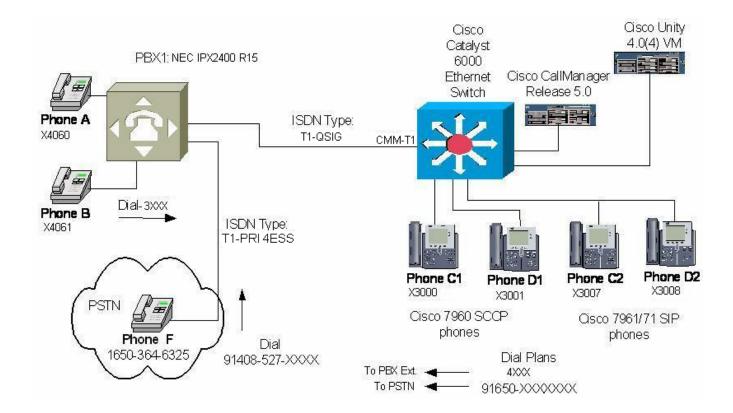

Limitations

Call Transfer by join (Consultation local Transfer), Cisco IP Phone x3000 calling to Dterm phone x4060 that is Transfered to Dterm phone x4061. Cisco IP phone x3000 display shows uknown/unknown. NEC IPX2400 sends "CallTrasnferComplete" connected name and number restricted towards Unified CallManager.

Call Transfer by join (Consultation network/external Transfer), Cisco IP Phone x3000 calling to Dterm phone x4060 that is Transfered to Cisco IP phone x3001. Cisco IP phones x3000 and x3001 display unknown/unkown (SCCP IP phone) and Anonymous (SIP IP phone), respectively. NEC IPX2400 sends "CallTransferComplete" connected name and number restricted towards Unified CallManager.

Call Transfer by join (Blind network/external Transfer), Cisco IP Phone x3000 calling to Dterm phone x4060 that is Transfered to Cisco IP phone x3001. Cisco IP phone x3001 display shows Anonymous (SIP IP phone). NEC IPX2400 sends "CallTransferComplete" calling Name and number restricted towards Unified CallManager. This limitation is fixed when SS-Path Replacement is activated.

Call Forward by join (local), Cisco IP Phone x3000 calling to Dterm phone x4060 that is forwarded to Dterm phone x4061. Cisco IP phone x3000 display shows "Alerting Name" is presented onlt during 'Alerting' state. When Dterm phone x4061 answers the call the display on the Cisco IP phone changes to "unknown". This behavior is due to NEC PBX sending Callforward update "notificationWithoutDivertedToNr(1)". Unified CallManager uses the "DivertingLegInfo1" data to update the IP phone display, in this CallForward scenario. Connected number is ignored by Unified CallManager.

Call Forward by join (network/external), Dterm Phone x4060 calling to Cisco IP phone x3000 that is forwarded to Dterm phone x4061.



Calling Name is not displayed on Dterm phone x4061, the diverting number is displayed (3000).

Call back, Busy or NR, was invoked from Dterm phone x4060 to Cisco IP phone, the original calling name is not shown on the Cisco IP phone x3000. NEC PBX does not send Calling Name on a locally originated CallBack call.

NEC PBX could not restrict Calling Name, however, NEC has an option to turn off/remove name display delivery, in ASYD command (system wide) or remove name from individual stations using ANDD command, or block Name display at a trunk level using ARTD command.

System Components

Hardware Requirements

Cisco Hardware

Cisco Unified CallManager Server

Catalyst 6500

WS-SVC-CMM-6T1, Communications Media Module

NEC IPX2400

Circuit card PA-24PRT

Software Requirements

Cisco Unified CallManager: 5.0

Release 15

Cisco IOS Release or 12.3 or higher

Features

Features Supported

CLIP-Calling Line (Number) Identification Presentation

CLIR-Calling Line (Number) Identification Restriction

CNIP-Calling Name Identification Presentation

COLP-Connected Line (Number) Identification Presentation

CONP-Connected Name Identification Presentation

Send Alerting Name

Call Back/Call Completion

CT-Call Transfer (by join)

CFU-Call Forwarding Unconditional

CFB-Call Forwarding Busy

CFNR-Call Forwarding No Reply

Call Forward by Reroute

ANF-PR-Additional Network Feature Path Replacement (for Call Transfer by join)

ANF-PR-Additional Network Feature Path Replacement (for Trombone connection)

Features Not Supported

CONR- Connected Name Identification Restriction – (NEC IPX2400 could not change connected name to restricted).

 $COLR-\ Connected\ Line\ (Number)\ Identification\ Restriction-(NEC\ IPX2400\ could\ not\ change\ connected\ number\ to\ restricted).$

Q.SIG MWI- Message Waiting Indication (lamp ON, lamp OFF), the current NEC IPX2400 North American Release 15 software does not support QSIG-MWI.

Overlap sending and overlap receiving are not supported on the current NEC IPX2400 North American Release 15 software.

ANF-PR-Additional Network Feature Path Replacement (for Call Forward by join), the current NEC IPX2400 North American Release 15 software does not support Path Replacement on Call Forward by join



Configuration

Note: It is important that the engineer/technician modifying the IPX2400 Configuration be well versed in the NEC MAT command line. The NEC MAT command line is very precise and should only be changed by a person who is certified by NEC and has the in-depth knowledge on how to troubleshoot the system in case erratic behavior results.

Configuring the NEC2400 IPX PBX

Sequence

Physical Layer Set-up

SW Mode→SW1→SW2→SW4

Note: You must set the switches on the PA-24PRT appropriately for QSIG operation

Enable QSIG services

ASYD→ASFC

Build the QSIG route

ARTD→ARTI→ATRK→ARSC→ARRC→ADPC→ACSC→ACIC1→ACIC2→MBRT

Build the Dial Plan

The following step allows you to access the QSIG route (Assumes dummy route has been built and ARRC is assigned properly)

ANPD→ASPA→AMND→AFRS→AOPR→ARNP

Configuration Menus and Commands

Physical Layer Set-up

SW Mode

Set to 10 (A in HEX)

SW1

Set switch 3 to 'off' (Sets 23B+D mode)

SW2

Set switch 4 'on' and switch 5 'on' (Sets ESF framing and B8ZS lincode)

SW4

Set switch 2 to 'off' (This switch determines the ISDN protocol side emulation for the route Off=Network/On=User)

Note: To set other physical layer parameters such as LBO, alarm monitoring and Loss Pad settings please refer to the NEC USER GUIDE for the PA-24PRT. These parameters are not covered in this document. The value of these parameters will depend upon the installation of each individual Telephony network.



Enable QSIG services

ASYD

System 1, Index 186, bit 6 = 1 (ISDN service enabled) System 1, Index 375, bit 0 = 1 (avoid Bch lockup)

ASFC

SFI 94 set to '0' (ANI)

Build QSIG Route

ARTD

Note: You must build two ARTD forms, one for the b-channels and one for the d-channel

RT	4 (B-Ch	annels)						
CDN 001	osgs	Data O	CDN 043	вт	Data 1	CDN 085	CSEU	Data O
002	ONSG	2	044	PRV	0	086	CSEL	0
003	ISGS		045	A/D	1	087	CMP	0
004	INSG	0 2 3	046	CW	0	088	TALK	0
005	TF	3	047	TPQ	0	089	FOT	0
006	TCL	4	048	BL	0	090	RST	0
007	L/T	4 1 2	049	TRKS	0	091	TOCI	0
800	RLP	2	050	DPLY	1	092	TOCD	0
009	TQ	0	051	ACD	0	093	ODGD	0
010	SMDR	0	052	2W/4W	0	094	RLS	0
011	TD	0	053	FAAT	0	095	GWD	0
012	DR	0	054	GW	0	096	H1	0
013	AC	0	055	TCMA	0	097	DT	0
014	TNT	0	056	SMDR3	0	098	CI	0
015	LSG	12	057	HDT	0	099	OID	0
016	SMDR2	0	058	CD	0	100	TKS	0
017	H/M	0	059	CCH	0	101	PAD2	0
018	MC	0	060	TC/EC	0	102	TRM	0
019	ANI	0	061	IRE	0	103	TRPX	0
020	D	0	062	SCR	0	104	LDR	0
021	MSB	0	063	LYER1	0	105	TSC	0
022	MSW	0	064	NET	0	106	SATS	0
023	TR	0	065	INT	10	107	RVPX	0
024	OC	0	066	DC	4	108	DQ	0
025	R/L	0	067	HKS	0	109	SLOV	0
026	RVSD	0	068	SCF	0	110	SDTO	0
027	TL	0	069	SMDR4	0	111	ADVPRA	0
028	ANS	1	070	TCMN	0	112	IND	1
029	TELP	0	071	TCMC	0	113	UUI	0
030	PAD	4	072	MESE	0	114	DCH	0
031	OGRL	1	073	KPST	0	115	CMRT	0
032	ICRL	1	074	KPPT	0	116	PREF	0
033	HD	0	075	STC	0	117	DFS	0
034	GUARD		076	MC2	0	118	BOB	0
035	WINK	0	077	MT	0	119 120	HO1CH	0
036	VAD	0	078	TONE	0	120	IFR	0
037	CLD	0	079	PPTM	0	121	CONV	0
038	FA	0	080	MPTM	0	122 123	ORRT	0
039	BC	0	081	LPTM	0	123	CNI	0
040	TCM	0	082	RSAX	0	124	AOC	0
041	TDMQ	0	083	CST	0	125	MGCOT	0
042	TRSC	0	084	CSEG	0			



Note: On the B-channel ARTD table, parameter IND must be set to '1' for Name display, to disable Name display feature on the trunk change the value of IND to '0'.

Note: On the B-channel ARTD table, parameter DC must be set to equal the maximum number of digits in the PBX's station numbers.

RT	5	(D-cha	annel)						
CDN 001 002 003 004 005 006 007 008 011 012 013 014 015 016 017 018 019 020 021 022 023 024 025 026 027 028	5	OSGS ONSG ISGS INSG TF TCLT RLP TODR TD DR AC TNT LSG SMDR2 H/M ANI D MSW TCC LSD TL ANS	Data 0 0 0 0 0 0 4 1 0 0 0 0 0 0 13 0 0 0 0 0 0 0 13 0 0 0 0	CDN 043 044 045 046 047 048 049 051 052 053 055 057 058 060 061 063 064 065 067 068 069 070	BT PRV A/D CW TPQ BL TRKS DPLY ACD 2W/4W FAAT GW TCMA SMDR3 HDT CCH TC/EC IRE SCR LYER1 NET DC SMDR4 TCMC	Data 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	CDN 085 086 087 088 089 090 091 093 094 095 097 098 099 100 101 102 103 104 105 106 107 108 110 111 112	CSEU CSEL CMP TALK FOT RST TOCD ODGD RLS GWD H1 CI OID TKS PAD2 TRPX LDR TSC SATS RVPX DQ SLOV SDTO ADVPRA INIT	Data 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
028 029 030		ANS TELP PAD	1 0 7	070 071 072	TCMN TCMC MFSP	0 0	113 114	IND UUI DCH	0 0
031 032 033 034 035		OGRL ICRL HD GUARD WINK	0 0 0 0	073 074 075 076 077	KPST KPPT STC MC2 MT	0 0 0 0	115 116 117 118 119	CMRT PREF DFS BOB HO1CH	0 0 0 0
036 037 038 039 040 041		VAD CLD FA BC TCM TDMQ	000000	078 079 080 081 082 083	TONE PPTM MPTM LPTM RSAX CST	0 0 0 0 0	120 121 122 123 124 125	IFR CONV ORRT CNI AOC MGCOT	0 0 0 0 0 0
042		TRSC	Ö	084	CSEG	ŏ	773	MGCOT	v



ARTI							
RT 4							
RST	0	RSCT	0	IDRT	0	COT	0
HMT	0	ROCG	0	ECCISTD	0	SS7	0
TRCRST	0	RICG	0	MFCG2	0	NIZID	0
TRSRST	0	STSENQ	0	OPCC	0	CLRF	0
T309LNK	0	MMNPASS	0	ICTCON	0	TRC	0
T309CON	0	DLTK	0	VRD	0	OID	0
LLCRST	0	CALN	0	INTD	1	PHG	0
VCM	0	NETINT	0	JECCIS	0	VIR	0
POOL	0	RETMSG	0	IPINT2	0	CSMDS	0
DTRT	0	ANI	0	IPTRK	0	FXD	0
TMPRT	0	SRV	0	CTCF	1	FXJS	0
CODEC	0	TON	0	RERT	1	FXPT	0
PASS	0	NPI	0	DCANS	0	FXPS	0
IRL	0	L/T	0	RND	0	CPI	0
MTC	0	ECCIS	0	CLBK	0	E911	0
TC	0	ECCISTM	0	UALAW	1	RA_RT	0
TS	0	ECCISOB	0	MCTFAC	0		
CDCSPD	0	ECCISIB	0	RE	1		
DVRST	0	SPMET	0	PR	1		

Note: The following parameters determine the state of the following QSIG-SS features: CTCF-Call forward/Call transfer, RERT-CF Reroute, PR-Path Replacement. To set the feature enabled you must set it to '1', if you want the feature disabled change the setting to '0'.



AT	rk			
		Starting		Ending
R444444444444444444444444555	TK 1 2 3 4 5 6 7 8 9 10 11 12	RT 4 TK 1 LENS 002130 002131 002132 002133 002134 002135 002136 002137 002140 002141 002142	TN 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	Ending RT 5 TK 23
4	13 14 15	002144 002145 002146	1 1	
4 4 4 4 4 4 4 5 5	16 17 18 19 20 21 22 23 1	002147 002150 002151 002152 002153 002154 002155 002156 002157	1 1 1 1 1 1 1 1 1	



ARSC

Tenant 1 Route 4		Tenant 1 Route 4
TenantDay/NighRoute 1 DAY 4	RRI 0 1 2 3 0 1 1 1 1 1 1 1 1 1 2 1 1 1 1 3 1 1 1 1	RSC Data Settings 4 5 6 7 8 9 10 11 12 1314 15 1 1 1 1 0 0 0 0 0 0 0 0 0 1 1 1 1 0 0 0 0
ARRC	lternative Doute	e Restriction List *
Starti		Ending
going Route2		going Route4
Incoming Route 4 4 4 31 31	Outgoing Route 2 4 31 2 4	RI A-Restriction RI D-Restriction 1 1 1 1 1 1 1 1 1 1 1
ADPC Starti		nt Code Data List * Ending
RT 4		RT 5
	RT 4 5	PC 6 6
ACSC		
CSCG GROUP: 0 140 CCH: 0021 141 CCH: 0021		3 4 5 6 7 00212 00212 00212 00212 0021 00212 00212 00212 00212

Note: Because we are using circuit card PA-24PRT, you assign the same LENS number to each CSCG number. You must assign an even CSCG number for the b-channels and an odd CSCG number for the D-channel. If you are using circuit cards PA-2DCH + PA-24DTR the LENS assignment to the B-channels and D-channels differ, please contact NEC customer support for technical assistance.



ACIC1

		PC	6			PC	6
PC 6	CSCG 140			PC	CSCG	PC	CSCG
ACIC2							
		CIC 1	1			CIC	24

Terminate	Point	CoteIdentificationCod	
6		1	002130
6		2	002131
6		3	002132
6		4	002133
6		5	002134
6		6	002135
6		7	002136
6		8	002137
6		1 2 3 4 5 6 7 8 9	002140
6		10	002141
6		11	002142
6		12	002143
6		13	002144
6		14	002145
6		15	002146
6		16	002147
6		17	002150
6		18	002151
6		19	002152
6		20	002153
6		21	002154
666666666666666666666		22 23	002155
6		23	002156

MBRT





Build the dial plan to access the QSIG route (Assumes dummy route has been built and ARRC is assigned properly)

ANPD

* Numberin	ng Plan Data List *
Starting	Ending
Tenant 1	Tenant 1

		E S	Normal —	<u> </u>	Hooking	<u>(5)</u>	_ Busy				
Tenant	1stDC		NND	Busy Lamp Field	NND	Busy Lamp Field	NND	Busy Lamp Field			
1	0		1	Out of Service	1	Out of Service	1	Out of Service			
	1		5	In Service	5	In Service	5	In Service			
	2	N	2	In Service	2	In Service	75				
	3	N	4	Out of Service	4	Out of Service	4	Out of Service			
	4		4	Out of Service	4	In Service	4	In Service			
	5		4	Out of Service	4	Out of Service	4	Out of Service			
	6					68		64		64	
	7		94	- 3	-	- 33	0-	-			
	8		1	Out of Service	-	- 33	-	8			
	9		-	-0	-	-0.0	-	*			
	*		3	Out of Service	3	Out of Service	3	Out of Service			
	#		-	-03	-	-13	-				

ASPA

42	arting	T T	nding
51	111116		nun8
Tenant	1	Tenant	1
Access Code	3	Access Code	3
Connection Index	Normal	Connection Index	Busy

<u>TN</u>	ACC	<u>CI</u>	SRV						
1	3	Normal	LCR	RT	: 31	2ndDT : 1	AH	: 0	SUB: 0
1	3	Hooking	LCR	RT	: 31	2ndDT : 1	AH	: 0	SUB: 0
1	3	Busy	LCR	RT	: 31	2ndDT : 0	AH	: 0	SUB: 0



AMND

	Starting			Ending							
Tens	ant 1			Tenant	1						
DC	3			DC	3						
<u>Tenant</u>	<u>DC</u>	MND	TOLL	AN	<u>RATE</u>	A/I					
1	3	4		0		1					

AFRS

Starting	Ending
4	
Tenant 1	Tenant 1
Route 31	Route 31
NPC 3	NPC 3

Tenant Route Number Pattern Code OPR 1 31 3 3

0

AOPR

0

3

	Starting	25	1	Ending							
TDPTN	0				TDPTN	0					
OPR	3				OPR	3					
RA Order	0				RA Order	0					

0



ARNP

[IPX-R15_IP::LRNP] May 17, 2006

* Reverse Nu	nbering Plan Data List *
Starting	Ending
Route 4	Route 4

 Route
 Access Code

 4
 3

Dterm Data (Digital Stations)

ASDT

* Station	Data List *
Starting	Ending
TN 1	TN 1
STN 4060	STN 4061

TN	STN	LENS	TEC	RSC	SFC	ETN	KD	CG	CE	нс	HP	HU	PH	HL	ND	NS	D1	D2	IC	SS	WS	IT	LNL	LNN
1	4060	000032	12	1	1	1									Х									
1	4061	000031	12	1	1	1									Х									

ANND (Name display for Dterms)

" Ivame i	Display Data List *
Starting	Ending
Tenant 1	Tenant 1
Station 4060	Station 4061

Tenant Station Name Display
1 4060 Beasely
1 4061 Landon Donovan



ASFC SFI 94 (used to restrict Calling Number)

		* Serv	: Fe	atur	e	Restriction Class L E	ist * nding		
	Tenant SFI	94				Tenant SFI			
Tenant 1	Mode Day	SFI 94				SFC Attribute Sett 4 5 6 7 8 9 0 0 0 0 0 0	10 11	12 13 0 0	14 15 0 1

Note: To restrict 'Calling Number' you assign SFC =15 (or any SFC set to '1'), under ASDT command for the Dterm station you want to restrict.

Call Back

ASYD

ASYD - System Data 1, Index 139. No Answer Timer for CALL BACK. Assign 00H. (RAM Data is 3FH = 30 seconds.)

System Data 1, Index 68, Bit 0. 0/1: SHF and Access Code/last digit of Telephone Number + Access Code.

System Data 2, Index 0, Bit 0. Is CALL BACK enabled on a per Tenant basis? 0/1: No/Yes.

System Data 2, Index 4, Bit 0. CALL BACK and OUTGOING TRUNK QUEUING [O-2] Access Codes are same or separate? 0/1: Separate/Same.

ASFC

SFI 2 allows/restricts CallBack feature.

				* Se	rv ic	e Feat	ıre Re	stric	tion	Class	List *						
	Starting								Ending								
	Tenai SF	nt 1 7I 2									Tenant 1 SFI 2						
			22				- 15		FC.	Attribu	ute Settings —						
Tenant 1	<u>Mode</u> Day	<u>SFI</u> 2	<u>0</u> 0	<u>1</u> 1	<u>2</u> 1	<u>3</u> 1	<u>4</u> 1	<u>5</u> 1	<u>6</u> 1	<u>7</u> 1	8 9 10 11 12 13 14 1 1 1 1 1 1 1 1 1 1						

Note: On each Dterm station Assign a SFC that has SFI=2 set to '1', using a SFC with SFI=2 set to '0' restricts CallBack.



ADSL (Assigning CallBack feature on Dterm softkey)

* Dterm Soft Key on LCD Data in LDM List *							
Starting	Ending						
SKP 1	SKP 1						
SN 2	SN 3						

SKP	SN	SKN	FKY	DISP
1	2	0	5	CB
1	2	1	0	00
1	2	2	0	00
1	2	3	0	00
1	2	4	0	00
1	2	5	0	00
1	2	2 3 4 5 6 7 8	0	00
1	2	7	0	00
1	2	8	0	00
1	2	9	0	00
1	2	10	0	00
1	2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	11	0	00
1	2	12	0	00
1	2	13	0	00
1	2	14	0	00
1	2	15	0	00
1	3	0	5	СВ
1	3	1	0	00
1	3		0	00
1	3	2 3 4 5 6 7 8	0	00
1	3	4	0	00
1	3	5	0	00
1	3	6	0	00
1	3	7	0	00
1	3	8	0	00
1	3	9	0	00
1	3	10	0	00
1	3	11	0	00
1	3	12	0	00
1	3	13	0	00
1	3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3	14	0	00
1	3	15	0	00



ADKS (Assigns soft key pattern to Dterm station)

		* Dterm Key Status l	Data for LDM List *							
2	Starting		Ending							
Tenant Station	1 4060			enant 1 ation 4061						
Tenant 1	Station 4060	Soft Key Pattern 1	Line Key Pattern 3	Page Scroll Key 0						
1	4061	1	1	0						


Cisco Unified CallManager Configuration

ISO Protocol Service Parameter






CCM Gateway Configuration

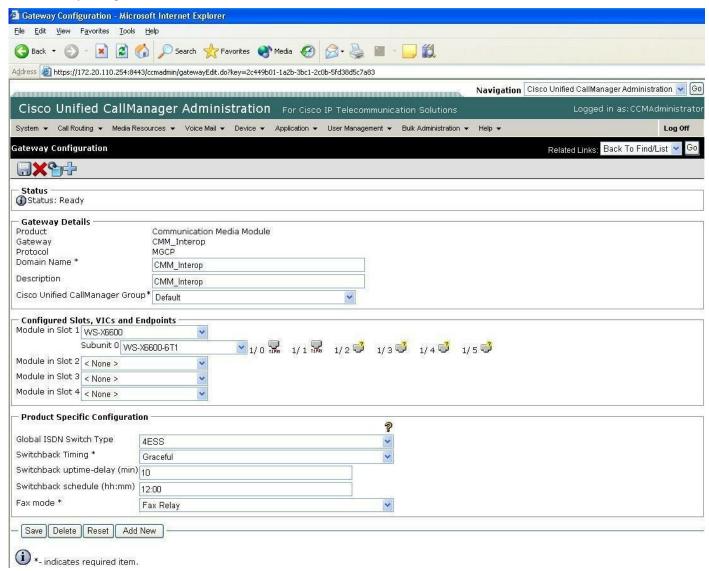



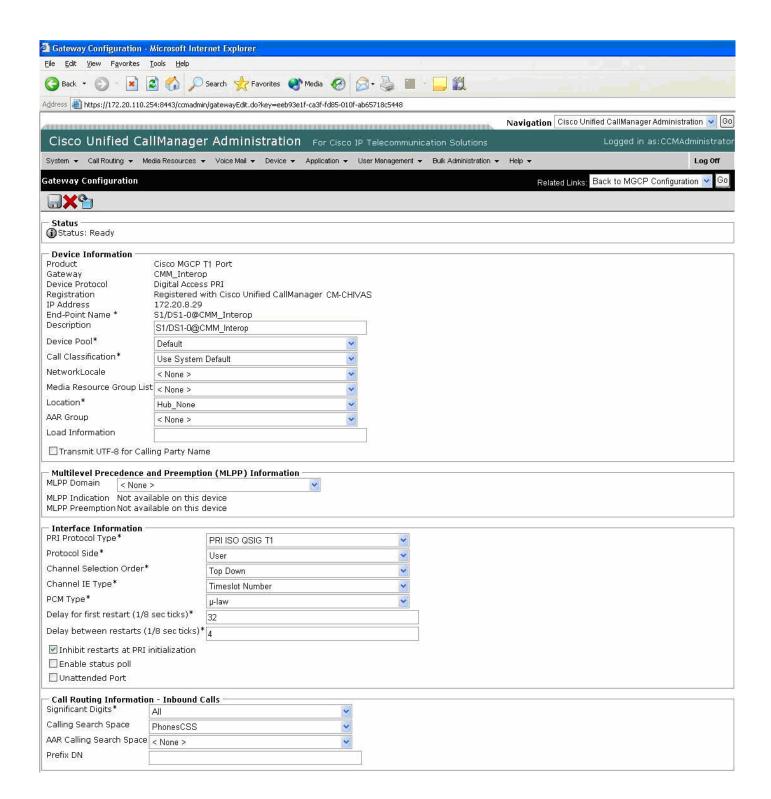





PRI Protocol Type Specific Inf	formation —
Display IE Delivery	UT III GUUII
Redirecting Number IE Deliver	ry - Outbound
Redirecting Number IE Deliver	ry - Inbound
Send Extra Leading Characte	r in Display IE***
Setup non-ISDN Progress Ind	licator IE Enable****
MCDN Channel Number Exter	sion Bit Set to Zero**
Send Calling Name In Facility	IE
☐ Interface Identifier Present**	
Interface Identifier Value**	0
Connected Line ID Presentation	(QSIG Inbound Call)* Default
UUIE Configuration	
Passing Precedence Level The	rough UUIE
Security Access Level*	
Product Specific Configuration	₁
Line Coding *	B8ZS 💌
Framing *	ESF V
Clock *	External
Input Gain (-614 db) *	0
Output Attenuation (-614 db) *	0
Echo Cancellation Enable *	Enable
Echo Cancel Coverage (ms) *	64
- Save Delete Reset -	
Duite Troser	
*- indicates required item.	
i **- applies to DMS-100 prot	
- applies to DMS-100 prot	ocol offity.




Partitions Configuration

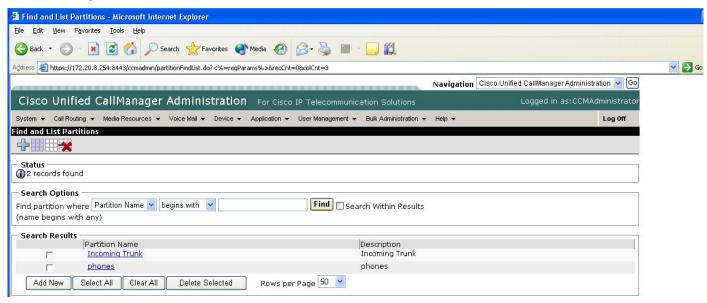


Calling Search Space Configuration

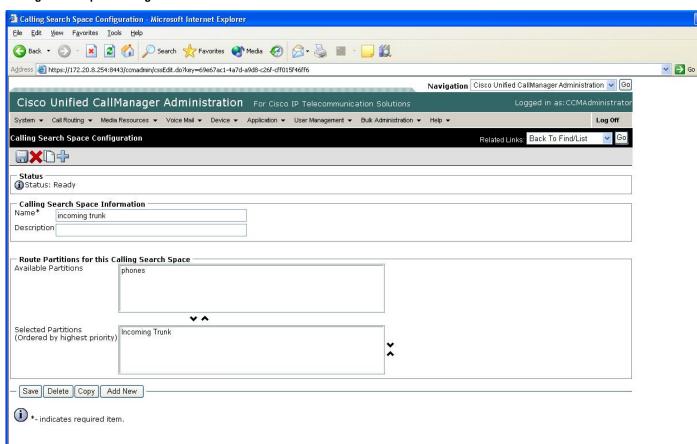



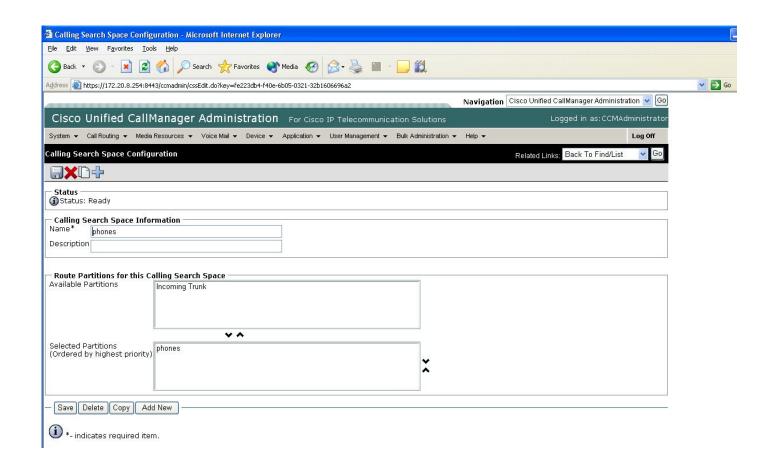




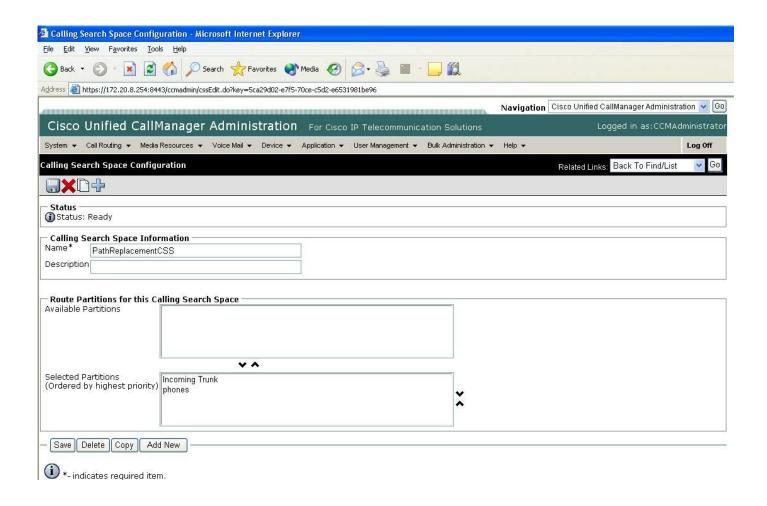




Enbloc Route Pattern Configuration

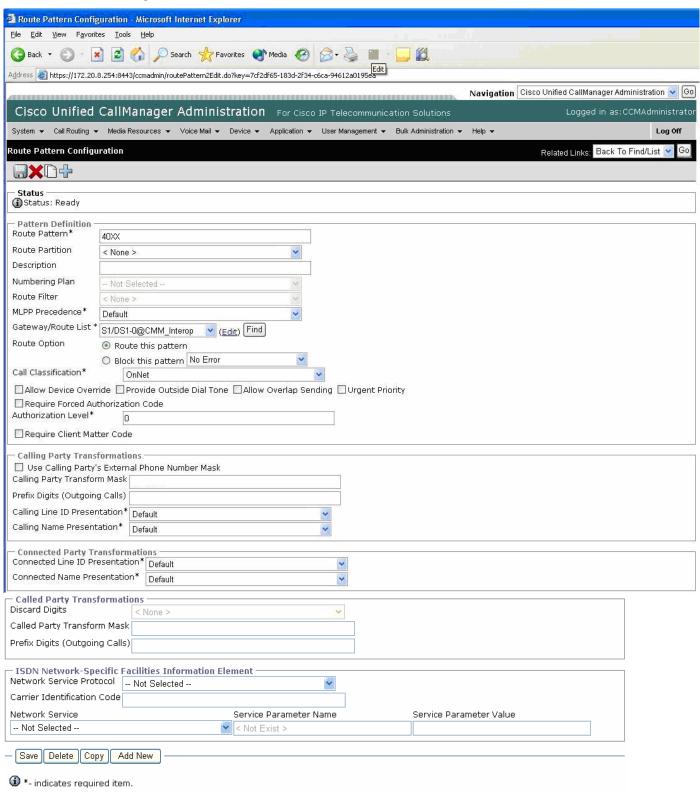




Overlap Sending Route Pattern

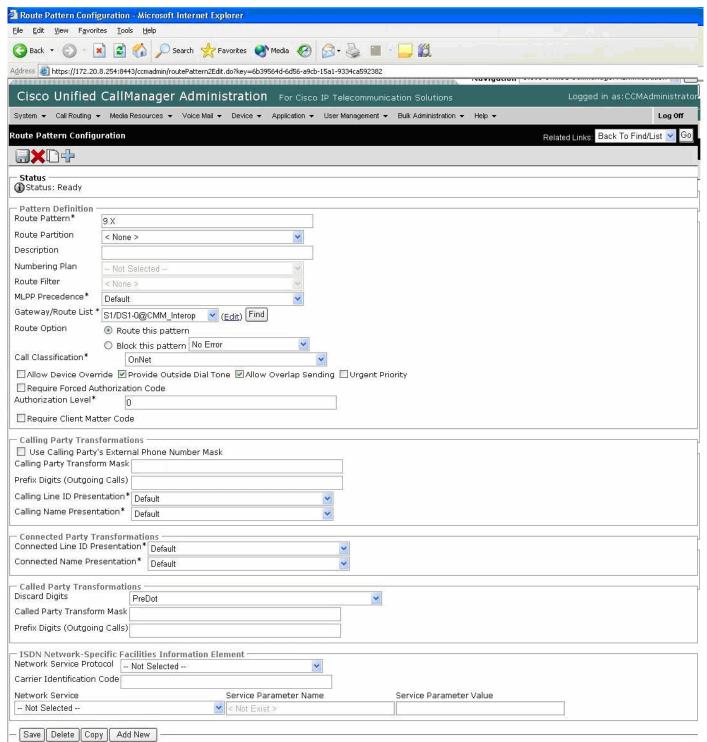




PSTN Route Pattern Configuration

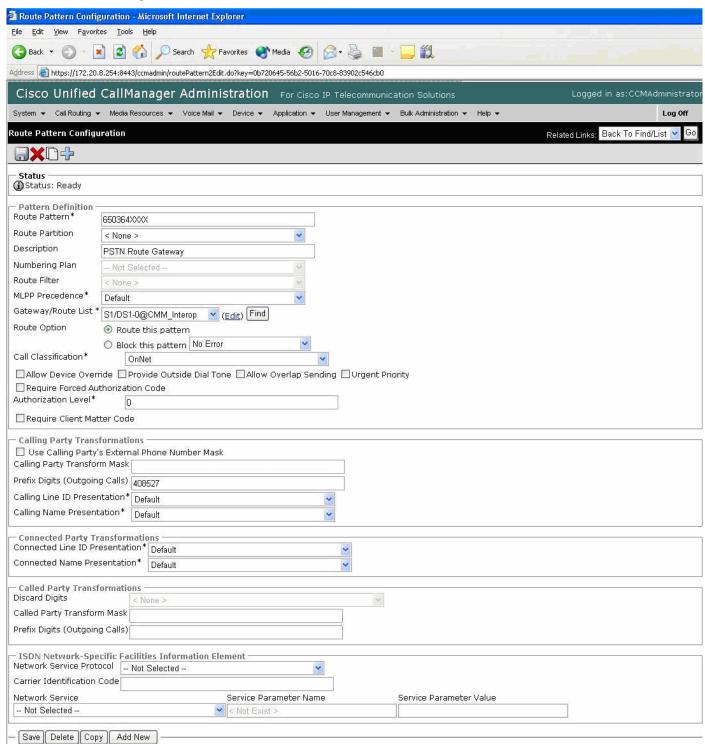




Translation Pattern for Incoming Calls

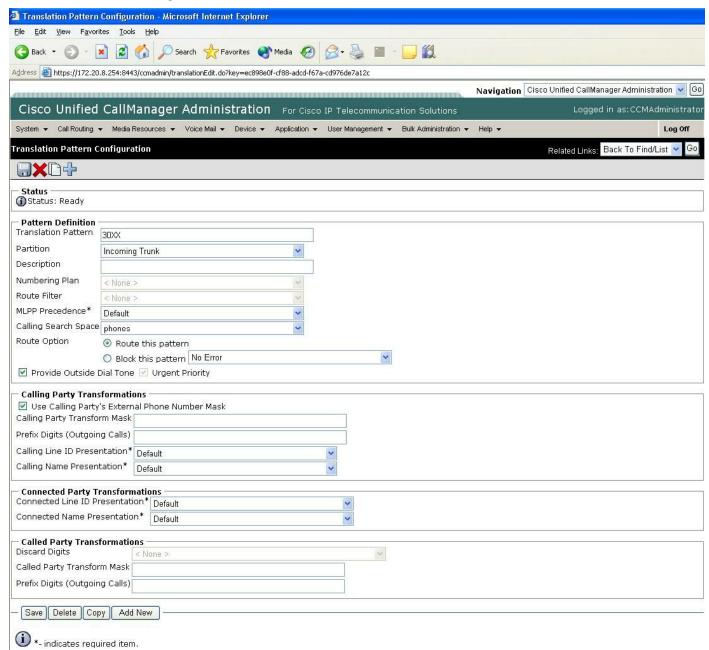




CLIR Route Pattern Configuration

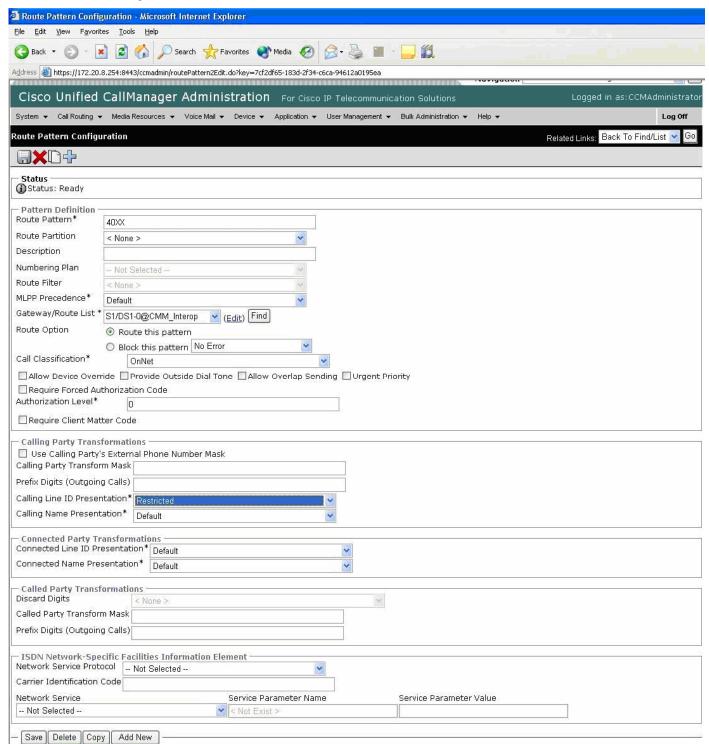




CNIR Route Pattern Configuration

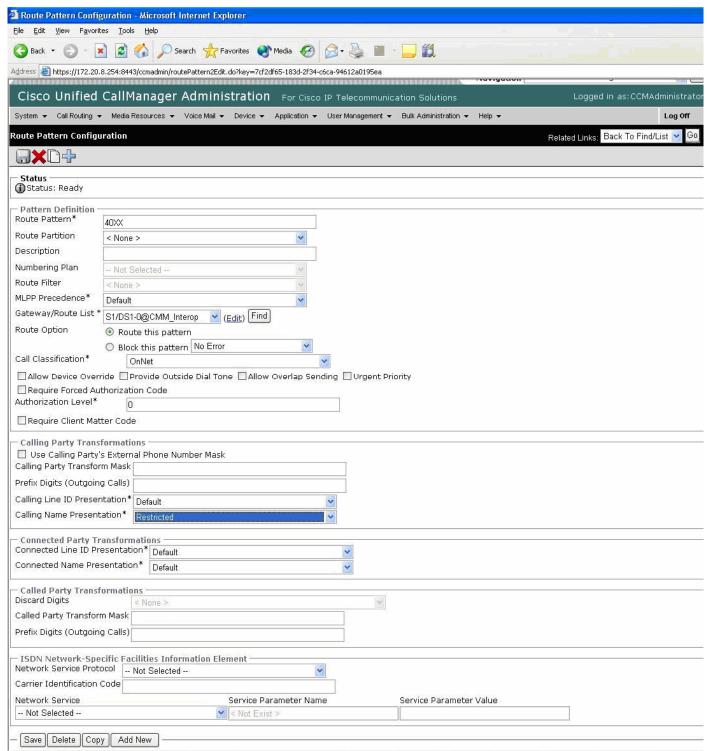




COLR Translation Pattern Configuration

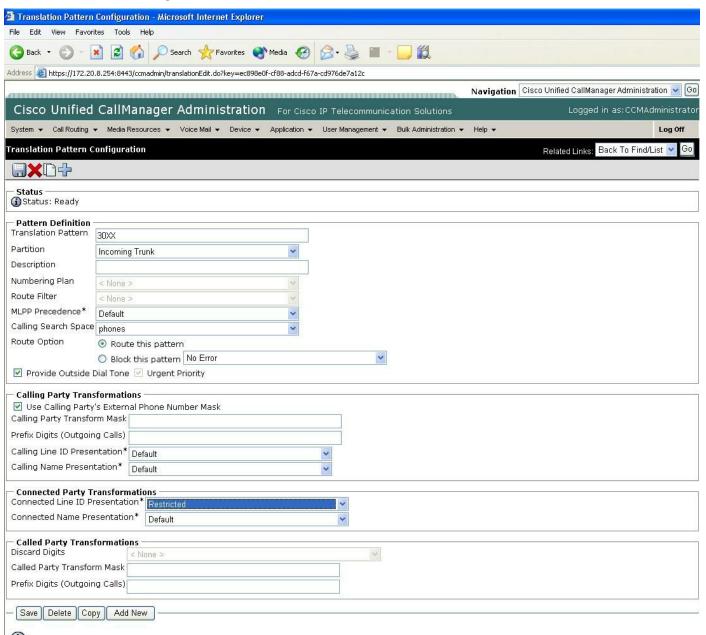




CONR Route Pattern Configuration

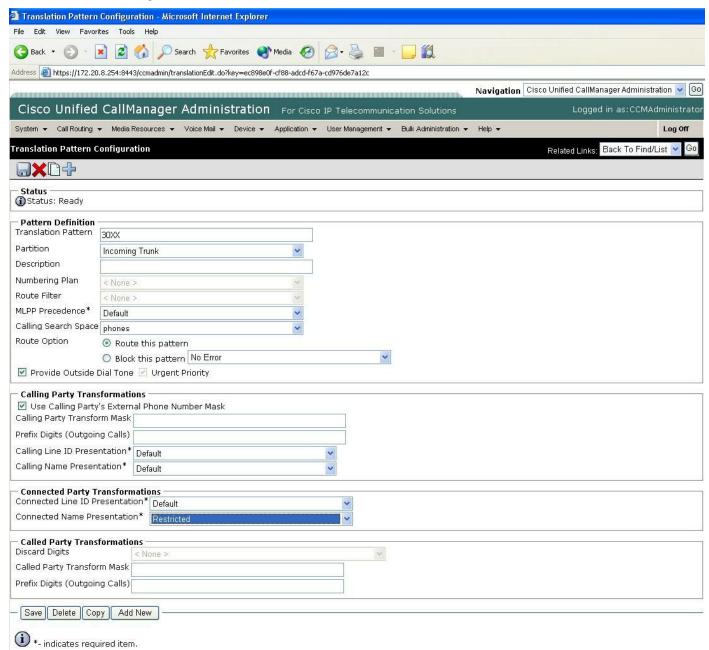





CallBack Service Parameters

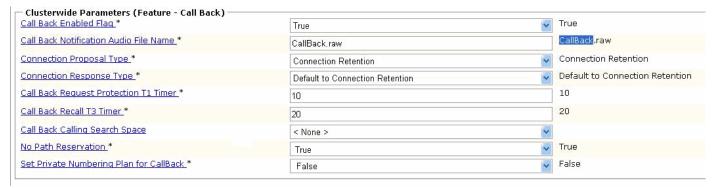


CallBack Softkey Configuration

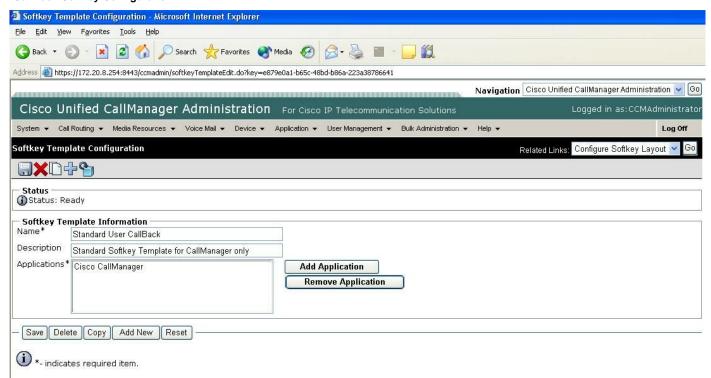



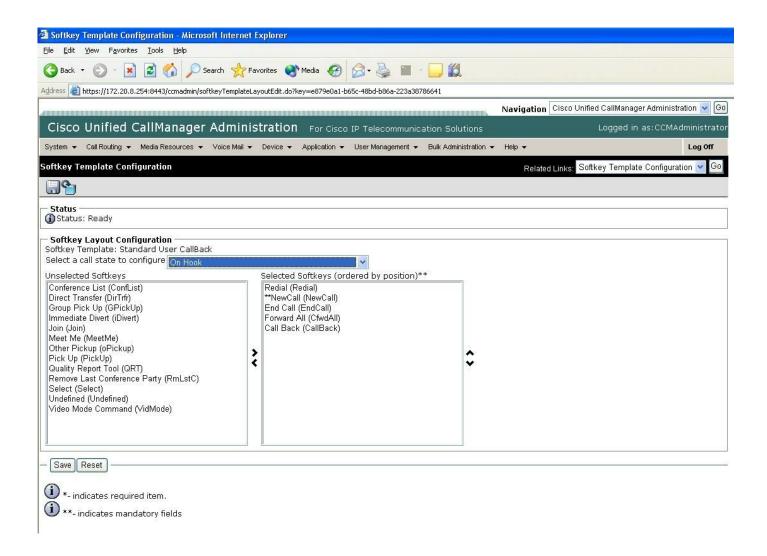



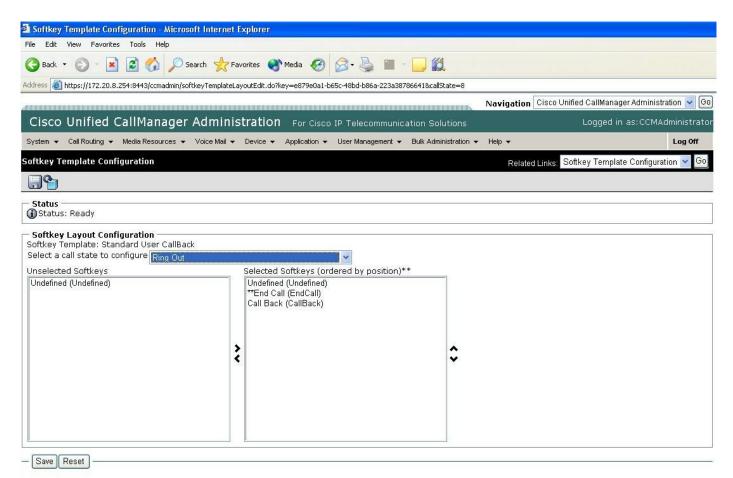


*- indicates required item.

1 **- indicates mandatory fields




Path Replacement Service Parameter

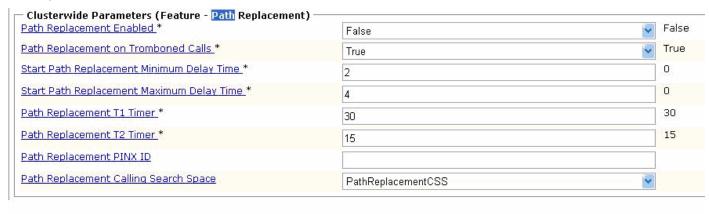

MWI lamp On/Off Configuration


Note: Not Applicable. Standard QSIG SS-MWI is not supported on NEC IPX2400 R15

Forward by Reroute Service Parameter

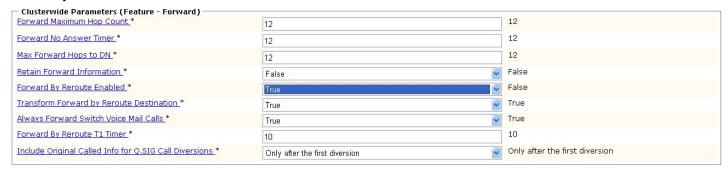



IP phone Configuration (SCCP)

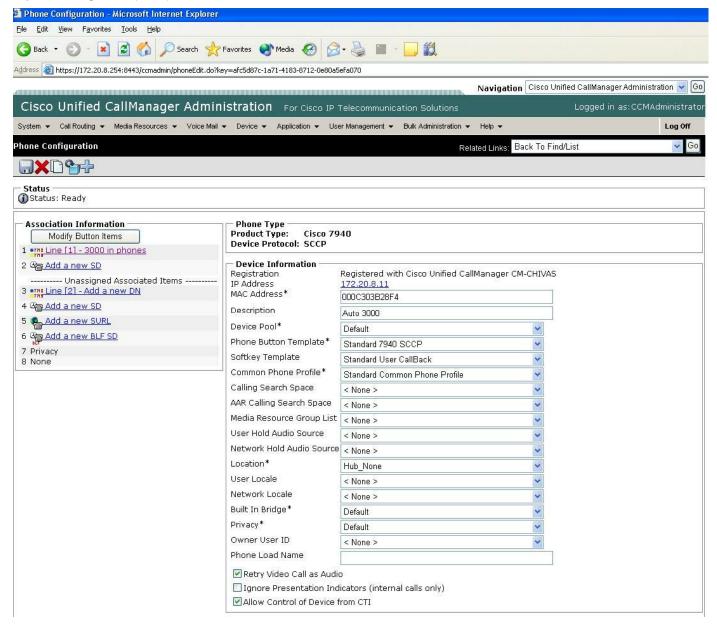



Protocol Specific Information			
Packet Capture Mode*	None	~	
Packet Capture Duration	0		
Presence Group*	Standard Presence group	~	
SCCP Phone Security Profile*	Standard SCCP Profile for Auto Registration	~	
SUBSCRIBE Calling Search Space	< None >	~	
Unattended Port	T.		
Require DTMF Reception			
RFC2833 Disabled			
Information Directory Messages Services Authentication Server Proxy Server Idle Idle Timer (seconds)	nation (Leave blank to use default)		
Extension Information Enable Extension	n Mobility		
Log Out Profile Not Selected			
Login in User ID < None >			
Log in Time < None > Log out Time < None >			




	ding Operation	
Authentication String		
Generate String		
Operation Completes By 2006	: 5 : 13 : 12 (YYYY:MM:DD:HH)	
Certificate Operation Status: None		
MLPP Information		
MLPP Domain < None >	~	
MLPP Indication* Default	~	
MLPP Preemption* Default	~	
Secure Shell Information		
Secure Shell User		
Secure Shell Password		
Product Specific Configuration Lay	out —	
	?	
Disable Speakerphone		
Disable Speakerphone and Heads PC Port * Fnabled	et	
Lilabled	<u> </u>	
Settings Access* Enabled	<u>~</u>	
Gratuitous ARP* Enabled	~	
PC Voice VLAN Access* Enabled	~	
Video Capabilities* Disabled	<u>~</u>	
Auto Line Select* Disabled	~	
Web Access* Enabled		

*- indicates required item.

**- Device reset is not required for changes to Packet Capture Mode and Packet Capture Duration.



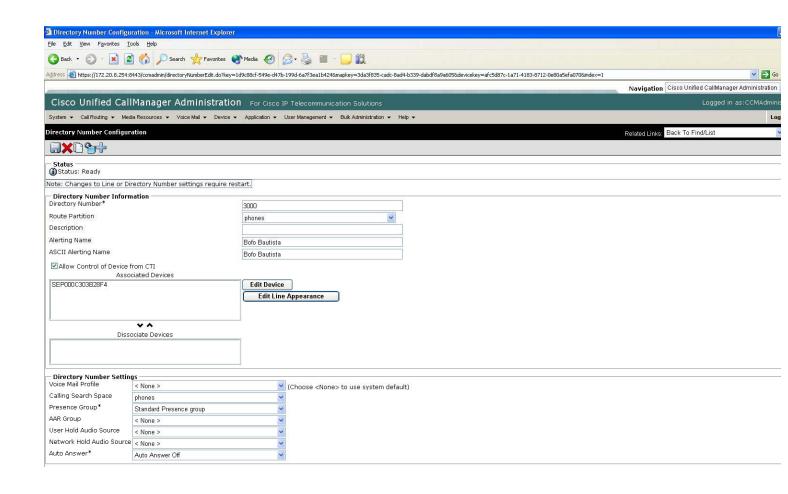




Call Forward and Call Pick	ın Settinas			
200	Voice Mail Destination	Calling Search Space		
Forward All	□ or	phones	~	
Secondary Calling Search Spa	ce for Forward All	< None >	Find	
Forward Busy Internal	or or	phones	~	
Forward Busy External	or	phones	~	
Forward No Answer Internal	or or	phones	~	
Forward No Answer External	or	phones	~	
Forward No Coverage Interna	or or	< None >	₩	
Forward No Coverage Extern	al 🗆 or	< None >	~	
Forward on CTI Failure	or or	< None >	~	
No Answer Ring Duration (see	onds)			
Call Pickup Group	< None >	~		
─ MLPP Alternate Party Setti	nas			
Target (Destination)				
MLPP Calling Search Space	< None >	~		
MLPP No Answer Ring Duratio	n (seconds)			
Line 1 on Device SEP000C	30383854			
Display (Internal Caller Re	fo Bautista	Display text for a line appe	earance is intended for displaying t	text such as a name instead of a directory number for internal calls. If you specify a number, the perso
		ne proper identity of the caller.		, , , , , , , , , , , , , , , , , , , ,
Caller ID)	fo Bautista			
Line Text Label Bo	fo Bautista			
ASCII Line Text Label Bo	fo Bautista			
External Phone Number Mask				
The state of the s	se System Policy	~		
Ring Setting (Phone Idle)*	se System Default	Y		
Ring Setting (Phone Us Active)	se System Default	Applies to this line when any	line on the phone has a call in pro	ogress.
─ Multiple Call/Call Waiting S	Cottings on Douise SERGO	2020202054		
Note:The range to select the	Max Number of calls is: 1-2	00		
Maximum Number of Calls*		4		
Busy Trigger*		2	(Less than or equal to Max.	Calls)
Forwarded Call Information	n Display on Device SEPO(JOC303B28F4		
☑ Caller Name				
Caller Number				
Redirected Number				
☑ Dialed Number				
- Save Delete Copy Rese	t Add New			
(i) *- indicates required item				
- indicaces required item				




IP phone Configuration (SIP)

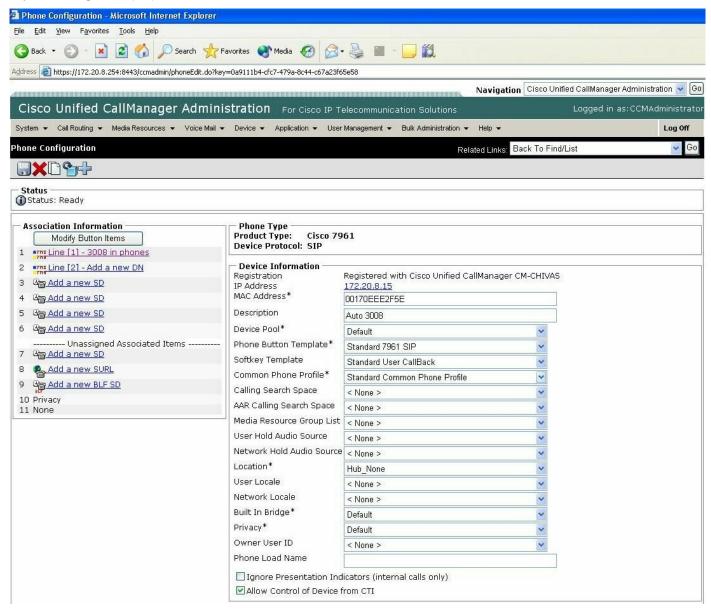



Protocol Specific Information - Packet Capture Mode*	Ni		
Packet Capture Duration	None		
	0		
Presence Group*	Standard Presence group	~	
SIP Dial Rules	< None >	~	
MTP Preferred Originating Codec*	711ulaw	~	
SIP Phone Security Profile*	Standard SIP Profile for Auto Registration	~	
Rerouting Calling Search Space	< None >	~	
SUBSCRIBE Calling Search Space	< None >	~	
SIP Profile*	Standard SIP Profile	~	
Digest User	< None >	~	
Media Termination Point Requi	red		
Unattended Port			
Require DTMF Reception			
— External Data Locations Inform	nation (Leave blank to use default)		
Information	addon (Leave Blank to use default)		
Directory			
Messages			
Services			
Authentication Server			
Proxy Server			
Idle			
Idle Timer (seconds)			
			_
Extension Information Enable Extension	Mobility		
Log Out Profile Not Selected		×	
Login in User ID < None >			
Log in Time < None >			
Log out Time < None >			
Certification Authority Proxy F			-
	Pending Operation	~	
Authentication String			
Generate String			
Operation Completes By 2008	5 : 5 : 13 : 12 (YYYY:MM:DI	о:нн)	
Certificate Operation Status: None		11/1-18/5	



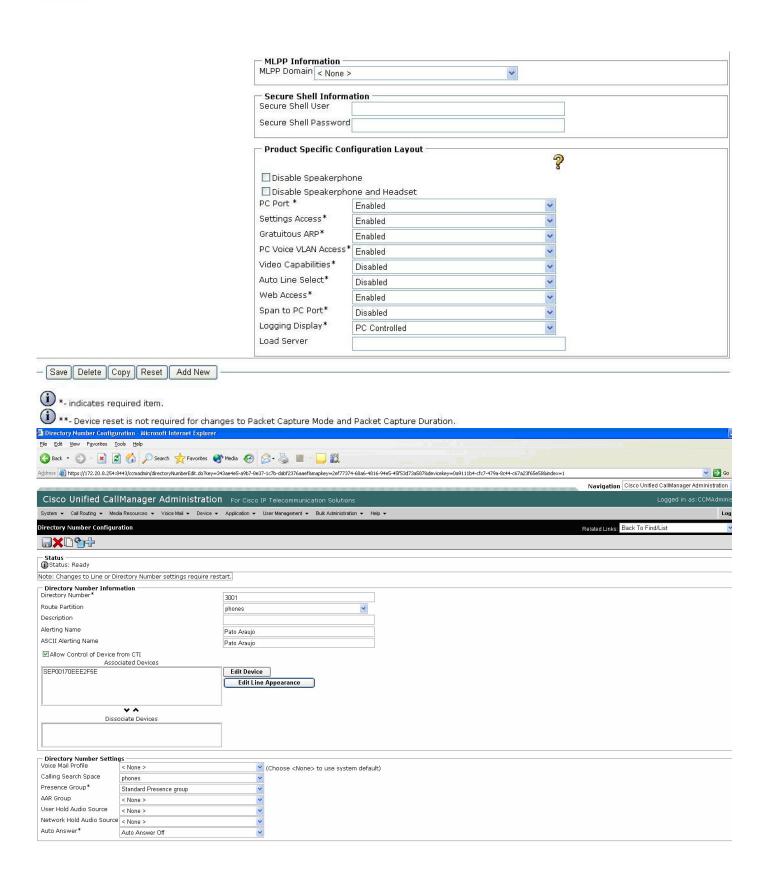



Call Forward and Call P	lations Cambridge			
Call Forward and Call P	Voice Mail Destination	Calling Search Space		
Forward All	or or	phones	~	
Secondary Calling Search	Space for Forward All	< None >	~	Find
Forward Busy Internal	or or	phones	~	
Forward Busy External	or or	phones	~	
Forward No Answer Inter	nal 🔲 or	phones	~	
Forward No Answer Exter	nal or	phones	~	
Forward No Coverage Int	ernal or	< None >	~	
Forward No Coverage Ext	ernal or	< None >	~	
Forward on CTI Failure	or or	< None >	~	
No Answer Ring Duration	(seconds)			
Call Pickup Group	< None >	~		
MLPP Alternate Party S	ottings			
Target (Destination)	etungs			
MLPP Calling Search Spac	< None >	V		
MLPP No Answer Ring Dur	ation (seconds)	Account		
Line 1 on Device SEPO	1170EFE2E5E			
Display (Internal Caller	Pato Araujo	Display text for a line appea	erance is intended for disn	laying text such as a name instead of a directory number for internal calls. If you specify a number, the per
ID)	receiving a call may not see the		arante is interioral for disp	aying concluded a removing code of a anoscory number for incornar canonal for good speciary a number of one per
ASCII Display (Internal Caller ID)	Pato Araujo			
Line Text Label	Pato Araujo			
ASCII Line Text Label	Pato Araujo			
External Phone Number Mask				
Message Waiting Lamp Policy*	Use System Policy	~		
Ring Setting (Phone Idle)	Ring	<u> </u>		
Ring Setting (Phone Active)	Use System Default	Applies to this line when any li	ine on the phone has a ca	ll in progress.
Multiple Call/Call Waiti	ng Settings on Device SEP0017	0EEE2F5E		
Note:The range to select Maximum Number of Calls	the Max Number of calls is: 1-200			
10/ 1/2/01		4		
Busy Trigger*		2	(Less than or equal t	o Max. Calls)
Forwarded Call Informa	ition Display on Device SEP001	70EEE2F5E		
☑ Caller Name				
☑ Caller Number				
Redirected Number				
☑ Dialed Number				
- Save Delete Copy F	Reset Add New			
i *- indicates required	tem.			



Cisco CMM-T1 Configuration

no ip domain lookup

```
CMM_Interop# show version
Cisco IOS Software, Cat6K-lc Software (wscmm-IPVOICE-M), Version 12.4(5a), RELEA
SE SOFTWARE (fc3)
Technical Support: http://www.cisco.com/techsupport
Copyright (c) 1986-2006 by Cisco Systems, Inc.
Compiled Sat 14-Jan-06 04:52 by alnguyen
ROM: System Bootstrap, Version 12.2(1r)T2, RELEASE SOFTWARE (fc1)
CMM_Interop uptime is 2 weeks, 22 hours, 21 minutes
System returned to ROM by reload
System image file is "bootflash:wscmm-ipvoice-mz.124-5a.bin"
cisco WS-SVC-CMM Cat6k Voice Linecard (R7000) processor (revision 0xFF) with 196
608K/65536K bytes of memory.
Processor board ID SAD0825032A
R7000 CPU at 400MHz, Implementation 39, Rev 3.3, 256KB L2 Cache
Last reset from power-on
1 FastEthernet interface
1 Gigabit Ethernet interface
93 Serial interfaces
6 Channelized T1/PRI ports
32768K bytes of processor board bootflash (Read/Write)
Configuration register is 0x2
CMM_Interop#
CMM_Interop#sh run
Building Configuration...
Current Configuration: 2246 bytes
version 12.4
service timestamps debug datetime msec
service timestamps log datetime msec
no service password-encryption
hostname CMM_Interop
boot-start-marker
boot-end-marker
enable password cisco
no aaa new-model
resource policy
mmi polling-interval 60
no mmi auto-Configurationure
no mmi pvc
mmi snmp-timeout 180
```



```
ip host CM-CHIVAS 172.20.8.254
isdn switch-type primary-qsig
!
controller T1 1/0
pri-group timeslots 1-24 service mgcp
controller T1 1/1
pri-group timeslots 1-24 service mgcp
controller T1 1/2
controller T1 1/3
controller T1 1/4
controller T1 1/5
interface GigabitEthernet1/0
ip address 172.20.8.29 255.255.255.0
no ip proxy-arp
no negotiation auto
no keepalive
interface Serial 1/0:23
no ip address
encapsulation hdlc
no logging event link-status
isdn switch-type primary-qsig
isdn incoming-voice voice
isdn bind-13 ccm-manager
no cdp enable
interface Serial 1/1:23
no ip address
encapsulation hdlc
no logging event link-status
isdn switch-type primary-qsig
isdn protocol-emulate network
isdn incoming-voice voice
isdn T310 120000
isdn bind-13 ccm-manager
no cdp enable
ip default-gateway 172.20.8.1
ip route 0.0.0.0 0.0.0.0 172.20.8.1
no ip http server
control-plane
!
!
voice-port 1/0:23
compand-type u-law
```



```
voice-port 1/1:23
ccm-manager mgcp
ccm-manager music-on-hold
ccm-manager Configuration server CM-CHIVAS
ccm-manager Configuration
!
mgcp
mgcp call-agent CM-CHIVAS 2427 service-type mgcp version 0.1
mgcp dtmf-relay voip codec all mode out-of-band
mgcp rtp unreachable timeout 1000 action notify
mgcp modem passthrough voip mode nse
mgcp package-capability rtp-package
no mgcp package-capability res-package
mgcp package-capability sst-package
mgcp package-capability pre-package
no mgcp timer receive-rtcp
mgcp sdp simple
mgcp fax t38 inhibit
mgcp rtp payload-type g726r16 static
mgcp profile default
line con 0
password cisco
line vty 04
password cisco
login
!
!
End
```

Acronyms

Acronym	Definitions
ANF-PR	Additional Network Feature Path Replacement
AOC	Advice-of-charge. Information element is sent with the connection setup information for incoming Euro-ISDN connections. The AOC IE is used for call charge calculation.
ССМ	Cisco Unified CallManager
CCBS	Call Completion to Busy Subscriber
CCNR	Call Completion on No Reply
CFB	Call Forwarding on Busy
CFNR	Call Forwarding No Reply
CFU	Call Forwarding Unconditional
CLIP	Calling Line (Number) Identification Presentation
CLIR	Calling Line (Number) Identification Restriction



CMM	Communication Media Module (CMM) is a Cisco Catalyst [®] 6500 Series and Cisco 7600 Series line card that provides flexible and high-density T1/E1 gateways
CNIP	Calling Name Identification Presentation
CNIR	Calling Name Identification Restriction
COLP	Connected Line (Number) Identification Presentation
COLR	Connected Line (Number) Identification Restriction
CONP	Connected Name Identification Presentation
CONR	Connected Name Identification Restriction
CT	Call Transfer
MWI	Message Waiting Indicator
PSTN	Public Switched Telephone Network



Important Information

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.





Corporate Headquarters

Cisco Systems, Inc. 170 West Tasman Drive San Jose, CA 95134-1706 USA

www.cisco.com

Tel: 408 526-4000 800 553-NETS (6387)

Fax: 408 526-4100

European Headquarters

Cisco Systems International

BV

Haarlerbergpark Haarlerbergweg 13-19 1101 CH Amsterdam The Netherlands www-europe.cisco.com

Tel: 31 0 20 357 1000 Fax: 31 0 20 357 1100

Americas Headquarters

Cisco Systems, Inc. 170 West Tasman Drive San Jose, CA 95134-1706

USA

www.cisco.com Tel: 408 526-7660 Fax: 408 527-0883

Asia Pacific Headquarters

Cisco Systems, Inc. Capital Tower 168 Robinson Road #22-01 to #29-01 Singapore 068912 www.cisco.com Tel: +65 317 7777

Fax: +65 317 7799

357 1100

Cisco Systems has more than 200 offices in the following countries and regions. Addresses, phone numbers, and fax numbers are listed on the Cisco Web site at www.cisco.com/go/offices.

Argentina • Australia • Austria • Belgium • Brazil • Bulgaria • Canada • Chile • China PRC • Colombia • Costa Rica • Croatia • Czech Republic • Denmark • Dubai, UAE • Finland • France • Germany • Greece • Hong Kong SAR • Hungary • India • Indonesia • Ireland • Israel • Italy • Japan • Korea • Luxembourg • Malaysia • Mexico • The Netherlands • New Zealand • Norway • Peru • Philippines • Poland • Portugal • Puerto Rico • Romania • Russia • Saudi Arabia • Scotland • Singapore • Slovakia • Slovenia • South Africa • Spain • Sweden • Switzerland • Taiwan • Thailand • Turkey Ukraine • United Kingdom • United States • Venezuela • Vietnam • Zimbabwe

CCSP, CCVP, the Cisco Square Bridge logo, Follow Me Browsing, and StackWise are trademarks of Cisco Systems, Inc.; Changing the Way We Work, Live, Play, and Learn, and iQuick Study are service marks of Cisco Systems, Inc.; and Access Registrar, Aironet, BPX, Catalyst, CCDA, CCDP, CCIE, CCIP, CCNA, CCNP, Cisco, the Cisco Certified Internetwork Expert logo, Cisco IOS, Cisco Press, Cisco Systems, Cisco Systems Capital, the Cisco Systems logo, Cisco Unity, Enterprise/Solver, EtherChannel, EtherFast, EtherSwitch, Fast Step, FormShare, GigaDrive, GigaStack, HomeLink, Internet Quotient, IOS, IP/TV, iQ Expertise, the iQ logo, iQ Net Readiness Scorecard, LightStream, Linksys, MeetingPlace, MGX, the Networkers logo, Networking Academy, Network Registrar, Packet, PIX, Post-Routing, Pre-Routing, ProConnect, RateMUX, ScriptShare, SlideCast, SMARTnet, The Fastest Way to Increase Your Internet Quotient, and TransPath are registered trademarks of Cisco Systems, Inc. and/or its affiliates in the United States and certain other countries.

All other trademarks mentioned in this document or Website are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (0601R)

Printed in the USA