


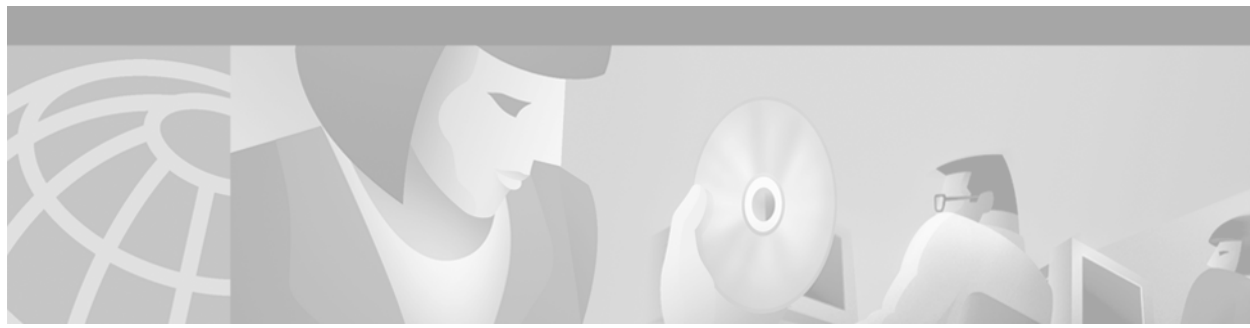

Lock-and-Key Commands

This chapter describes lock-and-key commands. Lock-and-key security is a traffic filtering security feature that uses dynamic access lists. Lock-and-key is available for IP traffic only.

To find complete descriptions of other commands used when configuring lock-and-key, refer to the *Cisco IOS Command Reference Master Index* or search online.

For lock-and-key configuration information, refer to the “Configuring Lock-and-Key Security (Dynamic Access Lists)” chapter in the *Cisco IOS Security Configuration Guide*.

access-enable

To enable the router to create a temporary access list entry in a dynamic access list, use the **access-enable** EXEC command.

access-enable [**host**] [**timeout** *minutes*]

Syntax Description	host (Optional) Tells the software to enable access only for the host from which the Telnet session originated. If not specified, the software allows all hosts on the defined network to gain access. The dynamic access list contains the network mask to use for enabling the new network.
	timeout <i>minutes</i> (Optional) Specifies an idle timeout for the temporary access list entry. If the access list entry is not accessed within this period, it is automatically deleted and requires the user to authenticate again. The default is for the entries to remain permanently. We recommend that this value equal the idle timeout set for the WAN connection.

Defaults No default behavior or values.

Command Modes EXEC

Command History	<table> <tr> <th data-bbox="342 1089 568 1125">Release</th><th data-bbox="630 1089 1479 1125">Modification</th></tr> <tr> <td data-bbox="342 1125 568 1169">11.1</td><td data-bbox="630 1125 1479 1169">This command was introduced.</td></tr> </table>	Release	Modification	11.1	This command was introduced.
Release	Modification				
11.1	This command was introduced.				

Usage Guidelines This command enables the lock-and-key access feature.

You should always define either an idle timeout (with the **timeout** keyword in this command) or an absolute timeout (with the **timeout** keyword in the **access-list** command). Otherwise, the temporary access list entry will remain, even after the user terminates the session.

Use the **autocommand** command with the **access-enable** command to cause the **access-enable** command to execute when a user opens a Telnet session into the router.

Examples The following example causes the software to create a temporary access list entry and tells the software to enable access only for the host from which the Telnet session originated. If the access list entry is not accessed within 2 minutes, it is deleted.

```
autocommand access-enable host timeout 2
```

Related Commands

Command	Description
access-list (IP extended)	Defines an extended IP access list.
autocommand	Configures the Cisco IOS software to automatically execute a command when a user connects to a particular line.
show ip accounting	Displays the active accounting or checkpointed database or displays access list violations.

access-list dynamic-extend

To allow the absolute timer of the dynamic access control list (ACL) to be extended an additional six minutes, use the **access-list dynamic-extend** command in global configuration mode. To disable this functionality, use the **no** form of this command.

access-list dynamic-extend

no access-list dynamic-extend

Syntax Description This command has no arguments or keywords.

Defaults 6 minutes

Command Modes Global configuration

Command History	Release	Modification
	12.1(5)T	This command was introduced.

Usage Guidelines When you try to create a Telnet session to the router to re-authenticate yourself by using the lock-and-key function, use the **access-list dynamic-extend** command to extend the absolute timer of the dynamic ACL by six minutes.

The router must already be configured with the lock-and-key feature, and you must configure the extension *before* the ACL expires.

Examples The following example shows how to extend the absolute timer of the dynamic ACL:

```
! The router is configured with the lock-and-key feature as follows
access-list 132 dynamic tactik timeout 6 permit ip any any
! The absolute timer will extended another six minutes.
access-list dynamic-extend
```

access-template

To manually place a temporary access list entry on a router to which you are connected, use the **access-template EXEC** command.

access-template [*access-list-number* | *name*] [*dynamic-name*] [*source*] [*destination*] [**timeout** *minutes*]

Syntax Description

<i>access-list-number</i>	(Optional) Number of the dynamic access list.
<i>name</i>	(Optional) Name of an IP access list. The name cannot contain a space or quotation mark, and must begin with an alphabetic character to avoid ambiguity with numbered access lists.
<i>dynamic-name</i>	(Optional) Name of a dynamic access list.
<i>source</i>	(Optional) Source address in a dynamic access list. The keywords host and any are allowed. All other attributes are inherited from the original access-list entry.
<i>destination</i>	(Optional) Destination address in a dynamic access list. The keywords host and any are allowed. All other attributes are inherited from the original access-list entry.
timeout <i>minutes</i>	(Optional) Specifies a maximum time limit for each entry within this dynamic list. This is an absolute time, from creation, that an entry can reside in the list. The default is an infinite time limit and allows an entry to remain permanently.

Defaults

No default behavior or values.

Command Modes

EXEC

Command History

Release	Modification
11.1	This command was introduced.

Usage Guidelines

This command provides a way to enable the lock-and-key access feature.

You should always define either an idle timeout (with the **timeout** keyword in this command) or an absolute timeout (with the **timeout** keyword in the **access-list** command). Otherwise, the dynamic access list will remain, even after the user has terminated the session.

Examples

The following example enables IP access on incoming packets in which the source address is 172.29.1.129 and the destination address is 192.168.52.12. All other source and destination pairs are discarded.

```
access-template 101 payroll host 172.29.1.129 host 192.168.52.12 timeout 2
```

Related Commands	Command	Description
	access-list (IP extended)	Defines an extended IP access list.
	autocommand	Configures the Cisco IOS software to automatically execute a command when a user connects to a particular line.
	clear access-template	Clears a temporary access list entry from a dynamic access list manually.
	show ip accounting	Displays the active accounting or checkpointed database or displays access list violations.

clear access-template

To manually clear a temporary access list entry from a dynamic access list, use the **clear access-template EXEC** command.

clear access-template [*access-list-number* | *name*] [*dynamic-name*] [*source*] [*destination*]

Syntax Description

<i>access-list-number</i>	(Optional) Number of the dynamic access list from which the entry is to be deleted.
<i>name</i>	(Optional) Name of an IP access list from which the entry is to be deleted. The name cannot contain a space or quotation mark, and must begin with an alphabetic character to avoid ambiguity with numbered access lists.
<i>dynamic-name</i>	(Optional) Name of the dynamic access list from which the entry is to be deleted.
<i>source</i>	(Optional) Source address in a temporary access list entry to be deleted.
<i>destination</i>	(Optional) Destination address in a temporary access list entry to be deleted.

Command Modes

EXEC

Command History

Release	Modification
11.1	This command was introduced.

Usage Guidelines

This command is related to the lock-and-key access feature. It clears any temporary access list entries that match the parameters you define.

Examples

The following example clears any temporary access list entries with a source of 172.20.1.12 from the dynamic access list named vendor:

```
clear access-template vendor 172.20.1.12
```

Related Commands

Command	Description
access-list (IP extended)	Defines an extended IP access list.
access-template	Places a temporary access list entry on a router to which you are connected manually.
show ip accounting	Displays the active accounting or checkpointed database or displays access list violations.

