

## Configuring UDLD

This chapter describes how to configure the UniDirectional Link Detection (UDLD) and Unidirectional Ethernet on the Catalyst 4500 series switch. It also provides guidelines, procedures, and configuration examples.

This chapter includes the following major sections:

- [Overview of UDLD, page 23-1](#)
- [Default UDLD Configuration, page 23-2](#)
- [Configuring UDLD on the Switch, page 23-3](#)

**Note**

For complete syntax and usage information for the switch commands used in this chapter, refer to the *Catalyst 4500 Series Switch Cisco IOS Command Reference* and related publications at this location:

<http://www.cisco.com/univercd/cc/td/doc/product/software/ios124/124cr/index.htm>.

## Overview of UDLD

UDLD is a layer 2 protocol that enables devices connected through fiber-optic or twisted-pair Ethernet cables. It monitors a physical connection (such as wrong cabling) to detect unidirectional links to avoid spanning-tree topology loops or silent drop traffic.

All connected devices must support UDLD for the protocol to successfully identify the unidirectional links. When UDLD detects a unidirectional link, it can administratively shut down the affected port and send you a warning message.

## Modes of Operation

UDLD supports two operation modes: normal and aggressive.

**normal** A UDLD-capable port A periodically sends a UDLD probe to port B. If port B is not UDLD capable, no unidirectional link detection occurs. If both devices are UDLD capable and bi-directional connectivity exists, probe messages travel in both direction at a rate of 1 every few seconds (through the **UDLD message time interval** global configuration command). Upon receiving the probe, the UDLD protocol attempts to synchronize the devices by sending echo messages to the peer port and waiting for answer during the detection window. If the unidirectional traffic is detected when the port link is still up (port B no longer sends traffic to port A), port B enters

## ■ Default UDLD Configuration

errdisable mode. Port A is marked Undetermined but does not enter errdisable mode. It continues to operate under its current STP status because this mode is informational only; it is potentially less disruptive although it does not prevent STP loops.

**aggressive** If port A loses its neighbor connectivity, it actively tries to re-establish the relationship by sending a probe to port B. If port B does not respond, it is considered unidirectional and port A will enter errdisable state to avoid silent drop traffic.


UDLD aggressive mode can interoperate with UDLD normal mode. When the unidirectional condition is detected, only the aggressive mode link shuts down.

By default,

- UDLD is locally disabled on copper LAN ports to avoid sending unnecessary control traffic (BPDU control packets) on this type of media; this protocol is most often used for access ports.
- UDLD is enabled on a fiber port if global UDLD is activated.

[Figure 23-1](#) illustrates a unidirectional link condition. Each switch can send packets to a neighbor switch but cannot receive packets from the switch it is sending packets to. UDLD detects and disables these one-way connections.

**Figure 23-1 Unidirectional Link**

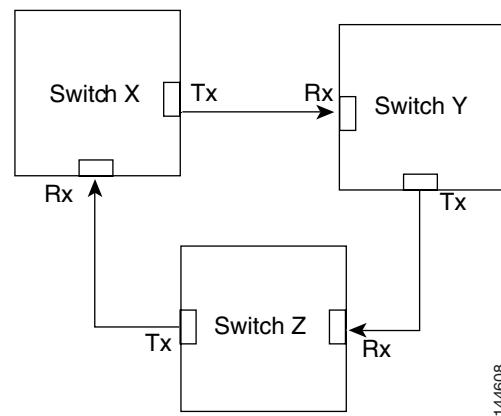

144608

## Default UDLD Configuration

[Table 23-1](#) shows the UDLD default configuration.

**Table 23-1 UDLD Default Configuration**

Feature	Default Status
UDLD global enable state	Globally disabled
UDLD per-interface enable state for fiber-optic media	Enabled on all Ethernet fiber-optic interfaces
UDLD per-interface enable state for twisted-pair (copper) media	Disabled on all Ethernet 10/100 and 1000BaseTX interfaces

# Configuring UDLD on the Switch

The following sections describe how to configure UDLD:

- [Enabling UDLD Globally, page 23-3](#)
- [Enabling UDLD on Individual Interfaces, page 23-4](#)
- [Disabling UDLD on Non-Fiber-Optic Interfaces, page 23-4](#)
- [Configuring the UDLD Probe Message Interval, page 23-4](#)
- [Resetting Disabled LAN Interfaces, page 23-5](#)

## Enabling UDLD Globally

To enable UDLD in the aggressive or normal mode and to set the configurable message timer on all fiber-optic interfaces on the switch, follow these steps:

	<b>Command</b>	<b>Purpose</b>
<b>Step 1</b>	<code>configure terminal</code>	Enters the global configuration mode.
<b>Step 2</b>	<code>udld {aggressive   enable   message time message-timer-interval}</code>	<p>Specifies the UDLD mode of operation:</p> <ul style="list-style-type: none"> <li>• <b>aggressive</b> Enables UDLD in aggressive mode on all fiber-optic interfaces.</li> <li>• <b>enable</b> Enables UDLD in normal mode on all fiber-optic interfaces on the switch. UDLD is disabled by default.</li> </ul> <p>An individual interface configuration overrides the setting of the <b>udld enable</b> global configuration command.</p> <p>For more information about aggressive and normal modes, see the <a href="#">Modes of Operation, page 23-1</a> section.</p> <ul style="list-style-type: none"> <li>• <b>message time message-timer-interval</b>-Configures the period of time between UDLD probe messages on ports that are in the advertisement phase and are determined to be bidirectional. The range is from 1 to 90 seconds.</li> </ul> <p><b>Note</b> Prior to Cisco IOS Release 12.2(31)SGA, the timer range is 7 to 90 seconds. With Cisco IOS Release 12.2(31)SGA, the timer range is 1 to 90 seconds</p>
<b>Step 3</b>	<code>end</code>	Returns to privileged EXEC mode.
<b>Step 4</b>	<code>show udld</code>	Verifies the configuration.

## Enabling UDLD on Individual Interfaces

To enable UDLD on individual interfaces, perform this task:

	<b>Command</b>	<b>Purpose</b>
<b>Step 1</b>	<code>Switch(config-if)# udld enable</code>	Enables UDLD on a specific interface. On a fiber-optic interface, this command overrides the <b>udld enable</b> global configuration command setting.
<b>Step 2</b>	<code>Switch# show udld interface</code>	Verifies the configuration.

## Disabling UDLD on Non-Fiber-Optic Interfaces

To disable UDLD on individual non-fiber-optic interfaces, perform this task:

	<b>Command</b>	<b>Purpose</b>
<b>Step 1</b>	<code>Switch(config-if)# no udld enable</code>	Disables UDLD on a non-fiber-optic interface.  <b>Note</b> On fiber-optic interfaces, the <b>no udld enable</b> command reverts the interface configuration to the <b>udld enable</b> global configuration command setting.
<b>Step 2</b>	<code>Switch# show udld interface</code>	Verifies the configuration.

## Configuring the UDLD Probe Message Interval

To configure the time between UDLD probe messages on ports that are in advertisement mode and are currently determined to be bidirectional, perform this task:

	<b>Command</b>	<b>Purpose</b>
<b>Step 1</b>	<code>Switch(config)# udld message time interval</code>	Configures the time between UDLD probe messages on ports that are in advertisement mode and are currently determined to be bidirectional; valid values are from 1 to 90 seconds.  <b>Note</b> Prior to Cisco IOS Release 12.2(31)SGA, the time interval is 7-90 seconds. With Cisco IOS Release 12.2(31)SGA, the time interval is 1-90 second.  The <b>no udld message</b> command returns to the default value (60 seconds).
<b>Step 2</b>	<code>Switch# show udld type-slot/interface</code>	Verifies the configuration.

## Resetting Disabled LAN Interfaces

To reset all LAN ports that have been shut down by UDLD, perform this task:

Command	Purpose
Switch(config)# <b>udld reset</b>	Resets all LAN ports that have been shut down by UDLD.

**■ Configuring UDLD on the Switch**